

402HW

User Guide

## Contents

<b>1 Introduction</b> .....	<b>8</b>
Parts & Functions .....	8
Installing USIM Card/microSD Card.....	10
Handling USIM Card.....	10
Charging with AC Charger (Optional Accessory).....	11
Charging .....	12
Home Screen .....	13
Main Notification & Status Indicators.....	13
Frequently-Used Keys.....	14
Operations in Home Screen .....	14
<b>2 Text Entry</b> .....	<b>16</b>
Keyboards .....	16
10 Key Keyboard Layout .....	16
QWERTY Keyboard Layout.....	17
Japanese Syllabary Keyboard Layout.....	18
Entering Hiragana .....	18
10 Key Keyboard .....	19
QWERTY Keyboard .....	19
Japanese Syllabary Keyboard.....	19
Entering Kanji.....	19
Entering Katakana.....	20
Entering Alphabet.....	20
Entering Emoticons, Symbols, & Template Phrases.....	20
Flick Input.....	20
Pasting Cut or Copied Text.....	21
Making Text Entry Settings .....	21
<b>3 Internet Connectivity</b> .....	<b>22</b>
Connecting to a Wi-Fi Network .....	22

Connecting to a Wi-Fi Network (WPS).....	22
<b>4 Tethering Option .....</b>	<b>24</b>
About Tethering Option.....	24
Starting Up Tethering Option.....	24
How to Use Tethering Option (Japanese) .....	24
<b>5 Applications .....</b>	<b>25</b>
Applications List .....	25
Installing Applications .....	29
Erasing Application Cache.....	29
Uninstalling Applications .....	30
<b>6 Messaging .....</b>	<b>31</b>
Types of Mail .....	31
S! Mail .....	31
SMS.....	31
Gmail.....	31
Email .....	31
S! Mail Initial Setup.....	32
Folder List/Thread List.....	32
Switching between Folder List and Thread List.....	32
Folder List .....	32
Thread List.....	33
Sending S! Mail/SMS.....	33
Sending S! Mail.....	34
Sending SMS .....	34
Sending Decore Mail by S! Mail.....	35
Using a Template .....	35
Decorating S! Mail.....	35
Opening & Replying to S! Mail/SMS .....	35

Opening New S! Mail/SMS .....	35
Retrieving S! Mail/SMS Manually .....	36
Retrieving Server Mail.....	36
Replying to S! Mail/SMS .....	36
Forwarding S! Mail/SMS .....	36
<b>Managing S! Mail/SMS .....</b>	<b>37</b>
Viewing S! Mail/SMS.....	37
Folder List .....	39
S! Mail/SMS Message List.....	40
S! Mail/SMS Message Window.....	41
Backing Up S! Mail/SMS Data .....	41
Restoring S! Mail/SMS Data .....	42
Moving S! Mail/SMS Data (Export).....	42
Moving S! Mail/SMS Data (Import).....	43
<b>Operations When Creating S! Mail/SMS.....</b>	<b>44</b>
Switching to S! Mail.....	44
Switching to SMS.....	44
Attaching Files.....	44
Specify Date/Time to Send .....	44
Entering Emoji Pictograms .....	45
Previewing before Sending.....	45
Setting Priority Levels .....	45
Requesting Delivery Reports .....	45
Discarding a Message Draft .....	46
<b>S! Mail/SMS Settings.....</b>	<b>46</b>
Common Settings .....	46
Send/Receive Settings.....	47
Mail Group Settings .....	47

Number/Address Settings .....	48
Creating & Sending Gmail .....	48
Creating/Sending Gmail .....	49
Opening Received Gmail .....	49
Opening New Gmail .....	49
Opening Gmail .....	50
Managing Saved Gmail .....	50
Using Labels .....	50
Archiving Threads .....	51
Muting Threads .....	51
Deleting Threads .....	51
Searching Mail .....	52
Reporting Spam .....	52
Switching Google Accounts/Inboxes/Labels .....	52
Using Email .....	53
Setting an Account .....	53
Adding Accounts .....	53
Creating/Sending Email .....	53
Opening New Email .....	53
Opening Email .....	54
<b>7 Multimedia .....</b>	<b>55</b>
Importing Photos .....	55
Viewing Photos & Videos .....	56
Sharing Photos & Videos .....	56
Shooting Panoramas .....	56
<b>8 Useful Functions .....</b>	<b>58</b>
Using Urgent News .....	58
If Urgent News Arrives .....	58


Opening Old Urgent News .....	59
Using Google Maps .....	59
Viewing Maps of Specified Places .....	59
Using Hangouts .....	60
Using Google Search .....	60
Searching .....	61
Searching for Information by Voice (Voice Search) .....	61
Using Google Voice Search .....	61
Using Calculator .....	62
Using Calendar .....	62
Adding Events to Calendar .....	63
Checking Events .....	63
Syncing Calendar .....	63
Using Clock .....	63
Setting Alarms .....	64
Using World Clock .....	64
Using Stopwatch .....	65
Using Timer .....	65
Using YouTube .....	66
Viewing Videos .....	66
Music Files .....	66
Playing Music Files .....	66
Player Window Layout .....	67
Creating Playlists .....	68
Using Notes .....	68
Creating a Note .....	68
Viewing Notes .....	68
Recording/Playing Back Audio .....	69

Recording Audio.....	69
Playing Back Previous Audio Recordings.....	69
Using Tablet as Magnifier .....	70
<b>9 Customizing .....</b>	<b>71</b>
Changing Themes .....	71
Adding Widgets to Home Screen.....	71
Adding Home Screen Pages .....	72
Changing Notification Tones .....	72
Changing Font Sizes .....	72
Adjusting Display Brightness .....	72
<b>10 File Sharing .....</b>	<b>73</b>
Sharing Files with Wi-Fi Direct.....	73
Sharing Files with Bluetooth®.....	73
Sharing Files by Computer .....	74
<b>11 Contacts.....</b>	<b>76</b>
Adding Contacts .....	76
Syncing Contacts .....	76
Importing Contacts .....	76
Backing Up Contacts .....	77
Sharing Contacts.....	77
<b>12 Tablet Settings .....</b>	<b>78</b>
Wi-Fi Settings.....	78
Advanced Wi-Fi Settings .....	79
Bluetooth Settings .....	79
Pairing/Connecting.....	80
Sending Data .....	80
Receiving Data.....	81
Mobile Network Settings.....	81
More Settings.....	82

Data Usage Operations .....	82
Display Settings.....	83
Sound Settings.....	84
Storage Settings.....	84
Battery Settings.....	85
Location Access Settings.....	85
Security Settings .....	86
Backup & Reset.....	87
Adding Accounts.....	87
Adding a Google Account .....	88
Managing Applications.....	88
Email Settings .....	89
Suspend Button Settings.....	89
Date & Time Settings.....	89
Language & Input Settings .....	90
Accessibility Settings.....	91
About Tablet.....	91
<b>13 Troubleshooting.....</b>	<b>93</b>
<b>14 Specifications .....</b>	<b>95</b>
Tablet.....	95
<b>15 Customer Service .....</b>	<b>96</b>

# 1 Introduction

## Parts & Functions

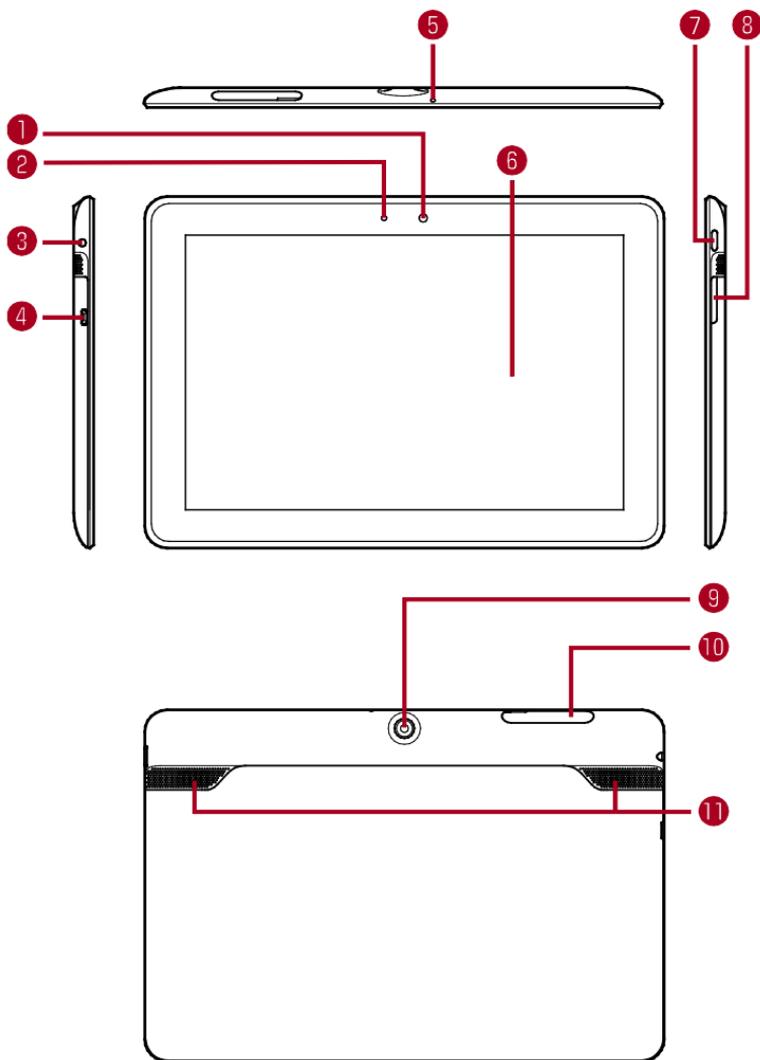


- 1 Front Camera
  - Capture your own portrait, etc.
- 2 Light Sensor
  - Detects ambient light level and adjusts Display brightness.
- 3 3.5mm Headphone Port
  - Connect headphones.
- 4 External Device Port
  - Connect Micro USB Cable.
- 5 Mic
- 6 Display (Touchscreen)
  - Touch to operate tablet.
- 7 Power Key
  - Toggle Display on/off.
  - Long-Press for power on/off.
- 8 Volume Key
  - Adjust volume.
- 9 Rear Camera
  - Capture still images and video.
- 10 Card Slot / Card Slot Cover
  - Install microSD Card/USIM Card.
- 11 Speaker
  - Ringtone, music, etc. emit here.

 **Note**

- Avoid removing USIM Card or microSD Card between powering on and until tablet is operable. May prevent correct operation.
- If tablet stops operating, no longer accepts input, or freezes, hold down Power Key for 13 seconds to force-restart tablet.

## Installing USIM Card/microSD Card

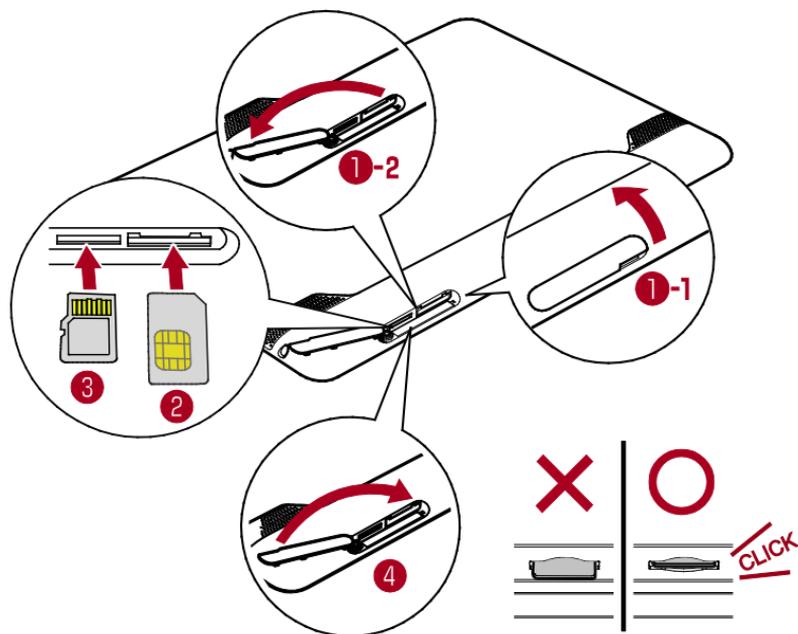

- 1 Open Card Slot Cover
- 2 Insert USIM Card gently (metal contact up) until it clicks in place
- 3 Insert microSD Card<sup>1</sup> gently (metal terminals up) until it clicks in place
- 4 Close Cover

1 Purchase separately

## Handling USIM Card

- Customer is responsible for any damage caused by inserting USIM Card in an other-brand IC card reader, etc. SoftBank Mobile Corp. is not responsible in such case.
- Always keep the IC chip (metal) clean.
- Wipe clean with a dry, soft cloth.
- Avoid applying labels. May damage USIM Card.
- See instructions included with USIM Card for handling.

- USIM Card is the property of SoftBank Mobile Corp.
- USIM is replaceable (at cost) in case of loss/damage.
- Return USIM Card to SoftBank Mobile Corp. when cancelling subscription.
- Returned USIM Cards are recycled for environmental purposes.
- Note that USIM Card specifications and performance may change without notice.
- It is recommended that you keep a separate copy of information that is stored on USIM Card. SoftBank Mobile Corp. is not responsible for damages from stored information that is lost.
- Always follow emergency procedures to suspend service if your USIM Card or tablet (USIM Card inserted) is lost/stolen. For details, contact Customer Service (p. 96).
- Always power off tablet before inserting/removing USIM Card.
- Special USIM Card required. Card is not usable on mobile phones.


## Charging with AC Charger (Optional Accessory)

AC Charger is an optional accessory. Be sure to use ZTDAD1 specified by SoftBank Mobile Corp.


The following explains how to charge tablet using ZTDAD1.

- See User Guide for AC Charger.
- Never connect Micro USB plug when tablet or AC Charger are wet.

### 1 Insert AC Charger (optional accessory) in External Device Port, and then plug in AC Charger

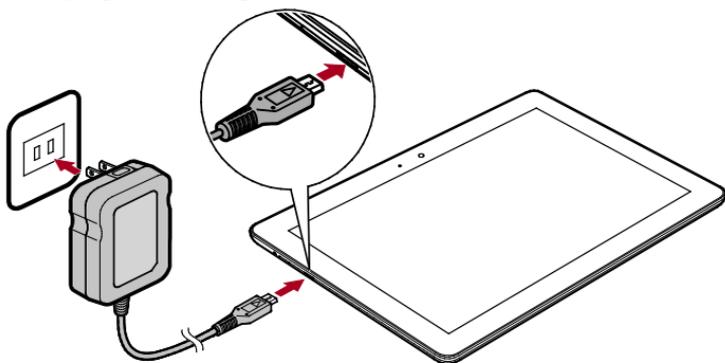

### 2 After charging, remove AC Adapter (optional accessory)

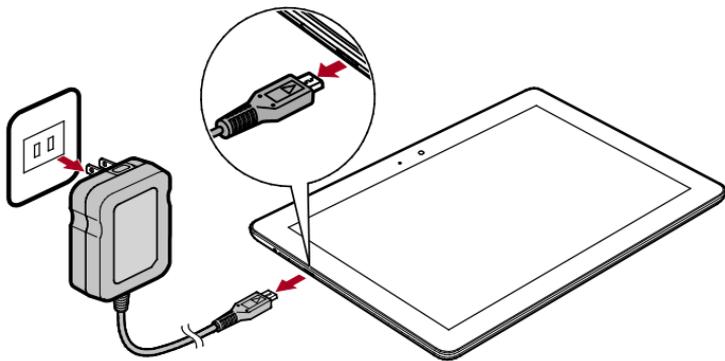

- Check charging progress on Display.

## Charging

### Charging Conditions

Low-temperature conditions affect charging performance.

Use AC Charger (optional accessory) in temperatures from 5°C to 35°C.

### Use Specified Optional Accessory

Charge using AC Charger (optional accessory) compatible with tablet. Avoid bending cable or forcing Micro USB plug. May cause damage.

### Tablet or AC Charger (Optional Accessory) Becoming Warm

Tablet or AC Charger (optional accessory) may become warm during charging, but is not a malfunction. However, becoming extremely hot may be a sign of abnormality; immediately discontinue use.


### Caution with Extended Periods of Use

Tablet may become hot with extended use or while charging, especially in high-temperature conditions. Use with caution. Extended skin contact may cause low-temperature burns.

### Display while Charging

Press Power Key while powered off during charging to turn on Display and view animated charging progress. After charging,  appears.

# Home Screen

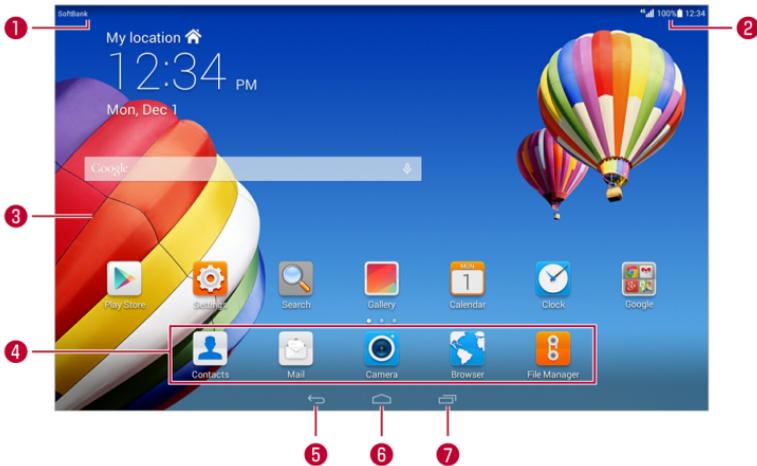

- 1 Notification Bar  
Notifications appear for new mail, etc.  
Drag Notification Bar down for Notifications Window.
- 2 Status Bar  
The time, Wi-Fi connection status, battery level, etc. appear.  
Drag Status Bar down for Settings Window.
- 3 Widgets and apps appear.
- 4 Dock  
Set apps that normally appear in Home Screen.
- 5 Go back to previous screen.
- 6 Go back to Home Screen.
- 7 Recently-used apps appear.

## Main Notification & Status Indicators

These indicators appear in Notifications Bar and Status Bar.

Indicator	Description	Indicator	Description
-----------	-------------	-----------	-------------

	Airplane Mode		Alarm On
	Bluetooth® On		Uploading
	Obtaining Location		Downloading
	Charging		Out of Storage Space
	Charged		Alert
	Charge Low		Wi-Fi Network Available
	New Mail		Wi-Fi Network Connected
	USIM Card Not Inserted		Public Wireless LAN On
	Accessing microSD Card		Earphone/headphones Connected
	Event Approaching		

## Frequently-Used Keys


The following keys (functions) are used frequently.

Icon	Description	Icon	Description
	App menu		Share data
	Exit all operations		Edit in memopads, Calendar, etc.
	Attach to mail		Make an addition
	Search the Internet or tablet		Make a setting
	Update new mail, update Webpage, etc.		Delete already-saved data
	Browser etc. bookmark		Save data

## Operations in Home Screen

- Tap app icons in Home Screen to open apps.
- Flick left/right in Home Screen to change pages.

- To customize Home Screen, Touch & Hold open area of Home Screen for options menu. Select customization for Wallpaper, widgets, etc.

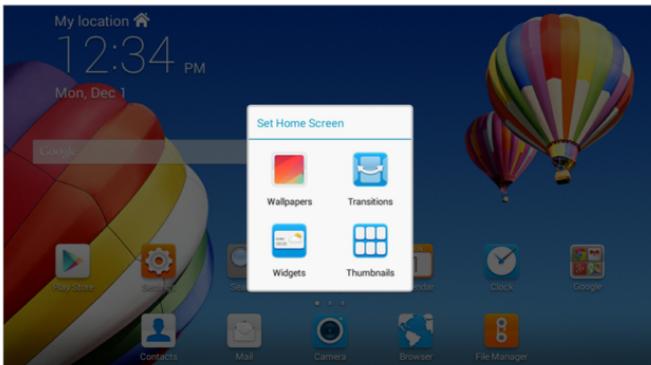

- Drag Status Bar down for Settings Window. Tap shortcuts to toggle functions on/off.



# 2 Text Entry

## Keyboards


Use onscreen keyboards for text entry.

In 10 Key Keyboard, multiple characters are assigned to each key. In QWERTY and Japanese Syllabary Keyboards, a single character is assigned to each key.

To toggle between 10 Key, QWERTY, and Japanese Syllabary Keyboards, in a shown keyboard, Tap Menu → 10 Key, QWERTY, or Japanese Syllabary.

### 10 Key Keyboard Layout

---

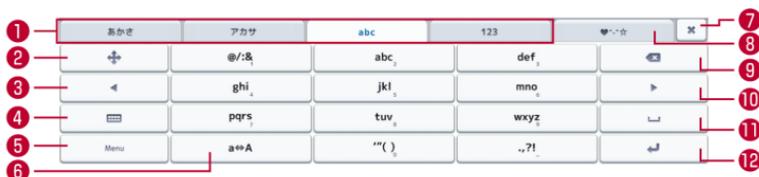

- 1 Toggle character modes (character sets)
- 2 Show cursor screen
  - Move cursor; select text to copy, cut, or paste
- 3 Shorten range of text to convert by one character
  - If no unconfirmed text, move cursor to left
- 4 Change keyboards
- 5 Change input methods and make keyboard settings
  - If 力+英数 appears, convert to katakana or alphanumerics
- 6 Change upper/lower case during text entry; add ° or °
- 7 Exit keyboard
- 8 Show emoticons/symbols
- 9 Delete one character to left of cursor; Touch & Hold to delete characters in continuation


- 10 Broaden range of text to convert by one character
  - If no unconfirmed text, move cursor to right
- 11 Enter space
  - If 変換 appears, convert characters
- 12 Insert line break
  - If 確定 appears, confirm currently-entered text

## QWERTY Keyboard Layout



- 1 Toggle character modes (character sets)
- 2 Change keyboards
- 3 Change input methods and make keyboard settings
  - If カナ英数 appears, convert to katakana or alphanumerics
- 4 Change upper/lower case
- 5 Show cursor screen
  - Move cursor; select text to copy, cut, or paste
- 6 Exit keyboard
- 7 Show emoticons/symbols
- 8 Delete one character to left of cursor; Touch & Hold to delete characters in continuation
- 9 Insert line break
  - If 確定 appears, confirm currently-entered text
- 10 Enter space
  - If 変換 appears, convert characters
- 11 Shorten/broaden range of text to convert by one character
  - If no unconfirmed text, move cursor to left/right

## Japanese Syllabary Keyboard Layout

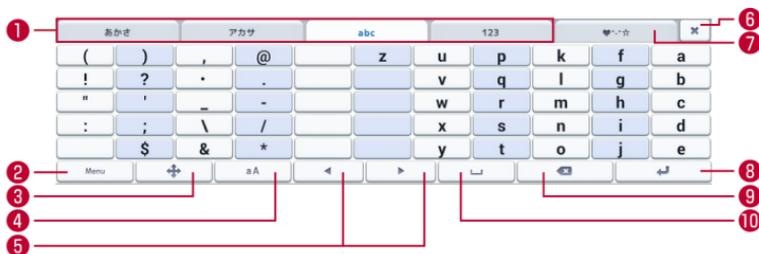

- 1 Toggle character modes (character sets)
- 2 Change input methods and make keyboard settings
  - If かな英数 appears, convert to katakana or alphanumerics
- 3 Show cursor screen
  - Move cursor; select text to copy, cut, or paste
- 4 Change upper/lower case
- 5 Shorten/broaden range of text to convert by one character
  - If no unconfirmed text, move cursor to left/right
- 6 Exit keyboard
- 7 Show emoticons/symbols
- 8 Insert line break
  - If 確定 appears, confirm currently-entered text
- 9 Delete one character to left of cursor; Touch & Hold to delete characters in continuation
- 10 Enter space
  - If 変換 appears, convert characters

## Entering Hiragana

To enter けいたい:

## 10 Key Keyboard

---

First, switch to 10 Key Keyboard.

### 1 Check that character set is hiragana

- Check Status Bar for あ icon.

### 2 か (4 times) → あ (2 times) → た (1 time) → あ (2 times) → 確定

- Text is entered.

## QWERTY Keyboard

---

First, switch to QWERTY Keyboard

### 1 Check that character set is hiragana

- Check Status Bar for あ icon.

### 2 k → e → i → t → a → i → 確定

- Text is entered.

## Japanese Syllabary Keyboard

---

First, switch to Japanese Syllabary Keyboard.

### 1 Check that character set is hiragana

- Check Status Bar for あ icon.

### 2 け → い → た → い → 確定

- Text is entered.

## Entering Kanji

To enter 携帯 in 10 Key Keyboard:

### 1 Check that character set is hiragana

- Check Status Bar for あ icon.

### 2 か (4 times) → あ (2 times) → た (1 time) → あ (2 times)

- Conversion candidates appear.
- Tap  for hidden conversion candidates.

### 3 In conversion candidates, Tap 携帯

- Text is entered.

## Entering Katakana

To enter ケイタイ in 10 Key Keyboard:

### 1 Check that character set is double-byte katakana

- Check Status Bar for カ icon.

### 2 カ (4 times) → ア (2 times) → タ (1 time) → ア (2 times) → 確定

- Text is entered.

## Entering Alphabet

To enter keitai in 10 Key Keyboard:

### 1 Check that character set is single-byte alphanumerics

- Check Status Bar for ua icon.

### 2 jkl (2 times) → def (2 times) → ghi (3 times) → tuv (1 time) → abc (1 time) → ghi (3 times) → 確定

- Text is entered.

## Entering Emoticons, Symbols, & Template Phrases

### 1 In keyboard, Menu

### 2 Emoticons, Symbols, or Templates → Tap emoticon/symbol/template

- Emoticon/symbol/template is entered.
- Tap category name to change categories.

## Flick Input

In 10 Key Keyboard, Flick keys for target characters.

To enter “k-” syllables (ka-gyo) in hiragana or katakana:

### 1 Flick か up, down, left, or right

- Character in direction Flicked is entered.

## Pasting Cut or Copied Text

To cut/copy and paste text in 10 Key Keyboard:

- 1 Touch & Hold entered text**
- 2 Drag  /  to select string of text**
- 3  (CUT) or  (COPY)**
- 4 Tap where to paste →  → PASTE**

- Cut/copied text is pasted.

## Making Text Entry Settings

Settable items are the following.

Item	Description
Screen Settings	Change keyboard appearance.
ON/OFF Settings	Toggle text conversion functions on/off.
Settings	Make settings for text entry.
Dictionary Settings	Edit user dictionary, common phrases, etc.
Reset	Initialize words shown as conversion candidates and input settings.

- 1 In keyboard, Menu**
- 2 Tap and set each item**

- Input settings are made.

# 3 Internet Connectivity

## Connecting to a Wi-Fi Network

Select from detected Wi-Fi networks.

### 1 In Home Screen, Settings → for Wi-Fi ()

- Wi-Fi is enabled.
- Tap  to disable Wi-Fi (.

### 2 Wi-Fi

- Wi-Fi settings appear.

### 3 Tap access point → Enter password → Connect

- Tablet is connected.
- Password (indicated by WEP, WPA, KEY, etc.) may be found on a label on your Wi-Fi router. For details, contact the vendor of the router. For public wireless LAN services, inquire about the password with your ISP.
- Omit password entry for unprotected access points.

#### Note

- To connect to a Wi-Fi network that uses a hidden SSID,  → Add network → Enter required network information (SSID etc.) to connect.
- Enabling Wi-Fi increases power consumption. To save battery power, disable Wi-Fi when not in use.

## Connecting to a Wi-Fi Network (WPS)

If your wireless router supports WPS (Wi-Fi Protected Setup), use WPS to quickly connect to a Wi-Fi network.

### 1 In Home Screen, Settings → for Wi-Fi ()

- Wi-Fi is enabled.
- Tap  to disable Wi-Fi (.

### 2 Wi-Fi

- Wi-Fi settings appear.

### **3** **⋮** → **WPS Push Button / Input WPS PIN** → **Follow onscreen prompts**

- Tablet is connected.

#### **Note**

- Enabling Wi-Fi increases power consumption. To save battery power, disable Wi-Fi when not in use.

# 4 Tethering Option

## About Tethering Option

Use tablet like a Wi-Fi router to connect to the Internet from a PC or game device.

- Requires separate subscription.
- Use after confirming that tablet is updated to the latest software.

## Starting Up Tethering Option

### 1 In Home Screen, Tethering

- Tethering Option window opens.
- If Terms of Agreement appear, follow onscreen prompts.

## How to Use Tethering Option (Japanese)

### 1 In Home Screen, Tethering

- Tethering Option window opens.

### 2 Help

- Help window opens.

### 3 Follow onscreen prompts

- A description of each item appears.

# 5 Applications

## Applications List

Icon	Function/Service
 (Chrome)	Access the Internet and browse webpages. Sync opened windows, bookmarks, etc. with Chrome being used by a PC or other device logged in to the same Google account.
 (Email)	Register an email account for sending and receiving home or office email while out on the go. Tablet allows you to register several email accounts.
 (FSKAREN)	Set operation of the application FSKAREN for text entry.
 (Gmail)	Use Google's email service Gmail anytime and anywhere. Enter keywords to search for messages, and add labels to organize messages.
 (Google)	Search for information on the Internet and for applications on tablet using Google Search. View webpages from around the world as well as maps, videos, location/train information for establishments, and other related information.
 (Google+)	Social networking service provided by Google. Register friends, family, friends with the same interest, etc. as circles and share information with circle members.
 (Google Settings)	Make settings for all Google services in one place: Google+ access and access for applications linked to Google+, Google Maps, Google Search, etc.
 (Magnifier)	Use Rear Camera to enlarge objects.
 (Play Games)	Enjoy Google Play games in one place. Find new games, save gameplay and score, and engage in multi-player games with friends around the world.

 (Play Store)	<p>Download from a wide range of applications (free/paid) on Google Play.</p> <p>Configure downloaded applications to download updates manually or automatically.</p>
 (Play Newsstand)	<p>Browse a variety of news topics.</p> <p>Bookmark favorite news items.</p>
 (Play Books)	<p>Read favorite books and authors anywhere.</p> <p>Google Play allows you to choose from millions of books including new titles, New York Times best sellers, up and coming authors, and free titles.</p>
 (Play Music)	<p>Play music.</p> <p>View music by genre, artist, or album. Create playlists.</p>
 (Play Movies & TV)	<p>Rent videos from Google Play or download and install for video enjoyment.</p>
 (Wi-Fi Spot Settings)	<p>Allows tablet to connect (log on) to SoftBank Wi-Fi spots automatically in SoftBank Wi-Fi spot service areas.</p> <p>Requires subscription to SoftBank Wi-Fi spot service.</p>
 (YouTube)	<p>View a variety of video content uploaded to YouTube.</p> <p>View in high-quality mode on tablet.</p> <p>Upload videos captured on tablet.</p>
 (App Installer)	<p>Install applications saved in internal storage or microSD Card.</p>
 (位置ナビ Link) (ichi navi Link)	<p>Allows tablet location to be searchable by another user.</p> <p>Requires the searching user to be subscribed to ichi navi option service.</p>
 (Music)	<p>Play music saved in internal storage or microSD Card.</p> <p>View by album or artist.</p> <p>Create playlists of your preferred music.</p>
 (Voice Search)	<p>Search for information on the Internet by speaking into tablet without any typing.</p> <p>View webpages as well as maps, videos, location/train information for establishments, and much other related information.</p>

 (Sound Recorder)	Record and play back audio from conferences and interviews.
 (Camera)	Capture photos and videos. Set image size, white balance, etc. Use continuous shooting.
 (Calendar)	Check calendar and manage events. Switch between day, week, and month views. Sync online with Google Calendar.
 (Gallery)	Manage and view photos and videos. Crop and rotate images. View as slideshow.
 (Urgent News)	Receive emergency earthquake alerts and tsunami warnings from the Japan Meteorological Agency. When an alert is received for your area, tablet sounds an alert, vibrates, and a message appears. Disaster and evacuation information can also be received from the national and local governments.
 (Search)	Search the Internet as well as on-tablet applications and Calendar.
 (Disaster Message Board)	Post, view, and delete whereabouts information in the event of a major disaster, such as a "6 弱" (roku-jyaku, "6 Lower") or larger earthquake. Set notification to be automatically sent to a pre-specified email address after posting whereabouts information.
 (Photos)	View and edit captured photos/videos and back them up to Google+.
 (Settings)	Change and check basic settings such as Display, Sound, Storage, etc.
 (Downloads)	View history of browser downloads. Re-sort files sorted by time according to size, and select and delete downloaded files in a batch.
 (Themes)	Make Wallpaper, Alarm sound, and other settings together at once.

 (Tethering)	Allows a 4G tablet to serve as a mobile Wi-Fi router. Requires subscription to optional tethering.
 (Weather)	Check weather for local area or preset cities. Add and sort cities.
 (Calculator)	Perform basic operations (addition, subtraction, multiplication, division). Use functions for many different calculations.
 (Clock)	Use alarm, world clock, stopwatch, and timer. View times around the world with the world clock. Add a region to view times in multiple regions at the same time.
 (Drive)	Google Drive is a Google online storage service. Save and share files with Google Drive.
 (Hangouts)	Use free photos, emoji, video hangout, etc. to enjoy one-on-one and group talk.
 (File Manager)	Manage files by type, and manage files and folders in internal storage or microSD Card.
 (Browser)	Access the Internet and browse webpages. Bookmark frequently-browsed pages. Open and switch between several windows.
 (Maps)	View a map of current location or check route. View traffic information and aerial views. Includes street view, 3D view, etc.
 (Mail)	Use SMS/S! Mail on a SoftBank tablet. Exchange decoré mail, emoji, etc. with an @softbank.ne.jp or @x.vodafone.ne.jp email address.
 (Notes)	Save frequently-used words/phrases, notes, etc.
 (Contacts)	Save phone numbers and email addresses.

 **Note**

- Some applications require tablet to be used in portrait orientation.

## Installing Applications

Install in any of the following ways.

A Google account is required to download applications. For details on adding an account, see “Adding a Google Account” (p. 88).

- To download from Browser/Google Play

### **1 From Browser/Google Play, download application → Follow onscreen prompts**

- Application is installed.

- To copy and install application

### **1 Copy application to tablet**

- Copy to any folder.

### **2 In Home Screen, Tools → App Installer → Select application → INSTALL**

- If confirmation appears, follow onscreen prompts.
- Application is installed.

#### **Note**

- Some applications are incompatible with tablet, and will not operate correctly or can damage tablet’s system. Only download applications from trusted sources.

## Erasing Application Cache

Periodically erasing application cache allows tablet to operate more smoothly.

### **1 In Home Screen, Settings → Manage apps**

### **2 Show ALL tab → Clear cache**

- Cache is erased.

#### **Note**

- After erasing cache, applications may need to load data again, etc.

# Uninstalling Applications

1 In Home Screen, Touch & Hold application → Drag to 

2 OK

· Application is uninstalled.

 Note

- Some applications are permanently installed.

# 6 Messaging

## Types of Mail

### S! Mail

---

Exchange messages with S! Mail-compatible SoftBank handsets and email compatible devices (other mobiles, PCs, etc.) beyond SMS character entry limit; attach media files.

### SMS

---

Exchange short messages (up to 160 single-byte characters) using phone numbers as addresses.

### Gmail

---

Gmail is Google's webmail service. Tablet automatically syncs with Gmail.

- A Google account is required to use Gmail. For details on adding an account, see “Adding a Google Account” (p. 88).

### Email

---

Use email (POP3/IMAP4) on tablet.

- Set up an email account beforehand.
- Sending/receiving email on tablet syncs tablet and mail server; sent/received messages (in the POP protocol, received messages only) are also accessible from PCs.

## S! Mail Initial Setup

When activating mail for the first time, complete setup to send/receive S! Mail using Wi-Fi.

### 1 In Home Screen, Mail

- Wi-Fi settings appear.

### 2 Set Now

- Wi-Fi connection setup is complete and folder list opens.
- To set up later, Tap Set Later.

#### Note

- If you Tap Set Later at initial startup, complete Wi-Fi setup for S! Mail later as follows.

**In Folder list,  → Send/Receive Settings → Wi-Fi Connection**

- Transmission fees apply when sending international S! Mail messages even if Wi-Fi is in use.
- To receive S! Mail messages using Wi-Fi even when Display is completely dark (Screen lock active), disable Wi-Fi sleep policy in Wi-Fi settings.

## Folder List/Thread List

View mail in folder list or thread list.

Folder list is described in the User Guide.

## Switching between Folder List and Thread List

---

### 1 In Home Screen, Mail

### 2 Tap name of current list view (Folder list/Thread list) → Tap name of list view to change to

- List view switches.

## Folder List


---

Messages are sorted and saved in folders such as Inbox and Sent Box.

## Thread List

---

Sent and received S! Mail/SMS is displayed sorted by recipient. When viewing messages exchanged with Yamamoto-san, messages are displayed as a conversation with Yamamoto-san within a single thread.

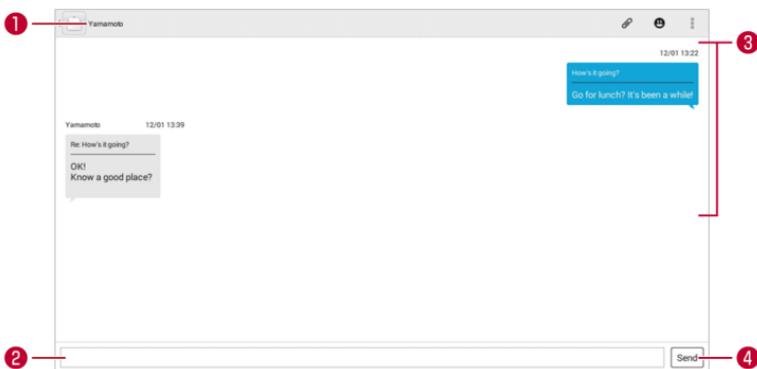

- ① Thread with mailing contact
- ② Message text entry field
- ③ Exchanged message content
- ④ Send S! Mail/SMS

## Sending S! Mail/SMS

### Note

- When  is Tapped while creating S! Mail or SMS, confirmation appears asking whether to save the message as a draft. Follow onscreen prompts. Drafts are saved to Draft Box in folder list, and are indicated as  in thread list. Open an S! Mail/SMS draft to edit and send it.

## Sending S! Mail

---

**1 In Home Screen, Mail** → 

**2** 

- Alternatively, enter phone numbers or email addresses in Recipient field directly.

**3 Phonebook, Outgoing History, Incoming History, or Mail Group** → **Select recipients** → **OK**

- Tap Phonebook, Outgoing History, or Incoming History to select recipients from Phonebook, Outgoing History, or Incoming History.
- Tap Mail Group to select a mail group and set all the members on the list as recipients.
- After setting recipients, Tap  to check recipients' phone numbers/email addresses or set them to Cc/Bcc.
- To delete a recipient, Tap  and then .

**4 Tap Subject field** → **Enter subject**

**5 Tap Compose email field** → **Enter text**

**6 Send** → **Send**

- S! Mail is sent.
- Failed S! Mail messages are saved as drafts.

## Sending SMS

---

**1 In Home Screen, Mail** → 

**2** 

- Alternatively, enter phone number in Recipient field directly.

**3 Tap recipient**

- After setting recipient, Tap  to check recipient's phone number.
- To delete recipient, Tap  and then .

**4 Tap Compose SMS field** → **Enter text**

**5 Send** → **Send**

- SMS is sent.
- Failed SMS messages are saved as drafts.

## Sending Decore Mail by S! Mail

### Using a Template

---

Choose from a variety of designs to decorate mail.

- 1 In Home Screen, Mail → Template → Flick left/right to select template**
- 2 SELECT**
- 3 Enter recipients → Enter subject → Enter text**
- 4 Send → Send**

- Decore mail is sent.

### Decorating S! Mail

---

- 1 While entering message text, ✦**
  - Message is ready to be decorated.
- 2 Tap decorating method → Follow onscreen prompts**
  - Decorate while entering message text.

## Opening & Replying to S! Mail/SMS

Tablet receives S! Mail/SMS messages automatically by default. Optionally, retrieve messages manually, and also retrieve all messages stored on the server.

### Opening New S! Mail/SMS

---

When message arrives, new message notice and Notification Indicator appear.

- 1 Read**
  - S! Mail/SMS message window opens.
  - To open new message from Notification Indicator, Drag Notification Bar down for Notifications Window, then Tap corresponding notification.
  - For two or more new messages, folder list opens.

**i** Note

- Set spam filtering to save messages from senders not in Phonebook to spam mail.  
New mail notification does not appear. To check messages saved to spam mail:  
**In Home Screen, Mail → Spam Box**
  - If confirmation appears, follow onscreen instructions.

## Retrieving S! Mail/SMS Manually

---

**1 In Home Screen, Mail →** 

- Mail is received.

## Retrieving Server Mail

---

**1 In Home Screen, Mail →**  **→ Handle Server Mail**

**2 Receive whole content for all server mails / Receive subject and sender for all server mails**

- Server mail is received.

## Replying to S! Mail/SMS

---

**1 In S! Mail/SMS message window,**  **or** 

**2 Enter text**

**3 Send → Send**

- Message is sent.

## Forwarding S! Mail/SMS

---

**1 In S! Mail/SMS message window,** 

**2 Enter recipients → Enter text**

**3 Send → Send**

- Message is forwarded.

# Managing S! Mail/SMS

## Viewing S! Mail/SMS

---

### 1 In Home Screen, Mail

- Folder list opens.

### 2 Tap Inbox or subfolder of Inbox

- S! Mail/SMS message list opens.
- To view sent messages, Tap Sent Box/subfolder of Sent Box for sent S! Mail/SMS message list
- To view message drafts and unsent messages, Tap Draft Box for draft/unsent S! Mail/SMS message list.

### 3 Tap message

- S! Mail/SMS message window opens.

#### Note


- Add widgets to check message information in Home Screen. Widgets are available in “easy mode” and “detailed mode” versions. Check number of unread messages with easy mode widgets. Check date/time and preview of messages in addition to number of unread messages with detailed mode widgets. Content of latest message appears if all messages are read.
- Deleting All Server Mail  
In folder list,  → Handle Server Mail → Delete all mails → Delete
- Checking Available Storage on Mail Server  
In folder list,  → Handle Server Mail → Check storage space
- Creating Subfolder  
In folder list,  → Create Inbox Folder or Create Sentbox Folder → Enter folder name → Create
- Setting Sort Rules for Subfolders  
In folder list, Touch & Hold subfolder →  → Add Rule → Sender, Domain, Subject, or Mail Group → Enter/select sender, domain, keyword, or mail group → Follow onscreen prompts
  - To select sender/domain from Contacts, Tap .
  - Tap  to delete rules.

- Sort rules are unavailable for Inbox and Sent Box.
- Changing Subfolder Name
  - In folder list, Touch & Hold subfolder** →  → **Enter folder name** → **Create**
  - Inbox and Sent Box names are unchangeable.
- Changing Sort Order of Subfolders
  - In folder list, Touch & Hold subfolder** →  → **Tap Up/Down** → **Done**
  - Sort order of Inbox and Sent Box is unchangeable.
- Deleting Subfolders
  - In folder list, Touch & Hold subfolder** →  → **Delete**
  - Select whether to move messages in subfolder to Inbox or Sent Box.
  - Inbox and Sent Box cannot be deleted.
- Searching Messages
  - In S! Mail/SMS message list, ** → **Search by Sender/Recipient's Name or Search by Body Text/Subject** → **Enter search text** → **OK** → **Tap the message**
- Sorting Messages
  - In S! Mail/SMS message list, ** → **Sort** → **Tap sort rule**
- Setting All Messages as Read
  - In S! Mail/SMS message list, Touch & Hold any message** → **Tap 1 item selected then Select all** → 
- Setting a Message as Read
  - In S! Mail/SMS message list, Touch & Hold message** → 
  - To select several messages, Touch & Hold first message then select other messages.
- Setting a Message as Unread
  - In S! Mail/SMS message list, Touch & Hold message** → 
  - To select several messages, Touch & Hold first message then select other messages.
- Viewing Previous or Next Message
  - In S! Mail/SMS message window, Flick left/right**
- Protecting Messages
  - In S! Mail/SMS message window, ** → **Lock Message**
  - To unprotect message, Tap Unlock Message.
- Saving Attachments
  - In S! Mail/SMS message window, ** → **Select attachment** → **Save**
- Deleting a Message in S! Mail/SMS Message List
  - In S! Mail/SMS message list, Touch & Hold message** →  → **Delete**
  - To select several messages, Touch & Hold first message then select other messages.

- Deleting a Message in S! Mail/SMS Message Window  
In S! Mail/SMS message window,  → Delete
- Moving a Message in S! Mail/SMS Message List  
In S! Mail/SMS message list, Touch & Hold message →  → Tap folder to move to  
· To select several messages, Touch & Hold first message then select other messages.
- Moving a Message in S! Mail/SMS Message Window  
In S! Mail/SMS message window,  → Move to subfolder → Tap folder to move to
- Reporting Spam in S! Mail/SMS Message List  
In S! Mail/SMS message list, Touch & Hold message →  → Yes  
· Only one message can be selected.
- Reporting Spam in S! Mail/SMS Message Window  
In S! Mail/SMS message window,  → Declare Spam → Yes
- Listing Sender and Recipient Addresses in S! Mail/SMS Message List  
In S! Mail/SMS message list, Touch & Hold message →   
· Only one message can be selected.
- Listing Sender and Recipient Addresses in S! Mail/SMS Message Window  
In S! Mail/SMS message window, 

## Folder List

---

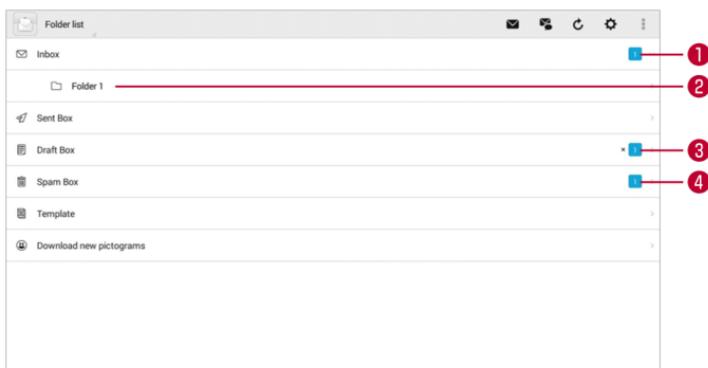


- ① Number of unread messages
- ② Subfolder

③ Number of drafts/unsent messages

④ Number of spam messages

Icon	Description
	Send Failure

## S! Mail/SMS Message List

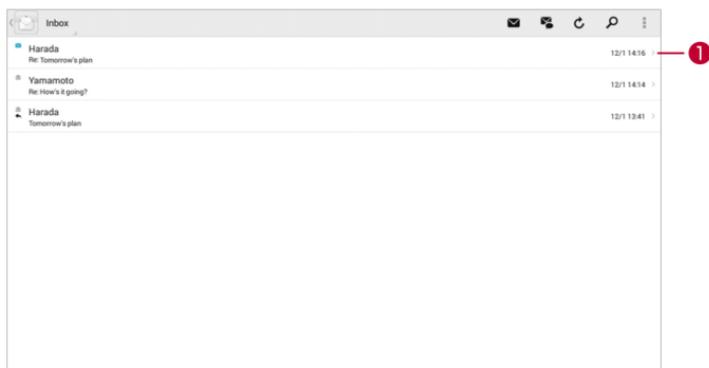


① Sender, subject, date & time sent/received/saved, etc.

Icon	Description
	Attachment
	Replied
	Forwarded
	Sent
	Delivery Report
	High Priority
	Low Priority
	Protected
	Sending

	Waiting to Send
	Sending Scheduled
	Send Failure
	Registering Auto Resend
	Draft

## S! Mail/SMS Message Window

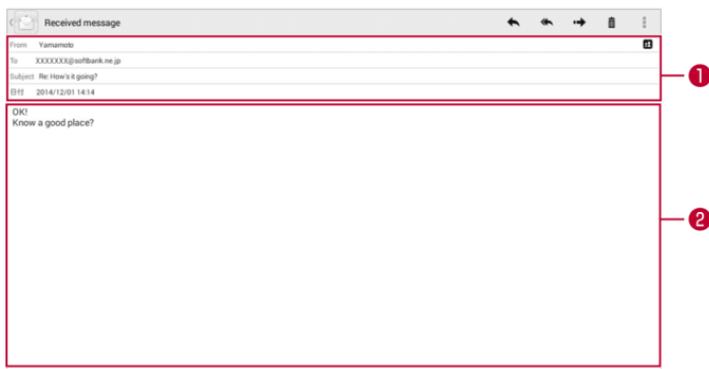

- 1 Sender, recipient, subject, date & time sent/received/saved, etc.
- 2 Message text

Icon	Description
	Sender/recipients list. Tap for list of addresses included in sender/recipient fields.
	Delivery report. Tap for report. Appears for sent messages.
	Attachment. Tap to save attachment.

## Backing Up S! Mail/SMS Data

Back up message data on tablet to microSD Card.

- Back up messages saved on tablet. Data for all messages must be backed up together at the same time.

- 1 In Home Screen, Mail → ⚙️
- 2 Common Settings → Mail Save&Load → Backup/Restore
- 3 Backup(S!Mail Specific) → OK
- 4 OK → Airplane mode (🛩️) → ⏪
  - Backup starts.
- 5 OK → Airplane mode (🛩️) → ⏪
  - Messages are backed up.

## Restoring S! Mail/SMS Data

---

Restore message data backed up to microSD Card to tablet.

- 1 In Home Screen, Mail → ⚙️
- 2 Common Settings → Mail Save&Load → Backup/Restore
- 3 Restore(S!Mail Specific) → OK
- 4 OK → Airplane mode (🛩️) → ⏪
- 5 Tap files → OK
  - Restore starts.
- 6 OK → Airplane mode (🛩️) → ⏪
  - Messages are restored.

## Moving S! Mail/SMS Data (Export)

---

Export message data on tablet in vMessage format to microSD Card. vMessage format is compatible with other smartphones and SoftBank mobile phones (3G).

- Export either received message data, sent message data, or drafts/unsent message data saved on tablet all together. Data for all messages must be saved together at the same time.

- 1 In Home Screen, Mail → ⚙️
- 2 Common Settings → Mail Save&Load → Export/Import
- 3 Export(vMessage) → OK
  - If download confirmation and terms of agreement appear, follow onscreen prompts.
- 4 Tap message category → 実行(OK)

- Export starts.

## 5 OK

- Data is exported.

### Note

- Exported message data is saved to the locations below.
  - Received message data: /sdcard/private/MYFOLDER/Mail/Inbox/Inbox.BCK
  - Sent message data: /sdcard/private/MYFOLDER/Mail/Sent Messages/Sent Messages.BCK
  - Draft/unsent message data: /sdcard/private/MYFOLDER/Mail/Drafts/Drafts.BCK
- Filenames of exported data are formatted as the year, month, and date saved to microSD Card. For example, message data saved on December 1st, 2014 is formatted as "14120100.vmg." Several files saved on the same day are formatted starting as "14120101.vmg," with the last two digits increasing sequentially. If tablet clock is unset, formatting appears as "XXXXXX.vmg."

## Moving S! Mail/SMS Data (Import)

---

Import message data exported to microSD Card or other media in vMessage format to tablet.

- To import data from a previously used mobile phone, etc., first save the data you want to import to microSD Card or other media.

**1 In Home Screen, Mail** → 

**2 Common Settings** → **Mail Save&Load** → **Export/Import**

**3 Import(vMessage)** → **OK**

**4 Tap message category** → **OK**

**5 OK** → **Airplane mode** () → 

**6 Select files** → **OK**

- Import starts.

**7 OK** → **Airplane mode** () → 

- Data is imported.

### Note

- Imported message data is saved to the locations below.
  - Received message data: /sdcard/private/MYFOLDER/Mail/Inbox/Inbox.BCK

- Sent message data: /sdcard/private/MYFOLDER/Mail/Sent Messages/Sent Messages.BCK
- Draft/unsent message data: /sdcard/private/MYFOLDER/Mail/Drafts/Drafts.BCK
- This application also imports messages for which privacy settings, such as secret mode, were configured on a previous mobile phone. Imported data can be viewed.
- Message data that was encrypted and backed up on a previous mobile phone cannot be imported with this application.

## Operations When Creating S! Mail/SMS

Use these functions when sending, replying to, or forwarding messages.

### Switching to S! Mail

---

**1** While creating SMS,  → Switch to S!Mail → OK

- Tablet switches to S! Mail.

### Switching to SMS

---

**1** While creating S! Mail,  → Switch to SMS → OK

- Tablet switches to SMS.

### Attaching Files

---

**1** While creating S! Mail, 

**2** Tap file type → Follow onscreen prompts

- File is attached.

### Specify Date/Time to Send

---

Create a message to be sent automatically at a specific time.

- 1 After entering recipients/subject/message text,  → **Sending Reservation**
- 2 Specify date to send on → **Set**
- 3 Specify time to send at → **Set** → **OK**
  - Message is saved as a draft, and automatically sent at the specified time on the specified date.

## Entering Emoji Pictograms

---

- 1 While entering subject/message text, 
- 2 Tap emoji
  - Emoji is entered.
  - Tap My PIC while entering message text to select My Pictograms.
  - Tap  on the My Pictogram tab to select My Pictograms saved to microSD Card.

## Previewing before Sending

---

Check how created S! Mail/SMS will be viewed.

- 1 While creating S! Mail/SMS,  → **Preview**
  - Preview opens.

## Setting Priority Levels

---

- 1 While creating S! Mail,  → **Set priority**
- 2 Tap priority level → **OK**
  - Priority level is set.

## Requesting Delivery Reports

---

- 1 While creating S! Mail/SMS,  → **Delivery reports**
- 2 Request a delivery report for this message you send ( ) → **OK**
  - Requesting of delivery reports is set.

## Discarding a Message Draft

---

Discard a message that is being created without saving it as a draft.

**1 While creating S! Mail/SMS,  → Delete**

**2 Delete**

- Mail draft is discarded.

## S! Mail/SMS Settings

Make settings for S! Mail/SMS.

### Common Settings

---

Settable items are the following.

Item	Description
Message Notice	Show popup for new messages.
Sound/Vibration	Set ringtone, vibration, incoming lamp, etc. for new messages.
Thread Mode	Show all messages in conversation threads.
Color Style Setting	Change the screen design.
Font Size options	Change the font size.
Double enlarge image	Automatically enlarge small inline images.
My Pictogram Setting	Change sort order of or delete My Pictograms.
Decore Picture Setting	Change sort order of or delete decore mail pictures.
Mail Save&Load	Back up/restore message data or export/import message data in vMessage format. vMessage format is compatible with other smartphones and SoftBank mobile phones (3G).
Spam mail folder	Enable sorting of messages from senders not in Contacts to Spam Box.
Initialization	Return message settings to defaults.

Advanced Settings	Enable old messages to be automatically deleted and set number of messages that can be saved. Check used space on microSD Card and in internal storage.
-------------------	---

**1 In Home Screen, Mail** → 

**2 Common Settings** → **Set each item**

- Settings are made.

## Send/Receive Settings

---

Settable items are the following.

Item	Description
Receive Settings	Make S! Mail/SMS receive settings. Set what portions of S! Mail to first retrieve, whether to automatically retrieve S! Mail during roaming, and whether to automatically check new messages when activating S! Mail.
Send Settings	Make S! Mail/SMS send settings. Set whether to quote a message when replying to S! Mail, whether to request delivery reports for sent S! Mail/SMS messages, and whether to show confirmations.
Wi-Fi Connection	Make S! Mail settings for Wi-Fi connections.
SMS Send/Receive Settings	Set the application used for sending/receiving SMS.
Display Progress	Set whether to send and receive messages in the background.

**1 In Home Screen, Mail** → 

**2 Send/Receive Settings** → **Set each item**

- Settings are made.

## Mail Group Settings

---

**1 In Home Screen, Mail** → 

**2 Mail Group Settings**

- Mail Group Setting window opens.

### Note

- Adding a Mail Group

In Mail Group Setting window, Add Mail Group → Enter group name → OK

- Tap  to enter emoji.

- Adding Members to a Group

In Mail Group Setting window, Tap group → Add Group Member → Phonebook, Outgoing History, Incoming History, or Direct Input → Enter/select contact → OK

- Editing a Group Name

In Mail Group Setting window, Touch & Hold group → Edit group name → OK

- Tap  to enter emoji.

- Deleting a Group

In Mail Group Setting window, Tap **X** next to group → Delete

- Deleting Members

In Mail Group Setting window, Tap group → Tap **X** next to member → Delete

## Number/Address Settings

---

Settable and viewable items are the following.

Item	Description
Phone Number	View phone number.
Mail Address	View mail address.
Change Mail Address	Navigate to My SoftBank to change mail address, etc.

**1** In Home Screen, Mail → 

**2** Number/Address Settings → Set each item

- Settings are made.

## Creating & Sending Gmail

Use Google's webmail service. Sign in to a Google Account beforehand.

## Creating/Sending Gmail

---

### 1 In Home Screen, Google → Gmail

- INBOX opens.
- If confirmation appears, follow onscreen prompts.

### 2

- Compose window opens.

### 3 Enter recipient, subject, and text → SEND

- Gmail is sent.

### Note

#### ● Adding Cc/Bcc Recipients

In Compose window, + CC/BCC → Add recipients

#### ● Attaching Files

In Compose window,  → Attach file → Tap file

#### ● Saving as Draft

While creating message,  → Save draft

- Message is saved as a draft.

#### ● Discarding Message Being Created

In Compose window,  → Discard → Discard

- Gmail messages are not received if recipient device is set to reject messages sent from PCs.

## Opening Received Gmail

Gmail groups all related messages by subject (Thread View).

## Opening New Gmail

---

 appears in Notification Bar for new Gmail.

### 1 Drag Notification Bar down for Notifications Window

- Notifications Window appears.

### 2 Tap new Gmail

- The Gmail message opens.

- For two or more new messages with different subjects, Inbox opens.

## Opening Gmail

---

### 1 In Home Screen, Google → Gmail

- INBOX opens.

### 2 Tap thread

- Message window opens.

#### Note

- Replying to Messages

In message window,  → Create message

- Forwarding Messages

In message window,  → Create message

## Managing Saved Gmail

### Using Labels

---

Gmail saves all messages in one box. Adding labels to each thread sorts threads by label. For example, when a message is received and a new thread is made, the label "Inbox" is automatically added. Then, by adding the label "travel," all threads with "travel" are shown in a list.

### 1 In Home Screen, Google → Gmail

- INBOX opens.

### 2 Touch & Hold thread to add label to

- Window appears with thread selected.
- To select several threads, Touch & Hold threads.

### 3 → Change labels → Select label → OK

- Label is added.

## Archiving Threads

---

Remove sent and received Gmail (threads) so they no longer appear. When replies arrive for archived threads, they appear again.

- 1 In Home Screen, Google → Gmail**
  - INBOX opens.
- 2 Touch & Hold thread to archive (hide)**
  - Thread selection window opens.
  - To select several threads, Touch & Hold threads.
- 3  or **
  - Thread is archived.

## Muting Threads

---

If registered on a mailing list, there will be threads with always-continuing conversations. For long threads that are not important, mute the threads and they will no longer appear. When mail arrives that includes user's address as a recipient or in Cc, mail will again appear.

- 1 In Home Screen, Google → Gmail**
  - INBOX opens.
- 2 Touch & Hold thread to mute**
  - Thread selection window opens.
  - To select several threads, Touch & Hold threads.
- 3  → Mute**
  - Thread is hidden.

## Deleting Threads

---

- 1 In Home Screen, Google → Gmail**
  - INBOX opens.
- 2 Touch & Hold thread to delete**
  - Thread selection window opens.
  - To select several threads, Touch & Hold threads.

### 3

- Thread is deleted.

## Searching Mail

---

### 1 In Home Screen, Google → Gmail

- INBOX opens.

### 2 → Enter search text →

- Search results appear.

## Reporting Spam

---

### 1 In Home Screen, Google → Gmail

- INBOX opens.

### 2 Touch & Hold thread to report

- Thread selection window opens.
- To select several threads, Touch & Hold threads.

### 3 → Report spam or Report phishing

- Spam/phishing is reported.

## Switching Google Accounts/Inboxes/Labels

---

### 1 In Home Screen, Google → Gmail

- INBOX opens.

### 2 Tap account, inbox, or label to switch to

- Account/inbox/label switches.

# Using Email

## Setting an Account

---

Check username (user ID), password, server name, etc. beforehand for the email account.

### 1 In Home Screen, Email

- If no account is set up, account registration window opens.

### 2 Tap account type → Follow onscreen prompts

- Email setup is complete.

## Adding Accounts

---

### 1 In Home Screen, Email

- Inbox opens.

### 2 → Settings → NEW ACCOUNT

- NEW ACCOUNT window opens.
- Follow onscreen prompts.

## Creating/Sending Email

---

### 1 In Home Screen, Email

- Inbox opens.

### 2

- Compose window opens.

### 3 Enter recipient, subject, and text →

- Email is sent.

## Opening New Email

---

 appears in Notification Bar for new email.

### 1 Drag Notification Bar down for Notifications Window

- Notifications Window appears.

## 2 Tap new email notification

- Email message opens.
- For two or more new messages with different subjects, Inbox opens.

## Opening Email

---

### 1 In Home Screen, Email

- Inbox opens.

### 2 Tap message

- Message opens.

#### Note

- Resetting Message as Unread

**In Inbox, Touch & Hold message** → 

- Deleting Message

**In Inbox, Touch & Hold message** → 

- Replying to Message

**In opened message,**  → **Create message**

- Forwarding Message

**In opened message,**  → **Create message**

# 7 Multimedia


## Importing Photos

Use a USB OTG cable (sold separately) to import photos to tablet from a camera or other device (USB flash drive, smartphone, etc.).

### Note

- Before purchasing a USB OTG cable (sold separately), contact a SoftBank-designated manufacturer or the manufacturer of the device.

### 1 Use USB OTG cable (sold separately) to connect device to tablet

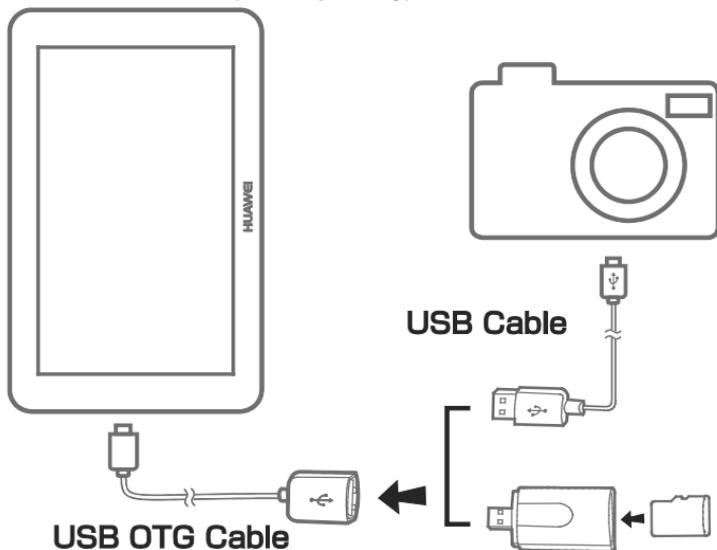

### 2 In Home Screen, File Manager

- If confirmation appears, follow onscreen prompts.

### 3 Local tab → USB

### 4 Tap or → Select photos or folders to import

### 5 COPY or CUT

### 6 Select where to save file → PASTE

## Viewing Photos & Videos

Use Gallery to view photos and videos. This application automatically searches for and sorts photos and videos saved in internal storage or microSD Card for easy browsing.

### 1 In Home Screen, Gallery

### 2 Tap photo or video

- Image appears in full-screen mode.
- Flick left/right for previous or next file.

#### Note

- Pinch/Spread image to zoom in/out.
- Use the following while viewing photos and movies.

	Activate Camera
	Share photos and videos
	Delete photos and videos
	Open menu for other options
	Edit opened photo

## Sharing Photos & Videos

Use Bluetooth<sup>®</sup>, email, etc. to share photos and videos.

### 1 In Home Screen, Gallery

### 2 Touch & Hold photo or video → Share → Tap application → Follow onscreen prompts

## Shooting Panoramas

Capture panoramic shots even without a wide-angle lens.

### 1 In Home Screen, Camera

### 2 (capture mode) →

- Panorama Viewfinder opens.

### 3 Tap to start capture → Pan tablet slowly

### 4

- Capture is completed.
- Capture also completes automatically when capture limit is reached.
- After capture is completed, tablet then creates panorama.

 **Note**

- Panorama is not captured if screen frame is red. Tablet may have been panned too quickly or moved outside the capturable range.

# 8 Useful Functions

## Using Urgent News

View received emergency earthquake alerts and tsunami warnings from the Japan Meteorological Agency, as well as disaster and evacuation information from the national and local governments (receive setting is enabled at time of purchase).

### If Urgent News Arrives

---

 and a message appear in Notification Bar. Tablet sounds quake alert or disaster/evacuation information alert, and vibrates.

- Urgent News is not received during calls or transmissions, or when signal is weak.
- Alert sounds for arriving Urgent News even if in silent mode.

#### 1 Drag Notification Bar down for Notifications Window

- Notifications Window opens.

#### 2 Tap Urgent News

- Urgent News list opens.

#### 3 Tap the Urgent News

- The Urgent News opens.

#### Note

- Disabling Urgent News

In Urgent News list,  → Urgent News Incoming Setting → Urgent News Incoming Setting ()

- Depending on location/conditions, tablet may receive alerts for other areas or no alerts. SoftBank Mobile Corp. cannot be held liable for any damages associated with this service, including accidents resulting from received information, reception timing or reception failure.
- Standby time may decrease when Urgent News Incoming Setting is enabled.

## Opening Old Urgent News

---

### 1 In Home Screen, Urgent News

- Urgent News list opens.

### 2 Tap the Urgent News

- The Urgent News opens.

## Using Google Maps

Features available with Google Maps include maps of current location, routes to destinations, and views of traffic conditions and aerial views.

## Viewing Maps of Specified Places

---

### 1 In Home Screen, Google → Maps

- Map opens.
- If confirmation appears, follow onscreen prompts.

### 2 🔍 → Enter address, city, facility name, etc. → Tap address, city, facility name, etc. in candidates

- Map of specified location opens.

#### Note

#### ● Viewing Current Location

Enable GPS beforehand.

In map, 

#### ● Obtaining Useful Vicinity Information

Enable GPS beforehand.

In map,  → Settings → Tap information to obtain → Tap information

#### ● Viewing Traffic Conditions, Aerial View, etc.

Enable GPS beforehand.

In map,  → Tap information to view

#### ● Checking Route to Destination

In map,  → Follow onscreen prompts

- Finding Detailed Operation Instructions

In map, ☰ → Help

## Using Hangouts

Hangouts is Google's instant messaging service. Use to communicate with other Hangout users, and also use video calling. Log in to a Google account beforehand.

### 1 In Home Screen, Google → Hangouts

- Hangouts opens.

### 2 +

### 3 Enter friend's name, mail address, phone number, circle → Tap friend → Follow onscreen prompts

- Chat window or video chat window opens.
- Each time text is entered, the corresponding friend appears.
- If a friend is not in a Hangout, message appears. Tap Send invite to invite them to the Hangout.

### Note

- Ending a Chat

In Hangouts window, Flick the chat left/right

- Ending a Video Chat

In video chat window, 

- Disabling Chat History

Do not create a chat history.

In chat window, ☰ → Turn history off

- Deleting Chat History

Delete all chat history.

In chat window, ☰ → Delete → Delete

## Using Google Search

Search information saved on tablet and in tablet applications as well as on the Internet.

## Searching

---

### 1 In Home Screen, Google

- Search window opens.
- If a description for Google Now appears, Tap NEXT and read information. Tap YES, I'M IN. to use Google Now.

### 2 Enter search keywords →

- Search results appear.
- To search by voice, Tap  and speak search words into tablet.

### Note

#### ● Changing Search Information

In search window,  → Settings → Tablet search → Tap where to search

#### ● Using Google Now

Google Now automatically searches for information based on search keywords used until now, location information for user's current location, etc. and presents search results. Google Now also informs user of scheduled events.

In search window,  → Settings →  for Google Now → YES, I'M IN.

- Enable location information beforehand to fully use Google Now.

#### ● Canceling Google Now

In search window,  → Settings →  for Google Now → Select whether to disable location history → Turn off

## Searching for Information by Voice (Voice Search)

Search for information on the Internet by voice.

## Using Google Voice Search

---

### 1 In Home Screen, Voice Search

- Voice Search opens.

### 2 Speak words to search with into tablet

- Search results appear.

## Using Calculator

### 1 In Home Screen, Tools → Calculator

- Calculator opens.

### 2 Tap onscreen keys

- Calculation result appears.

#### Note

- Cutting or Copying Calculation Result

**Touch & Hold calculation result → Cut all or Copy all**

## Using Calendar

Use calendar to manage a schedule. Sync online with Google Calendar. Sign in to a Google Account beforehand.

### 1 In Home Screen, Calendar

- Calendar opens.

#### Note

- Showing Calendar for Today

**In Calendar, **

- Changing Calendar View

**In Calendar, Tap Year, Month, Week, Day, or Agenda at upper left**

- View Next or Previous Month (Month View)

**In Calendar, Flick left/right**

- View Next or Previous Week (Week View)

**In Calendar, Flick left/right**

- View Next or Previous Day (Day View)

**In Calendar, Flick left/right**

- View Next or Previous Time Period (Day/Week View)

**In Calendar, Flick up/down**

## Adding Events to Calendar

---

### 1 In Home Window, Calendar

- Calendar opens.

### 2 +

- New event window opens.

### 3 Enter event name, start date/time, end date/time, etc. → Save

- Event is added.

## Checking Events

---

### 1 In Home Screen, Calendar

- Calendar opens.

### 2 Tap date → Tap event

- Event details open.
- In event details, Tap  to edit event.
- In event details, Tap  to delete event.

## Syncing Calendar

---

### 1 In Home Screen, Calendar

- Calendar opens.

### 2 → Calendars to display

### 3 Select items to sync

- Sync settings are made.

## Using Clock

Set alarms and check world times.

## Setting Alarms

---

### 1 In Home Screen, Clock

- Clock opens.

### 2 Alarm tab

- Alarm window appears.

### 3 + → Set items → DONE

- Alarm is set.
- At the alarm time, tablet sounds alarm and vibrates.

#### Note

- Toggling Alarm On/Off

In alarm window,  or  for alarm

- Tap to toggle on () or off ()

- Stopping an Alarm

During alarm, Drag Close right

- Setting Whether Tablet Sounds Alarm and Vibrates in Silent Mode

In alarm window,  → Alarm in silent mode ()

- Tap to toggle set () or canceled ()

## Using World Clock

---

### 1 In Home Screen, Clock

- Clock opens.

### 2 World clock tab

- World clock window appears.

### 3 + → Tap city

- City is added.

#### Note

- Selecting and Deleting Cities

In world clock window, Touch & Hold city → Remove city → OK

- Changing Sort Order of Cities

In world clock window,  → Rearrange → Drag  to new position → REARRANGE

## Using Stopwatch

---

### 1 In Home Screen, Clock

- Clock opens.

### 2 Stopwatch tab

- Stopwatch window appears.

### 3 Start

- Timing starts.

### 4 Stop

- Time is shown.

#### Note

- Resetting Timing Result

##### After timing, Reset

- Timing Laps

##### While timing, Lap

- To reset lap times, after timing, Tap Reset.

## Using Timer

---

### 1 In Home Screen, Clock

- Clock opens.

### 2 Timer tab

- Timer window appears.

### 3 Set time → Start

- Countdown starts.
- After time elapses, tablet sounds alarm and/or vibrates. To stop countdown, Tap Reset.

#### Note

- Changing Alarm Tone

In timer window,  → Tap alarm tone → APPLY

# Using YouTube

View a variety of video contents uploaded to YouTube, and upload videos from tablet.

## Viewing Videos

---

### 1 In Home Screen, Google → YouTube

- YouTube opens.
- If confirmation appears, follow onscreen prompts.

### 2 Tap video

- Video plays.
- Tap Display while a video is playing for play/pause.

#### Note

#### ● Uploading Videos

In YouTube window, Uploads →  → Tap video → Enter title, etc. → UPLOAD

- If confirmation appears, follow onscreen prompts.
- Set a YouTube account beforehand.

# Music Files

## Playing Music Files

---

The following file formats are supported.

- MP3, WAV, AAC, AMR-NB, OGG, MIDI

### 1 In Home Screen, Music

- Library opens.

### 2 Tap category → Tap song


- Song plays.

#### Note

- Tap music image for Player window.

## Player Window Layout

---

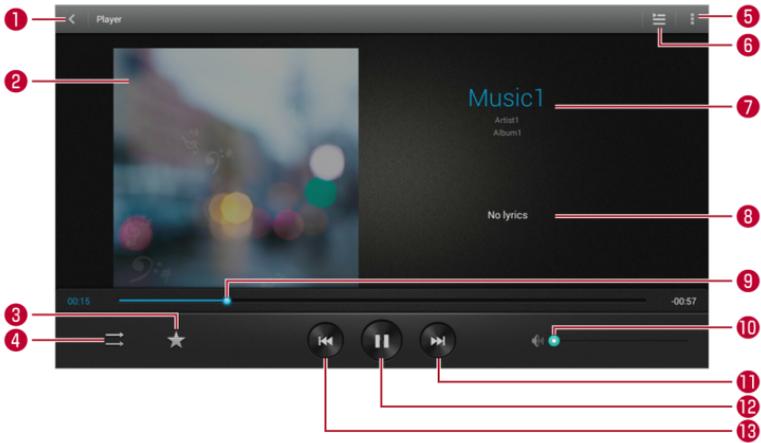

- 1 Return to library
- 2 Music image
- 3 Add/delete favorites
- 4 Toggle shuffle playback, repeat all, repeat song, and normal playback
- 5 Menu
- 6 Show list of played songs, albums, playlists
- 7 Song name / album name / artist name
- 8 Lyrics
- 9 Drag to move anywhere in song
- 10 Volume bar
- 11 Play next song
- 12 Pause/play
- 13 Play previous song / play current song from beginning

## Creating Playlists

---

- 1 In Home Screen, Music**
  - Library opens.
- 2 Show music category to add from in Library**
- 3  → Add to playlist**
- 4 Select songs to add → ADD**
- 5 Create new playlist → Enter playlist name → Save**
  - Playlist is created and music is added.

### Note

- Adding Current Song to Playlist
  - In Player window,  → Add to playlist → Select playlist
  - Music is added to playlist.

## Using Notes

Quickly create often-used text, memos, etc.

## Creating a Note

---

- 1 In Home Screen, Tools → Notes**
  - Notes opens.
- 2  → Enter content → **
  - Note is saved.

## Viewing Notes

---

- 1 In Home Screen, Tools → Notes**
  - Notes opens.
- 2 Tap note**
  - Note opens.

### Note

- Editing Notes

In note list, Tap note → Tap note area

- Editing starts.

- Deleting Notes

In note list,  → Select note → DELETE → Delete

## Recording/Playing Back Audio

Record audio from conferences and interviews for playback. Audio files are saved to internal storage.

### Recording Audio

---

**1 In Home Screen, Tools → Sound Recorder**

- Sound Recorder opens.

**2 **

- Recording starts.

**3  to end recording**

- Recording ends.

### Playing Back Previous Audio Recordings

---

**1 In Sound Recorder, **

- File list opens.

**2 Tap file**

- Playback starts.

** Note**

- Deleting Files

In file list,  → Select file →  → OK

- Sending Files

In file list,  → Select file →  → Tap send method → Follow onscreen prompts

- Viewing Details of File

In file list, 

## Using Tablet as Magnifier

Use Rear Camera for magnifying objects.

### **1 In Home Screen, Tools → Magnifier**

- Magnifier opens.

### **2 Hold Rear Camera up to object and view in Display**

- Object is shown enlarged.

# 9 Customizing

Change the Wallpaper in Home Screen, widget settings, and notification tone.

## Changing Themes

Several themes are available on tablet for easily changing the Display design.

### 1 In Home Screen, Themes

### 2 Tap theme → APPLY

- Theme is changed.

## Adding Widgets to Home Screen

Add calendar, bookmark, and other widgets to Home Screen.

### 1 Touch & Hold open area of Home Screen


- Option menu for Home Screen opens.

### 2 Widgets

- Widget edit window opens.

### 3 Touch & Hold widget → Drag to location

- Widget is added to Home Screen.

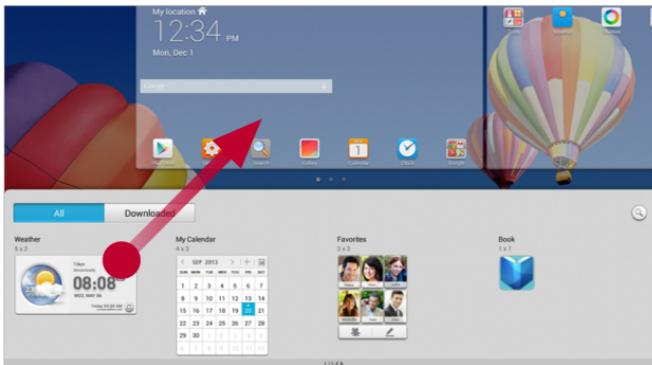

## Adding Home Screen Pages

### 1 Touch & Hold open area of Home Screen

- Option menu for Home Screen opens.

### 2 Thumbnails

- Thumbnails edit window opens.

### 3 +

- Page is added to Home Screen.

#### Note

- In thumbnails edit window, Tap  to delete pages.
- Moving Home Screen Pages

In thumbnails edit window, Touch & Hold page → Drag to location

## Changing Notification Tones

### 1 In Home Screen, Settings → Sound

### 2 Other notification tone → Tap tone → APPLY

- Notification tone is changed.

## Changing Font Sizes

### 1 In Home Screen, Settings → Display

### 2 Font size → Tap size

- Font size is set.

## Adjusting Display Brightness

### 1 In Home Screen, Settings → Display

### 2 Brightness → Drag slider left/right to adjust → OK

- Tap Automatic brightness to set brightness automatically based on surrounding brightness.

# 10 File Sharing

## Sharing Files with Wi-Fi Direct

Use a Wi-Fi network to connect with wireless devices. Once connected, files can be quickly shared.

### 1 In Home Screen, Settings → for Wi-Fi ()

- Wi-Fi is enabled.
- Tap  to disable Wi-Fi (.

### 2 Wi-Fi

- Wi-Fi settings appear.

### 3 Wi-Fi direct

- Wi-Fi Direct settings open.
- Only either Wi-Fi Direct or Wi-Fi can be used at any one time.

### 4 Tap device to connect

### 5 Permit connection on other device

- Devices are connected.

### 6 Transfer data from other device

- Data is received.

### Note

#### ● Sending Data

**Set the application to send by Wi-Fi Direct → Tap other device receiving data**

#### ● Ending Wi-Fi Direct Connection

**In Wi-Fi Direct settings, Tap connected device → OK**

- Files can be shared without pairing the other device if it is on the same network and has Wi-Fi Direct enabled.

## Sharing Files with Bluetooth®

### 1 In Home Screen, Settings → for Bluetooth ()

- Bluetooth® is enabled.
- Tap  to disable Bluetooth® (.

## 2 Bluetooth

- Bluetooth® settings open.

## 3 SEARCH FOR DEVICES

- Found Bluetooth® devices appear in AVAILABLE DEVICES.

## 4 Tap device to pair/connect

## 5 Follow onscreen prompts

- Name of paired/connected Bluetooth® device appears in PAIRED DEVICES.
- If necessary, enter Bluetooth® passkey (authentication code). The same Bluetooth® passkey must be entered on any two devices exchanging data.

See the device user guide for the Bluetooth® passkey.

## 6 Send data from other device → Accept

- Data is received.

### Note

- Sending Data

**Set the application to send by Bluetooth® → Tap other device receiving data**

- Unpairing Devices

**In Bluetooth® settings,  for paired device → Unpair**

- Available when connected to Bluetooth®-compatible device.

## Sharing Files by Computer

Use Micro USB Cable (sold separately) to connect tablet with a computer. Follow onscreen prompts to select a connection method for sharing files.

Connection mode	Function	Steps
Media device (MTP)	View and manage files in internal storage and microSD Card from a computer.	Click new drive name appearing on computer. Transfer files between internal storage or microSD Card and computer.

	View and manage multimedia files in internal storage and microSD Card from a computer using Windows Media Player 11 or later.	Activate Windows Media Player on computer. Follow onscreen prompts on tablet to transfer multimedia files between internal storage or microSD Card and computer.
USB flash drive	View and manage files saved on microSD Card from a computer.  ● Available when microSD Card is installed in tablet.	Click new drive name appearing on computer. Transfer files between microSD Card and computer.

# 11 Contacts

## Adding Contacts

Use the Contacts application to manage contacts information including names, phone numbers, and email addresses.

### 1 In Home Screen, Contacts

- Contacts opens.

### 2

- If confirmation appears, follow onscreen prompts.

### 3 Enter required items

- Tap  to delete a selected item's entry field.
- Tap  in Name field to enter a name prefix, middle name, etc.
- Tap Mobile or Home for entry fields to select labels (categories).
- Tap Add another field to add an address, notes, etc.

### 4 SAVE

## Syncing Contacts

Sync contacts saved to a Gmail or Exchange account with tablet.

### 1 In Home Screen, Settings

### 2 Tap account type in ACCOUNTS field → Tap account to sync

### 3 Tap Sync Contacts

- Sync settings are made.

### Note

- If no account is listed for syncing with tablet, Tap Add account and add an account. Accounts are synced automatically once the account is added.

## Importing Contacts

Import contacts from microSD Card.

### 1 In Home Screen, Contacts

- Contacts opens.

**2** **☰** → **Import/Export** → **Select where to import to** → **Follow onscreen prompts**

- Contacts are imported.

## Backing Up Contacts

Back up contacts to internal storage or microSD Card as a precaution to contacts being accidentally erased or lost.

**1** **In Home Screen, Contacts**

- Contacts opens.

**2** **☰** → **Import/Export** → **Export to storage** → **Export** → **Tap contacts** → **OK**

- Contacts are exported.

## Sharing Contacts

Use email and Bluetooth® to share contacts saved in tablet.

**1** **In Home Screen, Contacts**

- Contacts opens.

**2** **Tap contact to share** → **☰** → **Share** → **Tap application** → **Follow onscreen prompts**

- Contact is sent.

# 12 Tablet Settings

## Wi-Fi Settings

Select from detected Wi-Fi networks.

### 1 In Home Screen, Settings → for Wi-Fi ()

- Wi-Fi is enabled.
- Tap  to disable Wi-Fi (.

### 2 Wi-Fi

- Wi-Fi settings appear.

### 3 Tap access point → Enter password → Connect

- Tablet is connected.
- Password (indicated by WEP, WPA, KEY, etc.) may be found on a label on your Wi-Fi router. For details, contact the vendor of the router. For public wireless LAN services, inquire about the password with your ISP.
- Omit password entry for unprotected access points.

#### Note

- If both a Wi-Fi network and a mobile network are available, tablet connects to the Wi-Fi network first. If Wi-Fi becomes disconnected, tablet connects to the mobile network.
- To connect to a Wi-Fi network that uses a hidden SSID,  → Add network → Enter required network information (SSID etc.) to connect.
- Using WPS (push-button) to Connect  
In Wi-Fi settings,  → WPS Push Button → Press push-button on access point → OK
- Using WPS (WPS PIN) to Connect  
In Wi-Fi settings,  → Input WPS PIN → Enter WPS PIN shown on tablet in access point
- Connecting to Wi-Fi Direct-Capable Device to Transfer Data  
In Wi-Fi settings, Wi-Fi direct → Tap device → Permit connection on other device

## Advanced Wi-Fi Settings

---

Make detailed Wi-Fi settings. Settable items are the following.

Item	Description
Network notification	Set whether tablet notifies that an available access point is detected. <ul style="list-style-type: none"><li>● Add a checkmark so that tablet makes this notification when Wi-Fi is enabled and tablet is not connected to an access point.</li></ul>
Keep Wi-Fi on during sleep	Set whether Wi-Fi connection is maintained even while tablet Display is off.
Avoid poor connections	Set whether to switch automatically to a mobile network when a Wi-Fi connection is poor.
Install certificates	Install Wi-Fi authentication certificates.
MAC address	Check MAC address.
IP address	Check IP address.

### 1 In Wi-Fi settings, → Advanced

- Advanced settings open.

### 2 Check/set each item

- Check or make detailed settings.

## Bluetooth Settings

Connect to a Bluetooth<sup>®</sup>-compatible mobile phone to transfer data, or connect a headset or other handsfree device. First, enable Bluetooth<sup>®</sup>, and then make settings in Bluetooth settings.

### 1 In Home Screen, Settings → for Bluetooth ()

- Bluetooth<sup>®</sup> is enabled.
- Tap  to disable Bluetooth<sup>®</sup> (.

### 2 Bluetooth

- Bluetooth<sup>®</sup> settings open.

## Pairing/Connecting

---

Pair or connect with another device<sup>®</sup> for data transfers.

### 1 In Bluetooth<sup>®</sup> settings, SEARCH FOR DEVICES

- Found Bluetooth<sup>®</sup> devices appear in AVAILABLE DEVICES.

### 2 Tap device to pair/connect

### 3 Follow onscreen prompts

- Name of paired/connected Bluetooth<sup>®</sup> device appears in PAIRED DEVICES.
- If necessary, enter Bluetooth<sup>®</sup> passkey (authentication code). The same Bluetooth<sup>®</sup> passkey must be entered on any two devices exchanging data. See the device user guide for the Bluetooth<sup>®</sup> passkey.

#### Note

##### ● Changing Tablet Name

In Bluetooth<sup>®</sup> settings,  → Rename tablet → Enter name → Rename

##### ● Setting Time that Tablet is Visible to Other Devices

In Bluetooth<sup>®</sup> settings,  → Visibility timeout → Tap setting

##### ● Viewing Files Received by Bluetooth<sup>®</sup>

In Bluetooth<sup>®</sup> settings,  → Show received files → Follow onscreen prompts

##### ● Changing Names of Paired Devices

In Bluetooth<sup>®</sup> settings,  for paired device → Rename → Enter name → OK

- Emoji are not available.

- Available when connected to a Bluetooth<sup>®</sup>-compatible device.

##### ● Unpairing Devices

In Bluetooth<sup>®</sup> settings,  for paired device → Unpair

- Available when connected to Bluetooth<sup>®</sup>-compatible device.

## Sending Data

---

Send data including contacts, photos, and videos to another Bluetooth<sup>®</sup>-compatible device.

Enable Bluetooth<sup>®</sup> on tablet and pair with other device beforehand.

### 1 On the application's menu, Bluetooth

### 2 Tap other device

- After operating other device to receive data, data is sent.
- After data is sent,  appears in Notification Bar.

## Receiving Data

---

Enable Bluetooth® on tablet and pair with other device beforehand.

### 1 Send data from other device

-  appears in Notification Bar, and screen indicating a file was forwarded appears.

### 2 Accept

- Data is received.
- After data is received,  appears in Notification Bar.

## Mobile Network Settings

Set network, carrier, etc. Settable items are the following.

Item	Description
Data service	Set whether to enable data transmission via mobile networks.
Data roaming	Set whether to enable data transmission during roaming.
Network Mode	Set type of networks to connect to.
Network switch reminder	Set whether to switch to a mobile network if Wi-Fi is disconnected.
Enable always-on mobile data	Set whether to always enable data access via mobile networks.
Access Point Names	Add, edit, and delete access points. Also, switch access points.
Network operators	Tablet is set by default to connect to an appropriate carrier (network); use to manually connect to a carrier.

### 1 In Home Screen, Settings → Mobile networks

- Mobile network settings open.

### 2 Set each item

- Settings are made.

## More Settings

Set operation of other functions. Settable items are the following.

Item	Description
Airplane mode	Disable all signal-emitting functions. Tablet remains on.
Data usage	For details, see "Data Usage Operations" (p. 82).
Default SMS app	Set application to use for SMS.
VPN	Add a VPN.

### 1 In Home Screen, **Settings** → **More**

- More settings open.

### 2 Set each item

- Settings are made.

## Data Usage Operations

---

Check data transmission usage and limit usage. Settable items are the following.

Item	Description
Mobile data	Set whether to enable data transmission.
Set mobile data limit	Set an upper limit and alert data level for data usage.

Data usage cycle	<p>Set a reset date for data usage.</p> <ul style="list-style-type: none"> <li>● Tap Data usage cycle field → Change cycle → Select reset date → Tap Set to set reset data and change data usage cycle.</li> <li>● Data usage for up to one month previous is viewable after a reset.</li> <li>● Drag vertical bars on graph to view applications transmitting data during the specified period and data usage.</li> <li>● The orange horizontal bar is an alert data usage, and the red horizontal bar is a limit data usage. Drag right end of bars to move up/down. When data usage reaches these values, alert appears or transmission becomes limited.</li> <li>● The red horizontal bar is available when Set mobile data limit is enabled.</li> <li>● Tap an application name to view details for the application.</li> </ul>
------------------	--

## 1 In More settings, Data usage

- Data usage settings open.

## 2 Set/check each item

- Check or make data usage settings.

# Display Settings

Set Wallpaper, Display brightness, etc. Settable items are the following.

Item	Description
Brightness	Set Display brightness.
Wallpaper	Set Wallpaper in Home Screen.
Smart Back Light	Set tablet not to enter sleep mode while held.
Sleep	Set time until Display turns off after period of no operation.
Daydream	Enable/disable screensaver, set activation conditions, etc.
Font size	Set size of onscreen text.

## 1 In Home Screen, Settings → Display

- Display settings open.

## 2 Set each item

- Settings are made.

## Sound Settings

Set silent mode, ringtone, operational tones, etc. Settable items are the following.

Item	Description
Volume	Set volume of notification tone, alarm, etc.
Silent mode	Place tablet in silent mode.
Vibrate in silent mode	Set whether tablet vibrates in silent mode.
Other notification tone	Set normally-used notification tone.
SWS mode	Toggle SWS sound mode on/off.
Touch sounds	Set whether operation tones sound when menu Tapped.
Screen lock sound	Set whether tone sounds when screen locked/unlocked.
Screenshot tone	Set whether tone sounds when screenshot captured.
Vibrate on touch	Set whether tablet vibrates when  ,  ,  , etc. Tapped.

### 1 In Home Screen, Settings → Sound

- Sound settings open.

### 2 Set each item

- Settings are made.

#### Note

- SWS (Super Wide Sound) is an originally-developed sound mode by Huawei. Enable SWS during video and music playback for expansive sound.

## Storage Settings

Check internal storage and microSD Card memory space, erase data, and mount microSD Card. Settable items are the following.

Item	Description
Tablet storage	View total and available space in internal storage.
Total space	View total and available space in internal storage or USB storage.
Erase internal storage	Initialize internal storage.

Unmount SD card / Mount SD card	Mount or unmount microSD Card.
Erase SD card	Initialize microSD Card.
Unmount USB storage / Mount USB storage	Mount or unmount USB storage.
Erase USB storage	Initialize USB storage.

### 1 In Home Screen, **Settings** → **Storage**

- Storage settings open.

### 2 **Check/set each item**

- Check or make storage settings.

## Battery Settings

Set battery level indication, and view battery draw and usage times.

### 1 In Home Screen, **Settings** → **Battery**

- Battery settings open.

### 2 **Tap each item**

- View battery powering.

#### **Note**

- Tap Remaining battery percentage in battery settings for battery level indication in Status Bar.

## Location Access Settings

Enable location information. Settable items are the following.

Item	Description
Access my location	Permit applications to use location information.
Location mode	Set mode for obtaining location.
Google Location Reporting	This function allows Google to regularly save and use latest current location for devices linked to a Google account.

### 1 In Home Screen, **Settings** → **Location access**

- Location access settings open.

## 2 Set each item

- Settings are made.

# Security Settings

Set screen lock, SIM card lock, etc. Settable items are the following.

- Appearing items differ depending on Screen lock setting.

Item	Description
Screen lock	Set screen lock.
Notification panel	Set whether Notifications Window can be accessed from Huawei unlock screen.
Improve face matching	Increase the accuracy of face recognition.
Liveness check	Set whether blinking is required for face recognition.
Make pattern visible	Set whether traced pattern is visible when unlocking screen.
Dual clocks	Set two clocks (Japan and roaming destination) to appear on locked screen during roaming. (Screen lock is setting other than Not locked)
Automatically lock	Set time until screen locks after Display turns off after period of no operation.
Power button instantly locks device	Set whether screen can be locked by Power Key.
Owner info	Set whether owner information appears on locked screen.
Set up SIM card lock	Set microSIM card lock.
SD card lock	Set whether to lock microSD Card.
Make passwords visible	Set whether entered characters are visible when entering password.
Device administrators	View or deactivate device administrators.
Unknown sources	Allow installation of applications from unknown sources.

Verify apps	Disallow installation of applications that may be harmful or show warning before installation.
Storage type	Credentials are maintained in internal storage.
Trusted credentials	Show trusted credentials.
Install from SD card	Install encrypted certificates from microSD Card.
Clear credentials	Delete all certificates.

## 1 In Home Screen, Settings → Security

- Security settings open.

## 2 Set each item

- Settings are made.

# Backup & Reset

Set data backup or reset tablet.

Item	Description
Back up my data	Set whether to back up settings and data from Google services and third-part applications to a Google server.
Backup account	Set a Google account for backing up settings and data to.
Automatic restore	Set whether to restore backed up settings and data when reinstalling an application.
Factory data reset	Erase all data on tablet including set Google accounts and downloaded applications and restore tablet to defaults.

## 1 In Home Screen, Settings → Backup & reset

- Backup & reset settings open.

## 2 Set each item

- Settings are made.

### Note

- Back up all important data before initializing data.

# Adding Accounts

Add or create new accounts, and sync accounts.

## 1 In Home Screen, Settings → Add account

- Add account settings open.

## 2 Tap account to add → Follow onscreen prompts

- Account is added.

### Note

- Setting Applications to Sync per Each Account

In add account settings, Tap account type → Tap account to sync → Select items to sync

- Tap item to toggle enabled () / disabled ()

## Adding a Google Account

---

Add a Google account to tablet.

## 1 In Home Screen, Settings → Add account

- Add account settings open.

## 2 Google → Existing or New

## 3 Follow onscreen prompts

- Google account is saved.

## Managing Applications

Check installed and running applications. Settable items are the following.

Item	Description
DOWNLOADED	Check downloaded applications.
ON SD CARD	Check applications on microSD Card.
RUNNING	Check running applications.
ALL	Check all applications.

## 1 In Home Screen, Settings → Manage apps

- Manage apps opens.

## 2 Check each item

- Check applications.

## Email Settings

Save accounts to the Email application.

### 1 In Home Screen, Settings → Email

- Email settings open.

### 2 Follow onscreen prompts

- Email account is saved.

#### Note

- After saving an email account, email account settings open.

## Suspend Button Settings

Set whether to use the Suspend Button.

### 1 In Home Screen, Settings → Suspend button

- Suspend Button settings open.

### 2 ( )

- Suspend Button is enabled.
- Tap  to disable Suspend Button (  ).

## Date & Time Settings

Make date and time settings. Settable items are the following.

Item	Description
Automatic date and time	Set the date and time automatically.
Set date	Set the date manually. Available when Automatic date and time is disabled (  ).
Set time	Set the time manually. Available when Automatic date and time is disabled (  ).
Automatic time zone	Set whether to use the time zone provided by the network.
Select time zone	Set the time zone manually. Available when Automatic time zone is disabled (  ).

Use 24-hour format	Set whether to show 24-hour time.
Select date format	Set the date formatting.

## 1 In Home Screen, Settings → Date & time

- Date and time settings open.

## 2 Set each item

- Settings are made.

# Language & Input Settings

Make settings for display language and text input. Settable items are the following.

- Appearing items differ depending on how tablet is being used.

Item	Description
Language	Set display language.
Spelling correction	Set whether to check spelling when entering text.
Personal dictionary	Save words to a user dictionary.
Default	Set the input method to use.
Android Keyboard (AOSP)	Set operation of Android Keyboard (AOSP).
Google Keyboard	Set operation of Google Keyboard.
FSKAREN for Huawei	Set operation of FSKAREN for Huawei.
Google voice typing	Set whether to use voice input.
Voice search	Make advanced settings for voice searching.
Text-to-speech output	Make advanced settings for text-to-speech.
Pointer speed	Set speed of mouse/trackpad.

## 1 In Home Screen, Settings → Language & input

- Language and input settings open.

## 2 Set each item

- Settings are made.

## Accessibility Settings

Make settings for user accessibility. Settable items are the following.

Item	Description
TalkBack	Set TalkBack. ● TalkBack is a screen reader to assist the visually-impaired that reads out information on the screen.
Captions	Set whether to show captions.
Magnification gestures	Set whether to enlarge or shrink the screen by Tapping Display three times.
Large text	Set whether to enlarge onscreen text.
Auto-rotate screen	Set whether to automatically rotate the screen.
Speak passwords	Set whether passwords are speech-output.
Accessibility shortcut	Set whether accessibility functions are available through shortcuts.
Text-to-speech output <sup>1</sup>	Make settings for text-to-speech.
Touch & hold delay	Set delay for Touching & Holding Display.

<sup>1</sup> As of December 2014, no Japanese-language support.

### 1 In Home Screen, Settings → Accessibility

- Accessibility settings open.

### 2 Set each item

- Settings are made.
- If confirmation appears, follow onscreen prompts.

## About Tablet

Check tablet status. Viewable/settable items are the following.

Item	Description
System updates	Make system update settings.
Model number	Check model number.
CPU	Check CPU.
RAM	Check RAM.

Tablet storage	Check internal storage.
Resolution	Check resolution.
Android version	Check Android version.
Emotion UI version	Check Emotion UI version.
Baseband version	Check baseband version.
Kernel version	Check kernel version.
Build number	Check build number.
Status	Check tablet status.
Approval	Check certification.
Terminal Device Information	Check nameplate information.
Legal information	Check legal information.

## 1 In Home Screen, Settings → About tablet

- Tablet information opens.

## 2 Check/set each item

- Check or set tablet information.

### Note

- Available options are intended for developers. Do not change the settings unless you are developing applications, etc.; may result in tablet malfunction.

**In Home Screen, Settings → About tablet → Tap Build number seven times**

- Then, in Home Screen, Settings → Developer options to access developer options.

# 13 Troubleshooting

If symptoms continue even after checking, contact a nearby SoftBank Shop or Customer Service (p.96).

Symptom	To check/remedy
Freezes/operation unstable	<ul style="list-style-type: none"><li>● Power tablet off then back on. If tablet cannot be powered off, Long-Press Power Key for 13 seconds to restart tablet. Any data that was being edited will be erased.</li></ul>
Operation unstable after installing new application	<ul style="list-style-type: none"><li>● A newly installed application may be the cause. Uninstall the application in safe mode (p. 30). To power tablet on in safe mode: <b>Long-Press Power Key (1 second or more) → Touch &amp; Hold Power off → Confirm indication and Tap OK</b></li><li>● When powered on in safe mode, "Safe mode" appears at lower left.</li><li>● Restarting tablet while in safe mode powers tablet on in normal mode.</li><li>● Before powering tablet on in safe mode, be sure to back up required data.</li><li>● When powered on in safe mode, added widgets may be deleted.</li></ul>

Cannot use email/Internet	<ul style="list-style-type: none"> <li>● Check whether in location with poor signal or out of service area.</li> <li>● Power tablet off then back on.</li> <li>● Is tablet in airplane mode? To check whether airplane mode is enabled: <b>In Home Screen, Settings → More → Airplane mode</b> (🛩️)</li> <li>● Is data transmission disabled? To check whether data transmission is enabled: <b>In Home Screen, Settings → Mobile networks → Data service</b> (📶)</li> <li>● Is a disabled access point set? To return to initial settings: <b>In Home Screen, Settings → Mobile networks → Access Point Names → ☰ → Reset to default</b></li> </ul>
Battery depletes quickly	<ul style="list-style-type: none"> <li>● Has tablet been in location with poor signal or out of service area for a long period? Using tablet where signal is poor or out of service area depletes battery quickly.</li> </ul>
Cannot install application	<ul style="list-style-type: none"> <li>● Applications cannot be installed with only little space in internal storage or on microSD Card. Check available space (p.84).</li> <li>● Applications not supported by tablet cannot be installed.</li> </ul>
Cannot unlock screen	<ul style="list-style-type: none"> <li>● Power tablet off then back on.</li> </ul>

# 14 Specifications

## Tablet

Item	Description
Weight	Approx. 640 g (with Internal Battery)
Continuous Standby Time	Approx. 700 hours (3G, GSM) Approx. 600 hours (4G)
Charging Time	Approx. 320 minutes
Dimensions (W x H x D)	Approx. 257.4 × 176 × 9.9 mm
Maximum Output	2.1 W (3G) 1.3 W (GSM 1800/1900) 1.3 W (GSM 900) 2.3 W (4G)
Maximum Transmission Speed <sup>1</sup>	SoftBank 4G LTE: (FDD-LTE)112.5 Mbps <sup>2,3</sup> in downlink / 37.5 Mbps <sup>2,3</sup> in uplink SoftBank 3G: 21 Mbps <sup>3</sup> in downlink / 5.7 Mbps <sup>3</sup> in uplink

- <sup>1</sup> Provided on a best-effort basis; transmission speed may decrease or transmission may become unavailable due to traffic conditions, network environment, etc.
- <sup>2</sup> Depending on area, maximum downlink speed is set to 75 Mbps or 37.5 Mbps, and maximum uplink speed to 25 Mbps. For Network coverage information, see SoftBank Mobile Website.
- <sup>3</sup> Maximum transmission speed varies by area.

### Note

- Voice calling, video calling, and 64 K digital data transmission are unsupported.

# 15 Customer Service

For SoftBank tablet or service information, call General Information. For repairs, call Customer Assistance.

## SoftBank Customer Support

### General Information

From a SoftBank handset, dial toll free at 157

From a landline/IP phone, dial toll free at ☎ 0800-919-0157

### Customer Assistance (Repairs/Lost Tablets)

From a SoftBank handset, dial toll free at 113

From a landline/IP phone, dial toll free at ☎ 0800-919-0113

If you cannot reach a toll free number, use the number (charges apply) below for your service area:

Hokkaido Area, Tohoku Area, Hokuriku Area, Kanto & Koshinetsu Area	022-380-4380
Tokai Area	052-388-2002
Kansai Area	06-7669-0180
Chugoku Area & Shikoku Area, Kyushu & Okinawa Area	092-687-0010

## Smartphone Technical Support Center

For tablet operation assistance

From a SoftBank handset, dial toll free at 151

From a landline/IP phone, dial toll free at ☎ 0800-1700-151

## SoftBank Mobile Global Call Center

From outside Japan, dial +81-92-687-0025 (toll free from SoftBank handsets)

If tablet is lost/stolen, call this number immediately (international charges apply)

THIS DOCUMENT IS FOR INFORMATION PURPOSE ONLY, AND DOES NOT  
CONSTITUTE ANY KIND OF WARRANTIES.

1st edition, published by SoftBank Mobile Corp., February 2015

Manufacturer: HUAWEI TECHNOLOGIES CO., LTD.