# Introduction

Thank you for purchasing the V302SH.

- For proper handset use, read this manual beforehand.
- For instructions on how to use Vodafone live!, see Vodafone live! manual.
- Keep this manual in a convenient place for reference.
- Accessible Vodafone services may vary by service area, subscription, etc.

V302SH transmits at 1.5 GHz and is compatible with the Vodafone K.K. network.

This product is exclusively for use in Japan.

#### Note

- Copying this manual in whole or part without authorization is prohibited.
- Manual content is subject to change without prior notice.
- Efforts have been made to ensure the accuracy and clarity of this manual. Please contact Customer Service, General Information (see P.14-20) concerning unclear or missing information.

# **Symbols**


#### **Multi Selector**

Use Multi Selector to select menu items, move cursor, scroll, etc.

In this manual, Multi Selector operations are indicated as shown to the right.

#### Basic Multi Selector Operations


- ( ): Press ( ) or ( )
- •••): Press •••) or •••
- . Press . o, . o or .

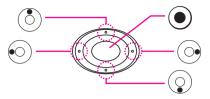

### Side Kev

Use Side Key to activate specified functions with handset closed or to release shutter. In this manual. Side Key is indicated as shown to the right.

"S" is not inscribed on the actual Shutter Key.

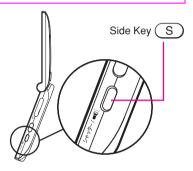




- In this manual, most operations are described with handset open.
- Sample screen shots, etc. are provided for reference only. Actual handset windows, menus, etc. may differ in appearance.

### Page References

When **O** appears next to a page reference, indicated pages are in Vodafone live! Manual. When only the page numbers appear, indicated pages are in Basic Operations Manual.

### **Abbreviated Steps**

Handset operations starting from Index Menu are abbreviated as follows:

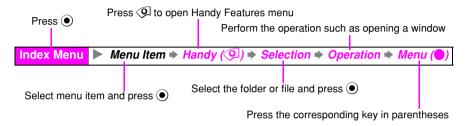

# **Accessories**

■ Battery (SHBAD1)\*
(Type 1 lithium-ion battery)

Rapid Charger (SHCQ01)\*





### **Optional Accessories**

Headphones

In-Car Charger



For accessory-related information, please contact Vodafone Customer Center, General Information (see **P.14-20**).

<sup>\*</sup>May also be purchased separately.

# **Contents**

Accessories Contents Safety Precautions	
	xxi te (SAR)xxiv
1 Getting Started	Function & Feature Preview       1-2         Handset Parts & Functions       1-4         ■ Handset       1-4         ■ Display Indicators       1-7         ■ Sub Display Indicators       1-9         Battery & Charger       1-10         ■ Installing & Removing Battery       1-14         ■ Rapid Charger       1-16         ■ In-Car Charger       1-17         Handset Power On/Off       1-18         ■ Key Guard       1-19         Clock Settings       1-20         Handset Menus       1-21         ■ Index Menu       1-21         ■ Functions Menu       1-22         ■ Soft Keys       1-23         ■ Quick Operations       1-24         ■ Guide       1-25         Handset Codes       1-26         ■ Security Code       1-26         ■ Center Access Code       1-26
2 Basic Handset Operations	Initiating a Call       2-2         ■ Redial       2-4         ■ International Call & Send With Code       2-5         ● Setup Preset       2-5         ● International Call & Send With Code       2-5         ■ Emergency Calls       2-5         Incoming Call       2-6         ■ Call History       2-7         Handling Incoming Calls       2-8         ■ Placing Callers on Hold       2-8         ■ Quick Recorder       2-9         Delayed Ringer       2-10

	Engaged Call Operations2-11
	Earpiece Volume2-11
	■ Voice Memo2-12
	■ Notepad Memory2-13
	Opening Entries2-13
	Redial & Call History2-14
	<ul><li>Delete2-14</li></ul>
	Simple Mode2-16
	Activating/Canceling Simple Mode2-16
	Simple Mode Operations2-17
	Call Time2-19
	<ul><li>Reset2-19</li></ul>
	Instant Display2-19
	Call Charge2-20
	Reset2-20
	Instant Display2-20
	My Number & Owner Profile2-21
	Edit, Delete & Copy2-21
Manner	Minding Mobile Manners3-2
- Carlotte and the Carl	Manner Mode3-3
✓ Mode	Activating & Canceling3-3
	Manner Mode Settings3-4
	Message Recorder3-4
	Ring Tone Level3-4
	<ul><li>Vibration3-4</li></ul>
	<ul><li>LED Indicator3-5</li></ul>
	<ul> <li>Whisper Mode3-5</li> </ul>
	Sound Volume3-5
	<ul><li>V-Appli Volume3-5</li></ul>
	<ul><li>V-Appli Vibration3-5</li></ul>
	0"11 11 1
	Off-Line Mode3-6
Entering	Character Selection4-2
4 Entering	
Entering Characters	Character Selection4-2
<mark>/                                    </mark>	Character Selection
<mark>/                                    </mark>	Character Selection4-2■ Entry Modes4-2■ Key Assignments4-3
<mark>/                                    </mark>	Character Selection       4-2         ■ Entry Modes       4-2         ■ Key Assignments       4-3         Entering Characters       4-4         ■ Kanji, Hiragana & Katakana       4-4         ■ Entering Alphanumerics       4-6
<mark>/                                    </mark>	Character Selection       4-2         ■ Entry Modes       4-2         ■ Key Assignments       4-3         Entering Characters       4-4         ■ Kanji, Hiragana & Katakana       4-4
<mark>/                                    </mark>	Character Selection       4-2         ■ Entry Modes       4-2         ■ Key Assignments       4-3         Entering Characters       4-4         ■ Kanji, Hiragana & Katakana       4-4         ■ Entering Alphanumerics       4-6
<mark>/                                    </mark>	Character Selection4-2■ Entry Modes4-2■ Key Assignments4-3Entering Characters4-4■ Kanji, Hiragana & Katakana4-4■ Entering Alphanumerics4-6■ Symbols, Pictographs & Emoticons4-7
<mark>/                                    </mark>	Character Selection.4-2■ Entry Modes.4-2■ Key Assignments.4-3Entering Characters.4-4■ Kanji, Hiragana & Katakana.4-4■ Entering Alphanumerics.4-6■ Symbols, Pictographs & Emoticons.4-7■ Mail & Web Extensions.4-8

Phonetic Conversion  One-Hiragana Conversion  Hiragana to Katakana/Alphanumerics Conversion	4-12
■ Hiragana to Katakana/Alphanumerics Conversion	4 40
Outlete On a serve and a serve and a serve and a	
Quick Conversion (for Hiragana)	
Conversion Settings	
Disable Predictive/Previous Usage	
Reset Learning	
Dictionaries (Japanese Only)	
■ User Dictionary  New Entry	
New Entry      Edit	
■ V302SH Download Dictionary	
Acquire Dictionary	
Cancel	
Editing Characters	
■ Deleting	
Replacing	
Copy/Cut & Paste	
Deleting Text Before or After Cursor	
Text Memo	
Edit/Delete	
Phone Book Overview	5-2
Saving to Phone Book	
Phone Book Entry Items	
New Phone Book Entries	
Photo	5-6
Saving Secret Mode Entries	5-7
Saving from Redial or Call History	
Phone Book Memory Status	
Option Settings	5-9
Overview	5-9
Setting Options	5-10
Personal Ring Tone & Incoming Notice	5-10
Mail Folder	5-10
Using Phone Book	5-11
Dialing from Phone Book	
Phone Book Search	5-12
Momori Na Casish	
Memory No. Search	5_13
Katakana Search	
Katakana Search      Group Search	5-13
Katakana Search     Group Search     Search by Reading	5-13 5-13
Katakana Search      Group Search	5-13 5-13 5-14

Editing Phone Book5-15
Correction/Change5-15
Deleting Entries5-15
Group Settings5-16
Changing Group Name5-16
Group Ring Tone5-16
Getting Started6-2
File Formats & Save Locations6-2
Mobile Camera Basics6-2
■ Camera Display Indicators6-3
■ Viewfinder & Key Assignments6-4
Still Images6-5
Still Image Modes6-5
Capturing Still Images6-7
<ul><li>Add to Phone Book6-7</li></ul>
Save As Thumb6-7
Rotate Thumb6-7
Still Image Functions6-8
Self Timer6-9
Adding Frames6-10
Lens Effects6-11
Burst Mode6-11
Video6-13
■ Video Mode6-13
Recording Video6-14
■ Video Recording Operations6-15
Shooting Options6-16
Toggle Preview6-16
Shutter Click6-16
Mobile Light6-17
• Anti-Flicker6-17
Image Settings6-18
• Brightness6-18
• Soft Focus6-18
• Image Size6-18
Image Quality6-18
• Save As6-19
Mic Settings6-19
Additional Settings6-20
Select Mode6-20
Save to6-20
• Auto Reset6-20
Key Ops Guide6-20

vi vii

Mobile	Opening Images & Playing Video	6-21
Camera	Opening Still Images	6-21
Camera	Playing Video	6-21
	Memory Status	6-22
	Sending Still Images	
	Sha-mail Mode Images	6-22
	■ Wallpaper Mode Images	6-23
	Camera Mode Thumbnails	6-24
	Postcard & Calendar	6-25
	Postcard	6-25
	Calendar	6-26
Display	Wallpaper	7-2
Display	Clock & Calendar	
•	Clock Display	7-3
	Calendar	
	Display Images	
	Fonts	
	Display Patterns	
	Light Settings	
	Brightness	
	<ul><li>In-Car Backlight</li></ul>	
	Sub Display Settings	
	<ul><li>Sub Display On/Off</li></ul>	
	Backlight Settings	
	Adjust Contrast	
	Recipient Display	
	Other Display Settings	
	Language	
	Power On Message	
	Vodafone live! Animation	
	Mail Background	
	Screen Animation	
	Disney Style	
	Incoming Light	
	Call Functions	
Sounds &	Ring Tone Level	
Related	Ring Tone	
Functions	Handset Vibration	
	Mobile/Small Light	
	Ring Time	
	Sound Effects	
	Sounds	
	Basic Sound Settings	
	Sound Volume/Set LED to Sound	
	Original Voice	0-7

	Original Ring Tones8-8
	Basics8-8
	Creating an Original Ring Tone8-12
	Editing an Original Ring Tone8-14
	■ Deleting an Original Ring Tone8-16
	Instrument Effects8-16
	■ Basics8-16
	Creating Instrument Effects8-20
	Other Sound Related Functions8-21
	Speaker Phone/Speaker8-21
	Tone Octave8-21
Managing Files	File Organization9-2
	Data Folder9-3
(Data Folder)	Contents9-3
	■ Window Description9-3
	■ Icons9-4
	■ Display Settings9-5
	Opening Files9-6
	Handset Data Folder9-6
	Sending Files via Long Mail9-7
	Properties9-8
	Animation File9-8
	Simple Animation9-8
	Opening Animation Files9-10
	Using Images & Animation9-10
	Changing Display Size9-10
	Setting Image & Animation as Wallpaper9-11
	Setting Image & Animation as Display Images9-11
	Saving Burst Shot Images9-11
	■ Slide Show9-12
	Editing Images9-12
	Enlarging/Reducing Image9-12
	Changing Image Size9-13
	Marker Stamp9-14
	Visual Effects9-15
	Face Arrange9-16
	Additional Picture Effects9-18
	• Frame9-18
	90° turn9-18
	Moving Photo Frame9-19
	Change File Format9-19
	Combining Images9-19
	Split Screen9-19
	Panorama Images9-21
	Combining Split Mail Images9-22

viii

9 Managing Files (Data Folder)	Melody Files       9-22         ■ Playback Volume       9-22         ■ Using for Incoming Tone/Sound Effects       9-23         Editing Files & Folders       9-23         ● Changing Folder/File Name       9-23         ● Secret Mode       9-24         ● Copy/Move       9-24         ● Delete       9-24
10 Infrared	Getting Started.       10-2         ■ Available Files.       10-2         ■ Precautions.       10-3         Set IR Password.       10-3         Transferring Files.       10-4         ■ One File Transfer.       10-4         ■ All File Transfer.       10-5
11 Handset Security	Changing Security Code       11-2         Handset Locks       11-2         ■ Keypad Lock       11-3         ■ Auto Key Lock       11-3         ■ Phone Book Lock       11-3         ■ Restrict Dial       11-4         Accept Call & Reject Call       11-4         ■ Saving Entries       11-4         ■ Accept Call       11-5         ■ Reject Call       11-5         ■ Rejecting Other Calls       11-6         Secret Mode       11-6         ■ Activating Secret Mode       11-6         ■ Opening Secret Mode Entries       11-7         ■ Reset Defaults       11-7         ■ Reset All       11-7
12 Additional Functions	Handy Call Functions       12-2         ■ Signal Alert       12-2         ■ Push Tones       12-2         Side Key Settings       12-3         ■ For Incoming Calls       12-3         ■ Standby ⑤       12-3         Message Recorder       12-4         ■ Activating       12-4         ■ Deactivating       12-5         ■ Playing Messages       12-5         Voice Memos       12-6

Alarm	12-7
Setting Alarm	12-7
Alarm Options	12-9
Canceling & Reactivating Alarm	
<ul><li>Cancel</li></ul>	
<ul><li>Delete</li></ul>	12-10
Settings	12-10
Auto Power On/Off	12-11
Auto Power On	12-11
Auto Power Off	12-12
Schedule	12-13
Saving Entries	12-13
Setting Alarm	
• Alarm	12-14
Schedule & Action Item Options	
Opening Entries	
Editing Entries	
Deleting Entries	
Delete Item	
One Day Schedules	
Delete All	
Other Schedule Settings	12-19
Auto Delete	
Secret Mode	
Set Color	
<ul><li>View</li></ul>	
Event List	
Jseful Diary	
Saving Entries	
Opening Entries	
Editing Entries	
Deleting Entries	
Delete Item	
Delete All	
Stopwatch	
Kitchen Timer	
Barcode	
Create QR Codes	
Battery Saving	
Power Saving	
Panel Saving	
Calculator	
Spending Memo	
• Entry	
Totals      Delete	
Delete	
<ul><li>New Item</li></ul>	12-31

12 Additional Functions	Pen Light       12-31         ● Illuminate       12-31         ● Pen Light Settings       12-31         Headphones       12-32         ■ Initiating Calls       12-32         ■ Answering Calls       12-32         ■ Ringer Out       12-33         Fax & PC Transmissions       12-33         ● FAX Transmissions       12-33         ● PC Transmissions       12-33         ● PC Transmissions       12-33
13 Optional Services	Optional Services Overview       13-2         Call Forwarding       13-3         • Set Fwd Number       13-3         • Start Fwd       13-3         • Cancel Secretary       13-3         • Check Secretary       13-3         Voice Mail       13-4         • Voice Mail       13-4         • Cancel Secretary       13-5         • Play Voice Mail       13-5         • Ring Time       13-5         • Ring Time       13-5         • Call Waiting       13-6         • Call Waiting On/Off       13-6         • Confirm Service       13-6         • Incoming Calls       13-6         3 Way Calling       13-7         • Switch Line       13-7         • Break Away (while Switching Lines)       13-7         • Break Away (from 2 Open Lines)       13-8
14 Appendix	Function List       14-2         Troubleshooting       14-6         Character Code List       14-9         Specifications       14-13         Index       14-15         Warranty & After-Sales Services       14-19         Customer Service       14-20

# **Safety Precautions**

- Read safety precautions before using handset.
- Observe precautions to avoid injury to self or others, or damage to property.
- Vodafone is not liable for any damages resulting from use of this product.

# **Before Using Handset**

### Symbols

Make sure you thoroughly understand these symbols before reading on. Symbols and their meanings are described below:

$\triangle$	DANGER	Great risk of death or serious injury from improper use
$\triangle$	WARNING	Risk of death or serious injury from improper use
$\triangle$	CAUTION	Risk of injury or damage to property from improper use

### **■** Symbols



xii xiii

# **↑** DANGER

### Handset, Battery & Charger

### Use only the specified battery or Charger (see P.iii).

Using non-specified equipment may cause malfunctions, electric shock or fire due to battery leakage. overheating or bursting.



### Do not short-circuit Charger terminals.

Keep metal objects away from Charger terminals. Keep handset away from necklaces, hairpins, etc. Battery may leak, overheat, burst or ignite causing injury. Use a case to carry handset.



# **Battery**

### Prevent injury from battery leakage, breakage or fire. Do not:

- Heat or dispose of battery in fire
- Disassemble, modify or break batterv
- Damage or solder battery
- Use a damaged or deformed battery
- Use non-specified charger (see P.iii)
- Force battery into handset
- Charge or place battery near fire. heat sources or expose it to extreme heat
- Use battery for other equipment

If battery fluid contacts eyes, do not rub them. Rinse with clean water and consult a doctor immediately.

Eyes may be severely damaged.



# **↑**WARNING

### Handset, Battery & Charger

#### Do not insert foreign objects into handset.

Do not place metal or flammable objects in handset or Charger. This may cause fire or electric shock. Keep handset out of the reach of children.



### Keep handset out of rain or extreme humidity.

Fire or electric shock may occur.



### Keep handset away from liquid-filled containers.

Keep handset and Charger away from chemicals/liquids.

Fire or electric shock may result.




### Avoid sources of fire.

Prevent fire or explosion. Do not use handset in the presence of gas or fine particles (coal, dust, metal, etc.).




### Do not use Mobile Light near people's faces.

Evesight may be temporarily affected leading to accidents.

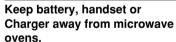

Battery or handset may leak, burst, overheat or ignite and cause accidents.


### Do not disassemble or modify handset.

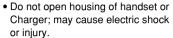

Contact Vodafone Customer Center. Customer Assistance for repairs.

• Do not modify handset or Charger. Fire or electric shock may result.

### If water or foreign matter is inside handset:

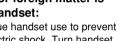

Discontinue handset use to prevent fire or electric shock. Turn handset power off, remove battery, unplug Charger and contact Vodafone Customer Center, Customer Assistance.

### Do not subject handset to shocks.


Subjecting handset or Charger to shocks may cause malfunction or


Should the handset break, remove the battery and contact Vodafone Customer Center, Customer Assistance. Discontinue handset use. Fire or electric shock may occur.

### If an abnormality occurs:

Should there be unusual sound. smoke or odor, discontinue handset use to avoid fire or electric shock. Turn handset power off, remove battery and unplug Charger and contact Vodafone Customer Center, Customer Assistance.



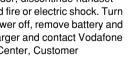

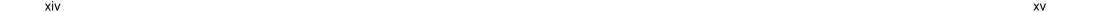

# **MARNING**

### **Handset**

### **Preventing accidents**

- For safety, never use handset while driving. Pull over beforehand.
   Mobile phone use while driving is prohibited by the revised Road Traffic Law (effective November 1, 2004).
- Do not use headphones while driving or riding a bicycle.
   Accidents may result.
- Moderate volume outside, especially at road/rail crossings to avoid accidents.



# Do not swing handset by handstrap.

May result in injury or breakage.

# Turn handset power off before boarding aircraft.

Using wireless devices aboard aircraft may cause electronic malfunctions or endanger aircraft operation.

# Adjusting vibration and Ring Tone settings:

Users with a heart condition/ pacemaker/defibrillator should adjust handset settings accordingly.

# During thunderstorms, turn power off; find cover.

There is a risk of lightning strike or electric shock.

# 0

### Charger

### Use only the specified voltage.

Non-specified voltages may cause fire or electric shock.

- Rapid Charger 100 VAC
- In-Car Charger 12/24 VDC

# Do not use In-Car Charger inside vehicles with a positive earth.

Fire may result.
Use In-Car Charger only inside vehicles with a negative earth.

### **Charger Care**

- Do not touch blades with wet hands. Electric shock may occur.
- Do not use multiple cords in one outlet. May generate excess heat or fire.
- Do not bend, twist, pull or set objects on cord. Exposed wire may cause fire or electric shock.

# Do not short-circuit Charger terminals.

Keep metal away from terminals. May cause overheating, fire or electric shock.

# **∴WARNING**

### Charger

### **Preventing accidents**

Secure In-Car Charger to avoid injury or accidents.

# If Rapid/In-Car Charger cord is damaged:

May cause fire or electric shock; contact Vodafone Customer Center, Customer Assistance to replace.

### **During thunderstorms:**

Unplug Charger to avoid damage, fire or electric shock.



# Keep Charger out of the reach of children.

Electric shock or injury may occur.



### **Handset Use & Electronic Medical Equipment**

This section is based on "Guidelines on the Use of Radio Communications Equipment such as Cellular Telephones and Safeguards for Electronic Medical Equipment" (Electromagnetic Compatibility Conference, April 1997) and "Report of Investigation of the Effects of Radio Waves on Medical Equipment, etc." (Association of Radio Industries and Businesses, March 2001).


# People with implanted pacemakers/defibrillators should keep handset more than 22 cm away.

Implanted pacemakers or defibrillators may malfunction due to radio waves.

### Turn handset power off in crowded places such as trains. People with implanted pacemakers/defibrillators may be near.

Implanted pacemakers or defibrillators may malfunction due to radio waves.

# Observe these rules when visiting medical facilities:

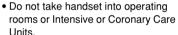



- Keep handset off in hospital lobbies.
   Electronic equipment may be near.
- Obey rules regarding mobile phone use in medical facilities.

Consult manufacturer for radio wave effects on electronic medical equipment.



xvi xvii

# **↑**WARNING

### **Battery**

• If battery does not charge properly, stop charging. Battery may overheat, burst or ignite. • If there is leakage or abnormal odor,



If there is abnormal odor, excessive heat, discoloration or distortion, remove battery from handset. It may leak, overheat or explode.



avoid fire sources. It may catch fire or burst.

# **↑**CAUTION

# Handset, Battery & Charger

#### Handset care

- Place handset on stable surfaces to avoid malfunction or injury.
- Keep handset away from oily smoke or steam. Fire or accidents may result.
- Cold air from air conditioners may condense, resulting in leakage or burnout.
- Keep handset away from direct sunlight (inside vehicles, etc.) or heat sources. Distortion, discoloration or fire may occur. Battery shape may be
- affected. • Keep handset out of extremely cold places to avoid malfunction or accidents.
- Keep handset away from fire sources to avoid malfunction or accidents.

#### Usage environment



- Excessive dust may prevent heat release and cause burnout or fire.
- Avoid using handset on the beach. Sand may cause malfunction or accidents.
- · Keep handset away from credit cards, phone cards, etc. to avoid data loss.


# **ACAUTION**

### **Handset**

### Avoid leaving handset in extreme heat (inside vehicles, etc.).



#### Inside vehicles:

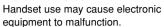



Handset may heat up and lead to burns.

### Should skin irritation occur, discontinue handset use and consult a doctor.



See below for handset materials. Some materials may cause skin irritation, rashes, or itchiness depending on your physical condition.

Parts	Materials & Finishing
Housing (Display/Keypad/Sub Display/battery side), battery cover, housing cover ornament (sides)	ABS resin/Acrylic UV curing painting (sealer: acrylic painting)
Display window, lens cover, Sub Display window	Acrylic resin
Multi Selector (cursor keys), Side Key, camera ornament	ABS resin/Chrome plating
Vodafone live! Key, Mail Key, Power On/Off Key, Start Key, Keypad, Clear Key, Schedule/Memo Key, Text Key, Function Key, battery, screw cover (above/below Display)	PC resin
Screw cover (back side)	Silicone rubber
Headphone Connector cover, External Device Connector cover	Elastomeric resin
External Device Connector	Nylon 6T/Brass, Au plating (sealer: nickel, copper)
Screw (Display/Keypad side)	SWCH12A/Ni plating
Infrared port, Mobile Light cover, Small Light	ABS resin


xviii xix

# **ACAUTION**


# Charger

### Charger & In-Car Charger

- Grasp plug (not cord) to disconnect Charger. May cause fire/electric shock.
- Keep cord away from heaters. Exposed wire may cause fire or electric shock.
- Stop use if plug is hot or improperly connected.
- May cause fire/electric shock.
- Keep In-Car Charger socket clean. May overheat and cause injury.

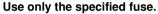

1 A fuse for In-Car Charger. Or may cause breakage/fire.

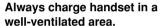

Avoid covering/wrapping Charger. May cause damage/fire.

### Do not use In-Car Charger when engine is off.

Start engine before use. Or car battery may be weakened.

### Long periods of disuse

Be sure to unplug Rapid/In-Car Charger after use.



#### Handset maintenance

When cleaning, disconnect Rapid/ In-Car Charger to prevent shock/ injury.



### Installing In-Car Charger

Properly position the cable for safe driving to avoid injury or accidents.



# **↑**CAUTION

### **Battery**

Do not throw or abuse battery. Battery may overheat, burst or ignite.



Do not leave battery in direct sunlight or inside vehicles.

Overheating/fire may occur; may reduce performance.



Do not expose battery to liquids. Performance may deteriorate.





If battery fluid contacts skin or clothes, rinse with clean water immediately.





Do not dispose of exhausted batteries with ordinary refuse. Tape over battery terminals before disposal, or bring them to a Vodafone shop. Follow local regulations regarding

battery disposal.

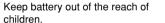

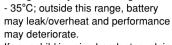


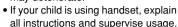


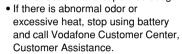

• Do not leave battery uncharged. Charge at least once every six months.



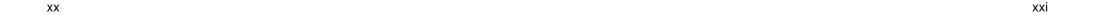

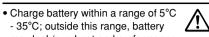







# **General Notes**

### **General Use**

- Vodafone is not liable for any damages resulting from accidental loss/alteration of handset data. Please keep separate records of Phone Book entries, etc.
- Handset transmissions may be disrupted inside buildings, tunnels or underground, or when moving into/out of such places.
- Use handset without disturbing others.
- Handsets are radios as stipulated by the Radio Law. Under the Radio Law, handsets must be submitted for inspection upon request.
- Handset use near landlines. TVs or radios may cause interference.
- Beware of eavesdropping.

Because this service is completely digital, the possibility of signal interception is greatly reduced. However, some transmissions may be overheard.

#### Eavesdropping

Deliberate/accidental interception of communications constitutes eavesdropping.

### **Inside Vehicles**

- Never use handset while driving.
- Do not park illegally to use handset.
- Handset use may affect a vehicle's electronic equipment.

### **Aboard Aircraft**

Never use handset aboard aircraft (keep power off).

Handset use may impair aircraft operation.

### **Handset Care**

- If handset is left with no battery or an exhausted one, data may be altered/lost. Vodafone is not liable for any resulting damages.
- Use handset within temperatures of 5°C to 35°C and humidity of 35% to 85%.
   Avoid extreme temperatures/direct sunlight.
- Exposing lens to direct sunlight may damage color filter and affect image color.

- Do not drop or subject handset to shocks.
- Clean handset with dry, soft cloth. Using alcohol, thinner, etc. may damage it.
- Do not expose handset to rain, snow or high humidity.
- Never disassemble or modify handset.
- Avoid scratching handset Display.
- When closing handset, keep straps, etc. outside to avoid damaging the Display.
- Handset is not water-proof.

### Avoid exposure to liquids and high humidity.

- Keep handset away from precipitation.
- Cold air from air conditioning, etc. may condense causing corrosion.
- Avoid dropping handset in damp places (restrooms, bath/shower rooms, etc.).
- On the beach, keep handset away from water and direct sunlight.
- Perspiration may seep inside handset causing malfunction.
- Heavy objects or excessive pressure should be avoided.

#### May cause malfunction or injury.

- Do not sit down with handset in a back pocket.
- Do not place heavy objects on handset in a bag.
- Connect only specified products to Headphone Connector. Non-specified devices may malfunction or cause damage.
- Always turn off handset before removing battery.
   If battery is removed while saving data or sending mail, data may be lost, changed, or destroyed.

### **Copyrights**

Copyright laws protect sounds, images, computer programs, databases, other materials and copyright holders. Duplicated material is limited to private use only. Use of materials beyond this limit or without permission of copyright holders may constitute copyright infringement, and be subject to criminal punishment. Comply with copyright laws when using images captured with handset camera.


# **Specific Absorption Rate (SAR)**

• V302SH meets the government's requirements for exposure to radio waves.

These requirements are based on scientific basis to assure that radio waves emitted from mobile phones and other handheld wireless devices do not affect human health. They require that the Specific Absorption Rate (SAR), which is the unit of measurement for the amount of radiofrequency absorbed by the body, shall not exceed 2 W/kg\*. This limit includes a substantial safety margin designed to assure the safety of all persons, regardless of age or health, and meets the international standard set by International Commission on Non-lonizing Radiation Protection (ICNIRP) in cooperation with World Health Organization (WHO).

- The highest SAR value for V302SH is 0.86 W/kg. Tests for SAR are conducted with handset transmitting at its highest certified power level, and follow the testing methods set by the government. While there may be differences between the SAR levels for various handsets, they all meet the governmental requirements for safe exposure. The actual SAR level of the handset while operating can be well below the highest value. This is because the handset is designed to operate at multiple power levels so as to use only the power required to reach the Network.
- Additional information on SAR can be obtained on the following Websites:
- Ministry of Public Management http://www.tele.soumu.go.jp/j/ele/index.htm
- Association of Radio Industries and Businesses (ARIB) http://www.arib-emf.org/index02.html

<sup>\*</sup>Requirements are stipulated in Radio Law (Ordinance Regulating Radio Equipment, Article 14-2).

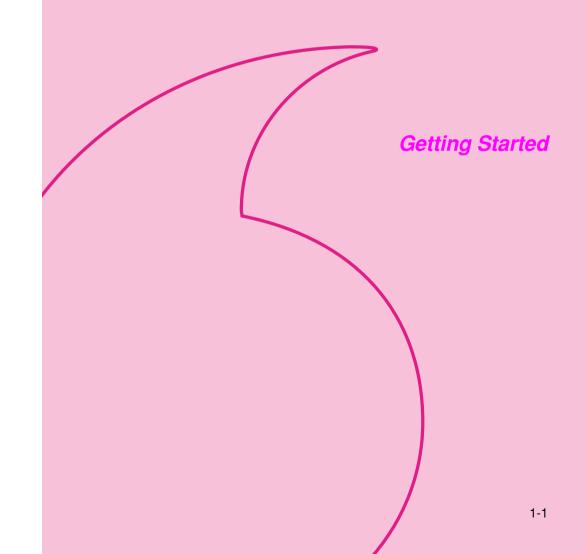

# **Function & Feature Preview**

Simple Mode

Select a simplified menu. ideal for users who use only basic handset functions.



Phone Book

**Display Settings** 

Change Wallpaper, Display

Images, Fonts, et cetera to

customize handset UI.

15:05 F40:Display Settings

[Off
| Wallpaper
| Display Images
| Fonts

P.7-2. P.7-5. P.7-6

Save up to 500 entries (with

up to three phone numbers

and mail addresses each).

P.2-16

Getting

**Manner Mode** 

Press a single key to mute ringer and activate Message Recorder automatically.



Camera

Capture still images and


Action Snap video with

built-in handset camera.

P.3-3

Kanii Conversion

Use Predictive or Previous Usage to reduce key strokes when entering Japanese text.

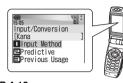

P.4-12

**Postcard** 

Add text or calendar mask to still images to create original Postcards or Calendars.



P.5-2

Ueda Mikio Triends

☑A:Pattern 2

P.6-2

Display Language Set menus, etc. to appear in English or Japanese.



P.7-9

P.6-25 **Data Folder** 

Access handset image and sound files from here: files are organized by file type.



P.9-3

Infrared

Align handset IR port and a compatible device port for wireless file transfers.



**Useful Diary** 

Create personal diary entries

using both text and images.

Save up to 400 entries.

15:05 F54:Useful Diary 12005Y 9M26D

I was very lucky to

find it in this seas on! I couldn't help

P.10-2

P.12-3

15:05 Sky Mail ☑To [No Address ☑Text [No Body Text

Option Settings

Select default or customized templates by theme and fill in

**Mail Templates** 

One-Shot Mail

Instantly send a preset Sky

address with handset closed.

Mail message to a preset

fields to create messages.

ry OFF



Vodafone live! Manual

Schedule

Add entries for upcoming events with dates/times. Set Alarms, etc. for each.



P.12-13

Vodafone live!

Exchange mail, access the Mobile Internet, download V-Applications via Web, and retrieve timely area-specific information via Station.



Optional Services

Call Forwarding Automatically direct incoming calls to a



P.13-3

P.12-20

Voice Mail Manually redirect or automatically direct



P.13-4

Call Waiting

Reduce missed calls! Answer incoming call while line is engaged.



P.13-6

3 Way Calling Switch between two lines or talk on both simultaneously.




P.13-7

1-2 1-3

# **Handset Parts & Functions**

### **Handset**

Getting Startec

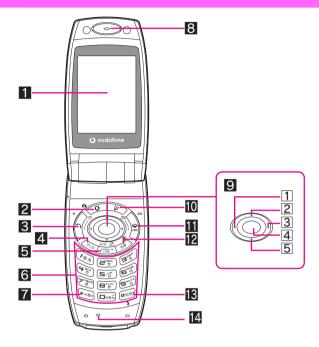

- 1 Display
- 2 Vodafone live! & Mobile Camera Kev
  - Open Web menu or execute left Soft Key functions. Press for 1+ seconds to activate mobile camera.
- 3 Start Kev Initiate or answer calls.
- 4 Clear Key

Delete entries or return to previous window.

### Schedule/Memo & A/a Key

Save/check Schedule or record/play Voice Memos. In text entry windows, toggle upper/lower case roman letters or standard/small hiragana/katakana. Change image display sizes.

6 Keypad

### 7 \* Kev

While an image or message appears, press to open next one (newer one). In alphanumeric entry, open web/mail address prefixes & suffixes, and in kanji (hiragana) entry, toggle Symbol/ Pictograph Lists.

- 8 Earpiece
- Multi Selector

Select menu items, move cursor, scroll, etc. or use for the following:

- 1 Redial & Notepad Memory Key
  - Select dialed numbers or return to the previous window. Press for 1+ seconds to open Notepad Memory.

### 2 Shortcut Kev

 Open list of shortcut kevs (press) indicated key to access assigned function). Press for 1+ seconds to adjust Earpiece volume.

#### 3 Phone Book Key

• Open entries to make calls, send messages or open selected menu items. Press for 1+ seconds to save new entries.

#### 4 Function & Key Guard Key

 Access Functions Menu in Standby or capture images with mobile camera. Press for 1+ seconds to toggle Key Guard.

#### 5 Call History Key

 Open received call records. Press for 1+ seconds to adjust Earpiece Volume.

### 10 Mail Kev

 Open Mail menu or execute right Soft Key functions. Press for 1+ seconds to open V-Appli Library.

### II Power On/Off & End Key

• End calls, place callers on hold or cancel operations. Press for 2+ seconds to turn handset power on/off.

#### I Text & Manner Key (♥)

• Toggle between entry modes or create Phone Book entries. Press for 1+ seconds to activate/cancel Manner Mode.

#### 18 # Kev


While an image or message appears, press to open previous one (older one). In text entry windows, toggle Symbol/ Pictograph Lists.

Microphone

These descriptions (P.1-4 - 1-6) are illustrative of general handset usage. For mobile camera and other specific key assignments, refer to the descriptions for each function.

1-4 1-5

Getting Startec

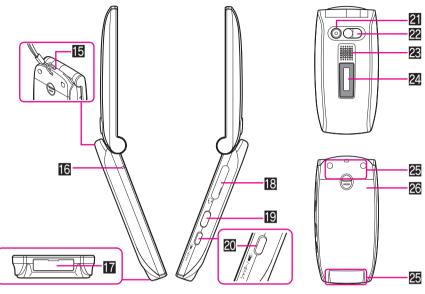

Strap Eyelet

Attach straps as shown.

6 Small Light

Illuminates/flashes while charging, for incoming calls, etc.

- **External Device Connector**Connect Charger here.
- 18 Headphone Connector
- Infrared Port

Use for infrared data transmissions.

- 20 Side Key
  - When camera is active, press to capture images. Press for 1+ seconds to activate the assigned function in Side Key Settings (see P.12-3).

2 Camera (lens cover)

Capture still images and Action Snap video.

22 Mobile Light


Flashes for incoming calls/mail. Serves as a strobe or Pen Light.

- 28 Speaker
- 2 Sub Display
- 25 Internal Antenna Location
- 26 Battery Cover

Note

Do not cover or place stickers, etc. over the area containing Internal Antenna.

# **Display Indicators**

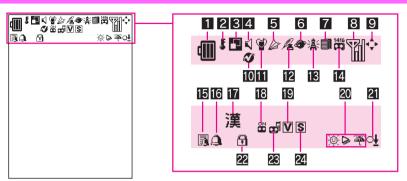

& Pen Light

and & flash when Pen Light is in use.

2 Secret Mode Active

Flashes when a Secret Mode entry is open.

- 3 🖪 Original
  - Enlarged

Mail, Web or Data Folder image display size

- **4** ♦ Speaker Phone Active
  - Speaker Active
  - **■** Line Active

Web communication is in progress.

- 黨 (gray) Station Menu Manual Update
- 5 🕼 Mail

Unread mail except Long Mail

6 ⊕ Web

Unread Web information

**7** ■ Delivery Report

New Delivery Report

8 M Signal Strength

The strong The Moderate The Low The Weak of the Strong The Moderate The Low The Weak of the Strong The Moderate The Moder

**₹** Infrared Transmission

Scroll

The menu, information, etc. can be scrolled.

- Active V-Application
  - **ℰ** Paused V-Application
- **II Y** Manner Mode Active
- 12 / Long Mail

Unread Long Mail

- 阁 基 (red) Station Unread Station information
- ☑ # Voice Mail New Voice Mail
- N Off-Line Mode
- 15 Schedule (Alarm On)
  - Schedule (Alarm Off)
- 16 Alarm Set T Entry Mode
  - Current character entry mode
- 18 <sup>25</sup> Message Recorder Active

- **I V** Vibration Active
- **20 ③ ▶ 3 Weather Indicators** Current forecast (A separate subscription is required.)
- 22 1 Keypad Lock Active
- 23 d Message

Message Recorder messages

- 22 S Silent Ringer is Silent.
  - Rising Tone Ringer is set to Rising Tone.



Display is a precision device. However, some pixels may appear brighter or darker.



- Although Vibration and Ring Tone Level for incoming calls and Vodafone live! functions are set separately, **V**, **3** and **5** are Incoming Call indicators.
- When Wallpaper is set (see P.7-2), cancel Show Indicators to hide indicators (see P.7-2).

# **Sub Display Indicators**

Sub Display & Display indicators represent the same functions (see P.1-7 - 1-8).



### ■ Battery Strength

 always appears in Standby. ☑, ႕, 讚, ❷, 濞 or Ձ appears with messages for Alarm, incoming calls, information.

### A Pen Light

☐ and ☐ flash when Pen Light is in

### 2 Yıl Signal Strength

### **3** ■ Information

Appears when there is a missed call, a Message Recorder message, unread mail. etc.

Getting Started

•When **II** appears with Side Key Settings for Standby (see P.12-3) set to **Details**, press S for 1+ seconds to see specific indicators.



### ☑ Off-Line Mode

#### 4 Time

Current time and corresponding indicator flash when Stopwatch or Kitchen Timer is running.



When handset is closed, press S to illuminate Sub Display Backlight. Backlight stays off if Sub Display Backlight Settings (see P.7-8) is set to Off.

# **Battery & Charger**

# 1 Getting

### **Getting Started**

Charge a new battery before use or after a period of disuse.

### **Battery Life**

- Use specified Charger only. Other chargers may damage handset, or cause battery to deteriorate, overheat or ignite.
- Do not use or store battery at extreme temperatures. May shorten battery life. Ideal working temperature is between 5°C and 35°C.
- Replace battery if operating time is noticeably shorter than normal.

### Charging

- Do not use Charger for other purposes.
- Battery may short-circuit, overheat or burst from contact with metal objects.
- Small Light illuminates red while charging. (It may take a while for the light to illuminate when handset power is off.)

- Charging takes approximately 115 minutes (with handset power off).
- Charging time may vary by ambient temperature.
- Charger and battery may become warm during charging.
- Move Charger away from home TVs or radios if interference occurs.

#### **Precautions**

- Use a dry cotton swab to clean handset, battery and Charger terminals.
- Avoid:
- Extreme temperatures
- Humidity, dust and vibration
- Direct sunlight
- Do not leave battery uncharged. Charge at least once every six months.
- Use a case when carrying battery separately.



- Battery must be inserted to charge handset.
- Handset will charge with power on. flashes and stays on when complete.
- · Handset will charge while open.

# Estimated Hours of Use (fully charged battery)

Continuous Call Time	140 minutes
<b>Continuous Standby Time</b>	450 hours
<b>Continuous Operating Time</b>	250 minutes

Above values are calculated with Backlight Brightness set to *Level 4* (default).

- Continuous Call Time is an average measured with a new, fully charged battery, with both Power Saving and Panel Saving off, with stable signals.
- Continuous Standby Time is an average measured with a new, fully charged battery, with handset closed without calls or operations, in Standby with stable signals. Standby Time may be less than half this value if handset is out-of-range or signal is weak. Standby Time may vary by environment (battery status, temperature, etc.).
- Continuous Operating Time is measured while handset is operated without calls.
- The above values (Battery Time) are nominal values, measured under stable signal conditions.

### **Battery Time**

# Battery Time may shorten when handset is used in poor conditions:

- Poor Usage Conditions
- Extreme temperatures (use within a range of 5°C 35°C)
- Dirty handset, battery or Charger terminals (charging may be hampered)
- Weak signals or out-of-range
- Operation
- V-Application is active
- Station service is in use
- Repeated mobile camera use
- Playing video images
- Frequent use of Pen Light
- Continuous Keypad use (Backlight stays on for long periods)
- Frequent infrared transfers
- Setting
- Backlight/Keypad Light time is set longer
- Wallpaper is animated
- Screen Animation is used
- Panel Saving is Off
- Backlight is set brighter

Getting Started

### **Extend Battery Time**

Adjust the following settings:

- Backlight (see P.7-7)
- Sub Display Backlight (see P.7-8)
- Lighting Time of Mobile Light (see P.6-17) or Pen Light (see P.12-31)
- Panel Saving (see P.12-28)

### **When Battery Runs Out**


A message appears and short beeps sound. Handset shuts down after 20 seconds unless charged. Press (a) to stop short beeps. (Short beeps do not sound in Manner Mode.) If battery runs out during a call, short beeps sound every five seconds. After 20 seconds, the call ends and handset shuts down.

### **Battery Disposal**

Do not dispose of exhausted batteries with ordinary refuse.

Tape over battery terminals before disposal, or bring them to a Vodafone shop. Follow local regulations regarding battery disposal.

### **Battery Strength**

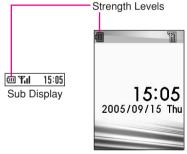


When battery runs out (□), **Recharge Battery** appears and short beeps sound. Handset shuts down after 20 seconds.

### Indicator

Battery Strength indicator varies as shown.

Charge or replace when level is low.

Battery Strength indicator is for reference only.

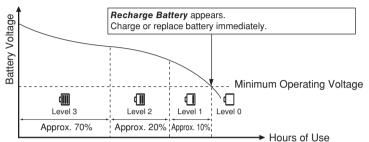

Remaining Strength (at 25°C)

### ■ Battery Strength & Environment

At low temperatures, battery is consumed faster.

At high temperatures, battery lasts longer.

### Small Light & Battery Strength Indicator

### Handset Power On

Small Light	Indicator (1111)	Conditions
Off	Flashes	Ambient temperature is outside the range of 5°C - 35°C
Flashes red	Flashes	Battery life has ended, or battery defect
Illuminates red	Flashes	Charging
Off	Illuminates	Charging completed

### ■ Handset Power Off


Small Light	Indicator (@)	Conditions
Flashes red	Off	Battery life has ended, or battery defect
Illuminates red	Off	Charging
Off	Off	Charging completed

Getting Started


# **Installing & Removing Battery**

### Inserting


Press down and slide cover as shown

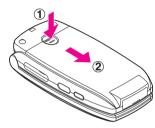

2 Lift and remove cover as shown

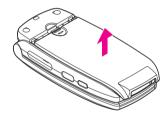

3 Insert battery

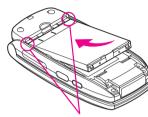

 With printed side up, fit tabs into battery cavity slots.

Close cover




 Position and slide the cover as shown until it stops.

### Removing

- Turn handset power off before removing battery.
- Do not remove battery immediately after saving files, sending messages, etc.


# Press down and slide cover as shown

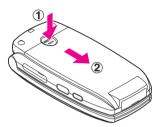

2 Lift and remove cover as shown



# Remove battery

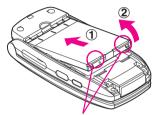

• Take hold of Battery Tab here, push as shown in ①, then lift as indicated in ②.

Tip

This product requires a lithium-ion battery. Lithium-ion batteries are a recyclable resource.


- To recycle a used lithium-ion battery, take it to any shop displaying the symbol shown to the right.
- To avoid fire or electric shock, do not:
- Short-circuit batteries
- Disassemble batteries



Getting Startec

# **Rapid Charger**

Use specified Charger only.

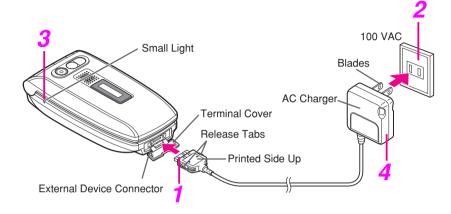

- Open Terminal Cover and insert Charger connector until it clicks
- Plug in Charger
  - Charging starts and Small Light illuminates red (see **P.1-13**).
  - Extend Charger blades. (Fold back when not in use.)



- Charging is complete when light goes out
  - Charging takes approximately 115 minutes.
- 4 After Charging

# Unplug Charger from the AC outlet, then handset


- Squeeze release tabs and pull connector straight out.
- Replace Terminal Cover to protect External Device Connector.



Do not pull, bend or twist Rapid Charger cord.

# **In-Car Charger**

Use specified In-Car Charger only.

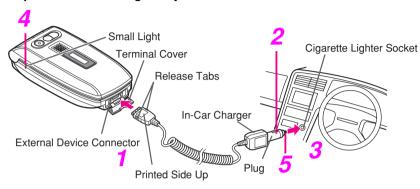

- Open Terminal Cover and insert Charger connector until it clicks
- Plug in Charger
- 3 Start car engine
  - Charging starts and Small Light illuminates red (see **P.1-13**).

- Charging is complete when light goes out
  - Charging takes approximately 115 minutes.
- 5 After Charging

# Unplug Charger from cigarette lighter socket, then handset

- Squeeze release tabs and pull connector straight out.
- Replace Terminal Cover to protect External Device Connector.



- Use In-Car Charger inside vehicles with a negative earth only.
- Disconnect Charger before leaving vehicle to prevent charging with engine off.
- Avoid charging battery inside extremely hot vehicles.
- Never use handset while driving.



- For more information, see In-Car Charger manual.
- Use optional In-Car Holder to secure handset.

# Handset Power On/Off

1

Getting Started



Open handset

Press for 1+ seconds



Backlight illuminates; after Power On Graphics, handset enters Standby (shown above).

**3** Press for 2+ seconds to exit After Power Off Graphic, handset shuts down.

### **Clock Settings**

If date and time have not been set, a confirmation appears after Power On Graphic.
 Choose Press Clock Settings window opens (see P.1-20)
 Choose Press Standby appears without date and time



- Handset receives incoming mail or Web/Station information while closed.
- Display shuts down after a period of inactivity (see P.12-28 "Panel Saving").

# **Key Guard**

Use Key Guard to lock handset keys and prevent accidental operation/function activation.



### **Activating**

Press o for 1+ seconds
appears and Key Guard is set.



For Emergency Calls when Key Guard is active, see **P.2-5**.

Getting Started



### When Key Guard is Active

- Incoming calls temporarily cancel Key Guard. To answer calls, press keys for Anykey Answer (see P.2-6). Key Guard reactivates after the calls end.
- Handset power does not turn off even if significant spreading is pressed for 2+ seconds.

### Canceling

In Standby, press ● for 1+ seconds
•¹ disappears.

Getting Started

Index Menu ► Functions ► Clock

- Select **E**Clock Settings and press •
- Enter the year



Example: Year 2005 🏓 🖃 🛣 🗆 OREN 🗖 SE

- Enter the month and day Example: September 15 Designation
- Enter the time Apply 24-hour clock format. Example: 3:05 PM → (@a) S # □ Deli S #
- Press (•) Clock starts and handset returns to Standby. The day of the week is set automatically.

### Cursor

■ Use • or ③ to move cursor (■ or highlight bar). Enter or edit characters at the cursor position.



When removing the battery for replacement, etc., Clock settings remain. However, should the handset go without power for an extended period of time (approximately one month), Clock will need to be reset.




- When Clock has not been set, --/-- appears for date and time.
- Choose a Clock type and layout or use Calendar for Standby (see P.7-3).
- Clock can be set during calls.

# **Handset Menus**

### **Index Menu**

Access functions/operations from Index Menu.

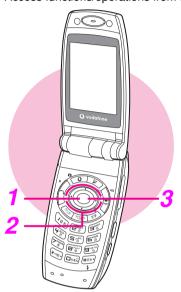

Press



Index Menu opens.


- Use 🛟 to select an item
  - To open Handy Features menu, press Q. To open V-Appli Library, press 🔊.
- Press (•) Menu for each item opens.

### Index Menu Items

Briefcase	Use Schedule, Calculator, Alarm, etc.		
Camera	Camera menu opens. Capture still images and record video.		
Settings	Customize display, sounds, etc.		
Infrared	Exchange information and data via infrared		
Functions Menu opens (see P.1-22). Check and change setting various functions.			
Tel Ops	Create or search Phone Book entries. Check Redial and Call History.		
Vodafone live!	Use Mail, Web, V-Application, Station, etc.		
My Files	Open files saved in handset		
Simple Mode	Activate Simple Mode		

1-20 1-21



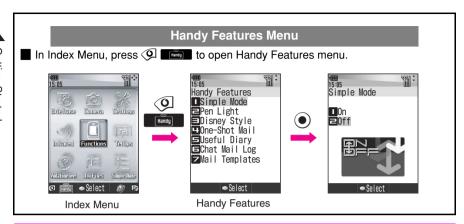


### **Functions Menu**

In Index Menu, select *Functions* and press . Use Functions Menu to access handset functions and settings. A number is assigned to each function (see **P.14-2**).


### Selecting First Layer Items

Select an item with () and press ().

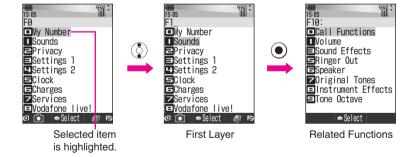

### ■ Selecting Functions by Numbers

In Standby, press • to open Index Menu, then enter numbers. Corresponding function or menu opens.

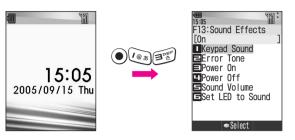


### **Return to Standby**

 $\blacksquare$  Press a to return to Standby (see **P.1-18**) from function windows, menus, etc.

When a confirmation appears, choose we and press . Handset returns to Standby.

# **Soft Keys**

Soft Key functions appear at the bottom of Display.

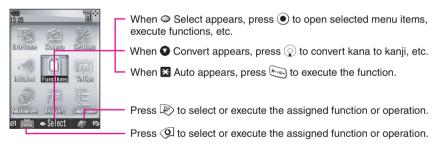

When spears while creating Original Ring Tone, etc., press to execute the assigned operation.

1-22 1-23

Getting Started

# **Quick Operations**

In Standby, enter numbers to access functions quickly. Accessible functions vary by the number of digits entered. (Functions shown to the right appear for single digits.)

To activate functions, press the key next to the function (press for Speed Dial).




Function	1	2	3	4	5 - 6	7 - 12	13 - 24
Speed Dial (see P.5-14)	0	0	×	×	×	×	×
Spending Memo (see P.12-30)	0	0	0	0	0	×	×
Add to Phone Book (see P.5-3)	0	0	0	0	0	0	0
Entry Search <sup>1</sup> (see <b>P.5-12</b> )	0	×	×	×	×	×	×
Calculator (see P.12-29)	0	0	0	0	0	0	×
Send 2-Touch Mail (see OP.3-12)	0	×	×	×	×	×	×
Set Alarm <sup>2</sup> (see <b>P.12-7</b> )	×	×	×	0	×	×	×
Schedule <sup>3</sup> (see <b>P.12-7</b> )	×	×	×	0	×	×	×

<sup>&</sup>lt;sup>1</sup>Only Katakana Search is available.

### Guide


Open quick guides to functions inaccessible from Functions Menu.

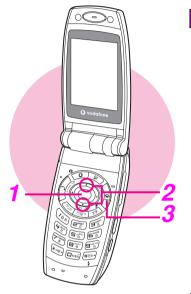

- Index Menu ► Functions ➤ Settings 1
- Select Guide and press Pen Light guide appears.

  Use ( ) to toggle guides
- Press 🗟 to exit

### **■**Display Content

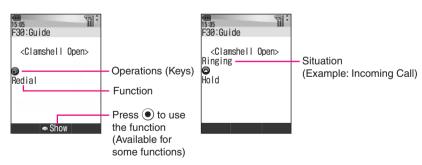

<sup>&</sup>lt;sup>2</sup>Enter four digits (24-hour format) to set Alarm. *Full* appears when there are five entries.

<sup>&</sup>lt;sup>3</sup>Enter four digits for month and day. Check entries for the next 12 months.

Both Security Code and Center Access Code are needed for handset use.

# **Security Code**

9999 or the 4-digit number selected at initial subscription.

Security Code is required to use/change some handset functions.

- #appears when Security Code is entered.
- If incorrect, *Invalid Code* appears. Enter correct Security Code.
- Change Security Code as needed (see P.11-2).

### **Center Access Code**


The 4-digit number in the contract, required to access Optional Services via landlines, and to subscribe to fee-based information.

Do not attempt to change Center Access Code.

Contact Vodafone Customer Center, General Information (see P.14-20) for details.



- Write down Center Access Code. If lost, contact Vodafone Customer Center, General Information (see P.14-20).
- Do not reveal Security Code and Center Access Code. Vodafone is not liable for misuse or damages.

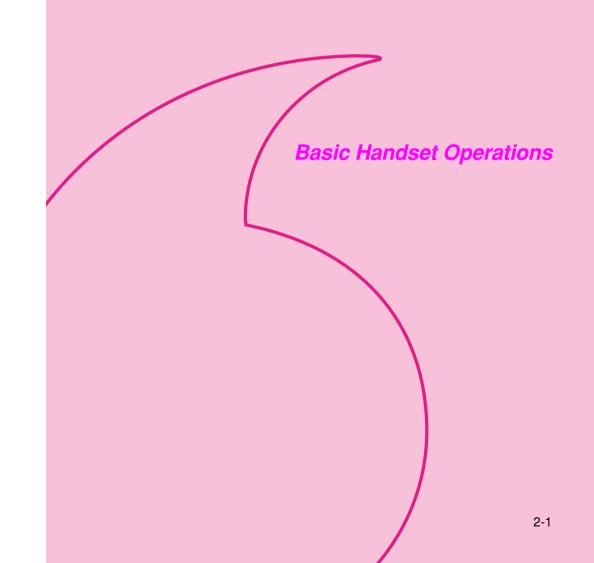

# **Initiating a Call**

Basic Handset Operations

2

Basic Handset Operations

### 1 Confirm handset is on

- · Check signal.
- Handset will not transmit when 

   ™, 

   N, 

   or 

   appears (see P.14-8).

### Enter a phone number



• Include the area code, even for local numbers.

### Sending/Blocking Caller ID

- Press the following keys when placing a call.
- Send......
- Block.....(@) (# %)

# Confirm the number and press

#### **Correcting Numbers**

- Use to move cursor and press to delete the digit above the cursor.
- Press property for 1+ seconds to delete the entire number and return to Standby.
- If you misdial, press (a) to hang up and try again.

### **Busy Numbers**

• Press (a) to end the call and try again later.

### ✓ Press ♠ to end call

Alternatively, close handset.
 Cancel Close to End Call to keep the line open with handset closed (see P.2-3).

#### Close to End Call

Select whether or not to end calls by closing handset.

Press ● → Select Functions → Press ● → Select ■Sounds → Press ● → Select ■Call Functions → Press ● → Select ■Incoming Call → Press ● → Select ▼Close to End Call → Press ● → Choose ■On or ■Off → Press ●

On Calls end Off The other party hears no sound

• Close to End Call is active by default.



- Do not cover handset microphone while talking on the phone.
- Avoid covering area over Internal Antenna (see P.1-6 25).
- Voice quality is affected depending on how and where handset is used.





- Use Instant Display to see Call Time and Call Charge (see P.2-19, P.2-20).
- Confirm Total Talk Time (see P.2-19) and Total Charges (see P.2-20).
- To use Speaker Phone or Speaker during calls, see P.8-21.
- For information on international calls, contact Vodafone Customer Center, General Information (see **P.14-20**).

2-2 2-3

**Basic Handset Operations** 

**Basic Handset Operations** 

# Redial

Place calls from Redial. Up to 20 recently dialed numbers are saved in Redial.



Press • (□)



Dialed numbers appear with date and time. Name appears if saved in Phone Book.

- Select a record and press
- Press 🕥 Number is dialed.



- When the same number is dialed more than once, only the last record appears.
- Names in Secret Mode entries appear only in Secret Mode.
- Records remain even after handset power is turned off.
- When there are 20 records, oldest records are replaced by new ones. To delete records manually, see P.2-14.

### International Call & Send With Code

Preset the number to add before dialing a phone number saved in Phone Book. Use International Call to place international calls and Send With Code to add one prefix such as 186 (Send Caller ID) or 184 (Block Caller ID).

**Setup Preset** 

Preset the number to add before a phone number

Default International Call: 0046010, Send With Code: None

Index Menu ► Functions → Services → Setup Preset

Select ■International Call or ■Send With Code → Press • → Enter a prefix **▶** Press **●** 

- To change the prefix, select **■International Call** or **■Send With Code** Press **●** Press Press (Long Press) → Enter a new prefix → Press ( )
- Enter up to seven digits for International Call and up to six digits for Send With Code.

International Call & Send With Code

Dial from Phone Book using the number set in Setup Preset

Index Menu ► Tel Ops → Entry Search → Open an entry → Menu ( )

Select International Call or Send With Code → Press ●

# **Emergency Calls**

Emergency calls (110, 119, 118, etc.) are possible even while some handset restrictions are active.

Active Restriction	<b>Emergency Calls</b>		
Key Guard (see P.1-19)	Not possible		
Off-Line Mode (see P.3-6)	Not possible		
Keypad Lock (see P.11-2)	Possible		
Auto Key Lock (see P.11-3)	Possible		
Restrict Dial (P.11-4)	Possible		

2-4 2-5

# **Incoming Call**

Basic Handset Operations

When a call arrives, open handset



Number appears when Caller ID is sent. Caller's name appears if saved in Phone Book.

#### When Message Recorder is Active

• Outgoing message plays and recording starts (see **P.12-5**).

### Press

- Alternatively, press any of the following keys (Anykey Answer): (1900) (1900), (19
- Handling Incoming Calls: see P.2-8 2-9

### 😗 Press 🗟 to end call

Alternatively, close handset.
 Cancel Close to End Call to keep the line open with handset closed (see P.2-3).

### **Ring Tone Volume**

■ Press ③ (up) or ② (down) to adjust volume. (Cancel Manner Mode to adjust level.)
 • Ring Tone Level setting (see P.8-2) changes accordingly.

#### **Quick Silent**


- Press to instantly mute Ring Tone for that call only.
- When Side Key Settings for Incoming Calls (see P.12-3) is set to **□Quick Silent**, press ⑤ for 1+ seconds with handset closed during incoming calls to mute ringer.



- Up to 20 incoming call details are saved (see P.2-14).
- Activate Delayed Ringer (see P.2-10) to delay handset ringer for three seconds for incoming calls from numbers not saved in Phone Book or Owner Profile.
- To customize Ring Tone and Mobile/Small Light pattern, see P.8-2 "Call Functions."

# **Call History**

Up to 20 received calls are saved in Call History (see **P.2-14**). When Caller ID is sent, numbers appear. Place calls directly to those numbers.

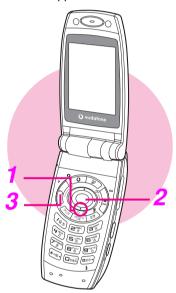

Press 😯



Received numbers appear with date and time. Name appears if saved in Phone Book.

- Select a record and press •
- **3** Press Number is dialed.



- Names in Secret Mode entries appear only in Secret Mode.
- Records remain even after handset power is turned off.
- When there are 20 records, oldest records are replaced by new ones. To delete records manually, see **P.2-14**.

2-6 2-7

# **Handling Incoming Calls**

# **Placing Callers on Hold**

Callers placed on hold hear a message explaining that you cannot answer their call right away and asking them to hold or call back later.



- When a call arrives, open handset
- Press 🗐

Hold tone sounds for five seconds.

- No tone sounds when Ring Tone Level is set to Silent.
- Press 7 to answer the call
  - Alternatively, press keys for Anykey Answer (see P.2-6).

### Hold or Reject with Handset Closed

■ When Side Key Settings for Incoming Calls (see P.12-3) is set to ■ Hold or ■ Reject Call, press S for 1+ seconds during incoming calls to activate the function.



Basic Handset Operations

- Press or close handset to end calls on hold. However, if Close to End Call (see P.2-3) is canceled, line remains engaged even if handset is closed.
- Calls on hold end if callers hang up.

### **Quick Recorder**

Activate Message Recorder (see P.12-4) for one time only to record caller messages on handset.



- When a call arrives, open handset
- Press (P) 193 Outgoing message plays and recording starts.
- Press () Tight to play recorded messages (see P.12-5).



Message recorder is disabled when recording capacity is full (see P.12-4 "Message Recorder Disabled").

### Voice Mail

Unanswered calls are forwarded to Voice Mail (see P.13-4).

2-8 2-9

2-11

# **Delayed Ringer**

Activate Delayed Ringer to help screen one-ring sales calls. Handset ringer is delayed for three seconds for incoming calls from numbers not saved in Phone Book or Owner Profile. Delayed Ringer is Off by default.

Basic Handset Operations



Index Menu	<ul><li>► Functions → Sounds →</li><li>Call Functions → Incoming Call</li></ul>

- Select **■** Delayed Ringer and press
- Choose **■** On and press

# **Engaged Call Operations**

# **Earpiece Volume**

Adjust Earpiece volume (5 levels). Earpiece volume is Level 5 by default.



- During a call, press ( ) or (
- Press () (up) or () (down) to adjust volume level

Each press changes volume by one level.

- Wait five seconds or press to save the level.
- Volume level remains as set even after handset power is turned off.

# **Voice Memo**



During a call, press 經濟 for 1+ seconds

Recording starts.


- Press 經過 again to stop
  - Recordings remain even after handset power is turned off.
  - To play or delete Voice Memo, refer to the description for Message Recorder on P.12-5, P.12-6.

Closing handset ends a call and Voice Memo recording if Close to End Call (see **P.2-3**) is active. (The remaining recording time will not appear.)

# **Notepad Memory**

Save up to 3 sets of numbers during a call.

- Use up to 24 digits (0 9, \* and #) per entry.
- When full, oldest entries are deleted to make room for new ones.
- Save phone numbers from Notepad Memory to Phone Book.

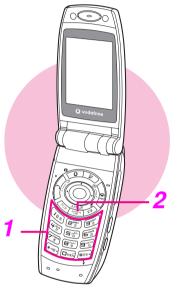

During a call, use Keypad to enter digits

Press (スプジェール)

Entered digits are saved to Notepad Memory.

• When the current call ends or another call arrives before Step 2, entered digits are saved automatically.

**Opening Entries** 

Open saved Notepad entries

Index Menu ► Tel Ops

Select **■***Notepad* **→** Press **●** 

- Up to 3 sets of numbers appear, most recent first.
- Press To dial the number.
- If there is no entry, Notepad Memory Not Found appears.
- Alternatively, press • Memo to open Notepad Memory.
- Press 😭 to exit.
- To save to Phone Book, select an entry Press Press Select Add to Phone Book Press ● See P.5-4 - 5-5 for more
- To delete, select an entry → Press 🔊 Menu → Select **Delete** or **Delete All** → Press 💿
  - Choose Yes Press ●

2-12



### **Opening Redial Records**

### Press • (□)

Dialed numbers appear with date and time. Name appears if saved in Phone Book.

- When there is no Redial record, Call History appears.
- Press 🕥 to dial the number.
- Press 😭 to return to Standby.

### **Opening Call History Records**

### Press 🔾

Received numbers appear with date and time. Name appears if saved in Phone Book.

- Press () to dial the number.
- Press 🗐 to return to Standby.

**Delete** 

Delete Redial/Call History records

Index Menu ► Tel Ops

Select ■ Redial or ■ Call History → Press ● Press ▶ Menu → Select *Delete* or *Delete All* → Press • Choose ■ Yes → Press •

### **Call History Indicators**

Call in Progress	Answered call	
Missed Call	Unanswered call (including calls screened by Delayed Ringer)	
Hold	Disconnected after hold	
Message Recorder	Recorded on Message Recorder	
Forward Voice Mail	Forwarded to Voice Mail Center	
Reject	Rejected call	
Payphone	Call from payphone	
No Caller ID	Call without Caller ID	

#### Missed Call Notice

For missed calls, one of the following notices appears. (X indicates the number of missed calls or recorded messages.)

Message Recorder	Voice Messages: X	Message Recorder &	Voice Messages: X
Missed Call	Missed Calls: X	Missed Call	Missed Calls: X

• Press (2) to open most recent first.

Press (5) to open oldest first.

- Press ( to dial the number.
- Press 🖹 to exit
- Press (a) to close Missed Call notice.
- See P.2-14 to reopen Missed Call details.
- Reject appears for rejected calls.
- For more about Message Recorder, see P.12-4 "Message Recorder."

2-14 2-15

Basic Handset Operations

Basic Handset Operations

# Simple Mode

Activate Simple Mode to reduce available handset functions and simplify menus. Handset is limited to basic operations (see **P.2-17 - 2-18**).



# **Activating/Canceling Simple Mode**



### **Activating**

- Press 🗨
- Select Simple Mode and press •
- Choose ■On and press
  - Simple Mode remains active even after handset power is turned off.

### Canceling

- **1** Press
- Select 

  Standard Mode and press

■ Phone Book Lock<sup>1, 2</sup> (see **P.11-3**)

■ Auto Power On/Off<sup>1</sup> (see **P.12-11**, **P.12-12**)

■ Accept Call<sup>1, 2</sup> (see **P.11-5**)

■ Secret Mode<sup>2</sup> (see **P.11-6**)

Choose ■ Yes and press ●



- When Simple Mode is activated while any of the following are in use, a confirmation appears. Choose ■ Yes and press ● to activate Simple Mode.
- Off-Line Mode<sup>1</sup> (see **P.3-6**)
- Restrict Dial<sup>1, 2</sup> (see **P.11-4**)
- Reject Call<sup>1, 2</sup> (see **P.11-5**)
- Alarm<sup>1</sup> (see **P.12-7**)
- Schedule (Alarm is set)<sup>1</sup> (see **P.12-13**)
- Paused V-Application (see OP.10-6)
- <sup>1</sup>Cancel Simple Mode to reactivate.
- <sup>2</sup>Security Code is required.
- In Simple Mode, Ring Tone sounds in *Pattern 1* (for incoming calls) and *Mail* (for incoming mail) even when melody files in Data Folder are used.

# **Simple Mode Operations**

### Simple Mode Menu Operations

In Standby, press • to open Simple Mode Menu.

■My Number	Show handset phone number (Owner Profile is not available)	
■Phone Functions	Access Add to Phone Book, Entry Search, Incoming Tone, Manner Mode, Message Recorder and Voice Mail (see below)	
Create, reply, forward, resend and edit or delete messages (see		
<b></b> ■Camera	Capture images and open saved images (see P.2-18)	
■Tools & Settings	Access Keypad Lock, Auto Key Lock, Wallpaper, Font Weight, Calculator, Alarm, Clock Settings and Instant Display (see <b>P.2-18</b> )	
Standard Mode	Exit Simple Mode (see P.2-16)	

Sub menus:

### **■ □**Phone Functions

			Save entries (see D.E.2)	
■Add to Phone Book			Save entries (see <b>P.5-3</b> ).	
			Enter name, reading, up to three phone numbers	
			and mail addresses.	
<b>■</b> Entry Sear	ch		Search entries by katakana (see P.5-13 "Katakana	
Elitiy Sear	CII		Search"). Only Katakana Search is available.	
	■ Ring Tone		Customize Ring Tone for incoming calls (see P.8-3	
	Call	☐Ring Tone Level	Adjust volume (see P.8-2)	
■Incoming	Elncoming Mail	_	Customize Ring Tone for incoming mail messages	
Tone		■Ring Tone	(see <b>P.8-3</b> )	
		☐Ring Tone	Adjust volume (see P.8-2)	
		Level	- 1 <b>-3-1</b>	
■Manner Mo	ode		Activate or cancel Manner Mode (see P.3-3)	
<b>⊟</b> Message	■Recorder S	Settings	Activate or cancel Message Recorder (see P.12-4)	
Recorder Play			Play messages (see P.12-5)	
	■Activate		Initiate Voice Mail (see P.13-4)	
<b>⊡</b> Voice Mail	I <b>⊒</b> Cancel		Cancel Voice Mail (see P.13-4)	
	■Play Voice Mail		Check messages (see P.13-5)	

2-16 2-17

Ī	■Mail	■Inbox	Open received messages (see OP.4-2)			
ľ		⊒Sent	Open sent messages (see OP.4-2)			
Ī	<b>⊟</b> Write Mail		Send Sky Mail messages (see OP.3-3)			

In Simple Mode, Mail Settings are disabled and cannot be changed.

#### **■ ■** Camera

uStili Photo	Capture Sha-mail mode or Wallpaper mode images (see <b>P.6-7</b> ).  Press Size to toggle between the modes.
<b>⊒</b> View Image	Access still images saved in Data Folder (see <b>P.9-6</b> )

Image size is W 120 x H 160 dots (Sha-mail mode) or W 240 x H 320 dots (Wallpaper mode) and only Brightness, Zoom and Mobile Light are available for image capture.

#### **■** Tools & Settings

■Keypad Lock	Restrict access to handset functions (see P.11-2)
<b>⊒</b> Auto Key Lock	Automatically activate Keypad Lock each time handset power is turned on (see <b>P.11-3</b> )
■Wallpaper	Show an image or animation in Standby (see P.7-2)
Font Weight	Change the weight of handset fonts (see P.7-6)
<b>⊟</b> Calculator	Use for basic arithmetic, percentage and tax calculation (see P.12-29)
<b>S</b> Alarm	Set Alarm to sound at a specific time.  To set, choose ■On → Press ● ★ Enter time → Press ● ★  Choose ■On or ■Off (for Snooze) → Press ● ★ Select ■Every Day  or ■Weekdays (for Weekly) → Press ● ▶ Press ●  To cancel, choose ■Off → Press ●
<b>Z</b> Clock Settings	Enter date and time (see P.1-20)
■Instant Display	Show estimated Call Time and Call Charge after calls (see <b>P.2-19</b> , <b>P.2-20</b> )

#### **Key Assignments**

#### In Standby:

•	Open Redial records (see P.2-4)
<b>•</b>	Search Phone Book (Katakana Search: see P.5-13)
<b>②</b>	Open Call History records (see <b>P.2-7</b> )
(Long Press)	Activate/cancel Manner Mode (see P.3-3)
<b>●</b> 文字	Activate/cancel Message Recorder (see P.12-4)

- Other keys are disabled except for placing calls.
- In Simple Mode, shortcuts by Keypad and Quick Operations (see P.1-24) are disabled.

# **Call Time**

Check estimated Call Time of the most recent call or Total Talk Time. Call Time appears for calls made and those received.



Index Menu ► Functions ► Charges

Select **E**Call Time and press •

For Total Talk Time, select **□ Total Talk Time**→ Press •

Press 🗟 to exit

Index Menu ► Functions ► Charges ► Instant Display

## Choose **□**On or **□**Off **→** Press **●**

• Call Charge also appears for calls you made.



- Total Talk Time and Call Time remain even after handset power is turned off.
- Ring time for incoming or outgoing calls is not counted. On hold time is counted.

2-18

**Basic Handset Operations** 

# Call Charge

Check estimated Call Charge of the most recent call or Total Charges.



Basic

Handset Operations

Index Menu ► Functions → Charges

- Select **I** Call Charge and press For Total Charges, select Total Charges Press (•)
- Press 🖹 to exit

Reset

Reset Total Charges

Index Menu ► Functions ► Charges ► Total Charges

Press ● ▶ Enter Security Code ▶ Choose ■ Yes ▶ Press ●

Instant Display

Set Call Charge to appear automatically after each call

Default Off

Index Menu ► Functions → Charges → Instant Display

## Choose **■**On or **■**Off **→** Press **●**

- Call Charge will not appear after leaving a 3 Way Call (Break Away).
- Call Time appears at the same time.



- Total Charges and Call Charge remain even after handset power is turned off.
- When the most recent call is a received call, -----Yen appears.
- Sum of charges appears for 3 Way Calling (Optional Service).
- Call Charge will not appear when calls are interrupted due to weak signal.

# My Number & Owner Profile

Confirm handset phone number.

- Save name, reading, phone numbers, mail addresses, postal code, personal data and photo.
- To create QR Code from Owner Profile, see P.12-27.
- Handset phone number cannot be changed or deleted on the handset.



Index Menu Functions

Select My Number and press (•)

- To open Owner Profile, press 🔊 Details 🖈 **Enter Security Code**
- Owner Profile contents are similar to those of Phone Book (see P.5-12).
- Press (2) to exit

Delete & Copy


Add, edit, delete or copy Owner Profile items

Index Menu ► Functions → My Number → Details (🕑)

Enter Security Code → Press • Select Edit → Press • For more, see Steps 4 - 6 in "Editing Phone Book" on P.5-15

- To delete Owner Profile (all items except handset number), enter Security Code and press ● Press
- To copy an item in Owner Profile, enter security code and press ▶ Use ↔ to select an item → Press • Select *Copy* → Press • For more, see Step 5 and onward in "Copy/Cut & Paste" on P.4-17
  - Image for Photo cannot be copied.

**Basic Handset Operations** 

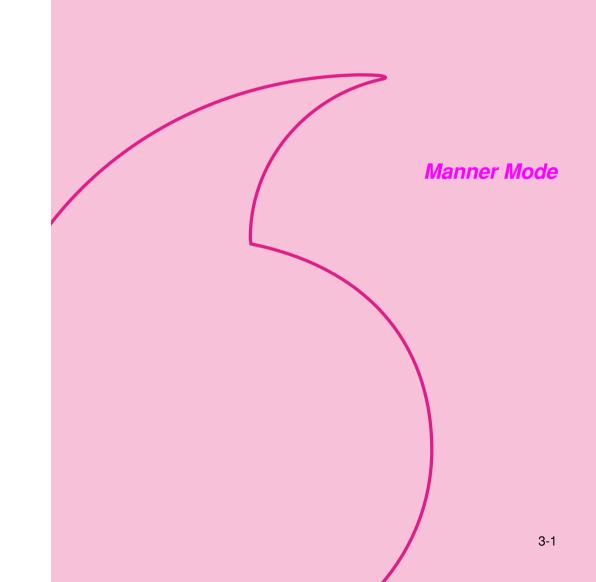

# Minding Mobile Manners

Please use your handset responsibly. Use these basic tips as a guide. Inappropriate handset use can be both dangerous and bothersome. Please take care not to disturb others when using your handset. Adjust handset use according to your surroundings.

- Turn it off in theaters, museums and other places where silence is the norm.
- Refrain from using it in restaurants, hotel lobbies, elevators, etc.
- Observe signs and instructions regarding handset use aboard trains, etc.
- Refrain from use that interrupts the flow of pedestrian or vehicle traffic.

#### **Manner-Related Features**

Manner Mode: see P.3-3

Press Manner Key to automatically mute all Ring Tones and activate Vibration mode for incoming calls, mail and information.

■ Vibration Mode: see P.8-3

Activate Vibration mode to use handset vibration to alert you to incoming calls, mail, etc. in public places.

■ Volume Settings: see P.8-2, OP.12-2

Decrease or mute Ring Tone volume for incoming calls/mail/information as well as tones for Web or V-Applications when carrying handset in public places.

■ Whisper Mode: see P.3-5

Use Whisper Mode to increase microphone sensitivity, allowing you to lower your voice and speak softly when you must use handset in public places.

Off-Line Mode: see P.3-6

Use Off-Line Mode to temporarily suspend all handset transmissions. In Off-Line Mode, incoming/outgoing calls and Vodafone live! transmissions are blocked.

■ Message Recorder: see P.12-4

Use Message Recorder to handle incoming calls when it is inappropriate or unsafe to answer.

# **Manner Mode**

## **Activating & Canceling**

Activate or cancel Manner Mode in Standby, Web information, mail windows (Mail Box, message window, etc.) or while using V-Applications.



#### **Activating Manner Mode**

Press 🦈 for 1+ seconds

83	Message Recorder	V	Vibration
S	Silent	(()	Rising Tone

#### **Canceling Manner Mode**

1 Press 📂 for 1+ seconds

disappears and Manner Mode is canceled.

#### When Manner Mode is Active

- Power On/Off and error tone as well as Keypad Sound are muted. Beeps in Call Waiting and 3 Way Calling are heard.
- Shutter Click and Self Timer tone sound even in Manner Mode.
- Settings for Manner Mode are applied to: Message Recorder, Ring Tone Level, Vibration, LED Indicator, Whisper Mode, Sound Volume, V-Appli Volume and V-Appli Vibration
- When Message Recorder is recording messages, the other party's voice is heard through Earpiece.

3-2

3

1anner Mode

## **Manner Mode Settings**

Customize Manner Mode settings.

Default settings:

Message Recorder	On	Ring Tone Level	Silent (All)	Vibration	On (All)
LED Indicator	Small Light	Whisper Mode	On	Sound Volume	Silent
V-Appli Volume	Silent	V-Appli Vibration	On		

Message Recorder Activate or deactivate Message Recorder

Index Menu ► Functions → Settings 2 → Manner Settings → Message Recorder

Choose **□***On* or **□***Off* **→** Press **⊙** 

Ring Tone Level Set Ring Tone volume

ndex Menu ► Functions → Settings 2 → Manner Settings → Ring Tone Level

Select from **□***Incoming Call* to **□***Confirm Delivery* **→** Press **○ →** Select ■Silent, □Rising Tone or ■Level 1 → Press •

• For *Silent*, Speaker is muted and sounds can be heard through headphones. Volume is fixed to Level 1.

Vibration

Set vibration to alert you to incoming calls/mail

Index Menu ► Functions ► Settings 2 ► Manner Settings ► Vibration

Select from **□***Incoming Call* to **□***Confirm Delivery* Press (•) **→** Choose **□** On or **□** Off **→** Press **⊙** 

#### **Rising Tone**

When *Silent* is set for Ring Tone Level (see **P.8-2**) or Alarm Tone Volume (see P.12-15), no sound is heard. If Level 1 to Level 5 is set, Rising Tone is activated and sound will increase to the set level (*Level 3* is set: *Level 1*  $\rightarrow$  *Level 2*  $\rightarrow$  *Level 3*).

#### Vibration

Handset vibrates even when Vibration for Call Functions (see P.8-3) or Alarm (see P.12-15) is set to Off or SMAF Link.

**LED Indicator** 

Flash Mobile/Small Light for incoming communications

Index Menu ► Functions → Settings 2 → Manner Settings → LED Indicator

Select from **■***Normal* to **■***Off* **→** Press **●** 

Normal	Mobile/Small Light flashes as set in Call Functions (see P.8-2)
Small Light	Small Light flashes
Off	No lights

Whisper Mode

Activate or deactivate Whisper Mode

Index Menu ► Functions ► Settings 2 ► Manner Settings ► Whisper Mode

#### Choose **□**On or **□**Off **→** Press **○**

• Activate Whisper Mode to increase microphone sensitivity, allowing you to lower your voice and speak softly when you must use handset in public places (\* flashes).



Whisper Mode can be set On/Off during a call by pressing for 1+ seconds. After the call, Whisper Mode will be canceled.

**Sound Volume** 

Adjust sound volume

Index Menu ▶ Functions ▶ Settings 2 ▶ Manner Settings ▶ Sound Volume

Adjust level **▶** Press **●** 

V-Appli Volume

Adjust V-Appli volume

Index Menu ► Functions ► Settings 2 ► Manner Settings ► V-Appli Volume

Select **■**Silent or **■**Level 1 **→** Press **●** 

V-Appli Vibration Handset vibrates while using V-Applications

Index Menu ► Functions ► Settings 2 ► Manner Settings ► V-Appli Vibration

Choose **□**On or **□**Off **→** Press **●** 

3-5 3-4

Use Off-Line Mode to temporarily suspend all handset transmissions.

- In Off-Line Mode, incoming/outgoing calls and Vodafone live! transmissions are blocked.
- Off-Line Mode is *Off* by default.



#### **Activating Off-Line Mode**

Index Menu 

Functions 

Settings 1 →
Off-Line Mode

Choose On and press appears.

## Canceling Off-Line Mode

Index Menu 

Functions 

Settings 1 


Off-Line Mode



Emergency calls (110, etc.) are not possible in Off-Line Mode. For more, see **P.2-5** "Emergency Calls."



- When Off-Line Mode is set while a Network V-Application is paused (see
   ☑P.10-6), V-Appli Paused Cannot Connect to Network in Off-line Mode
   Off-line Mode On? appears. Choose Yes and press to enter Off-Line Mode.
   (Network connection is disabled until Off-Line Mode is canceled.)
- While handset is closed or Display shuts down for Panel Saving in Off-Line Mode, Small Light flashes red, green and orange.

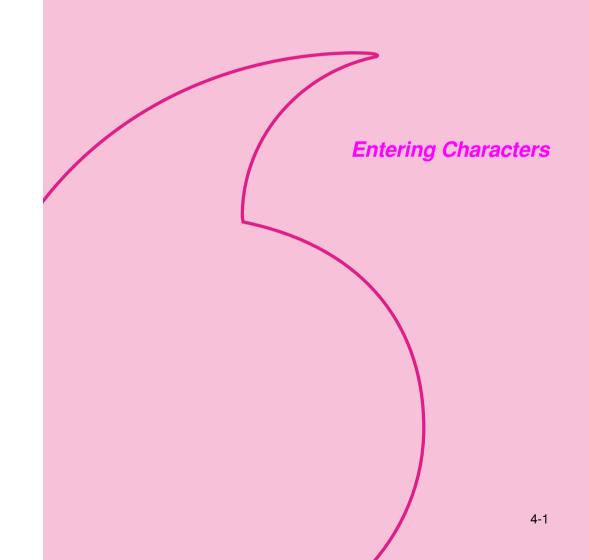

# **Character Selection**

Use Kana and Pager (see **P.4-10**) to enter alphanumerics. Symbols, hiragana, kanii, katakana and Pictographs. With the exception "Pager Code" on P.4-10, most text entry operations are described using Kana Mode.

## **Entry Modes**

Press 😰 to toggle between character entry modes as follows:

$$a \to 1 \to 絵 \to \not x \to r \to r \to a \to a$$

Alternatively, use o to toggle between entry modes after pressing once.



Current Entry Mode

Entering Characters

## Available Modes

_				
	漢	Kanji (hiragana)	Α	Single-byte alphanumerics (upper/lower case)
	ア	Double-byte katakana	a	Single-byte alphanumerics (lower case)
Ī	7	Single-byte katakana	1	Single-byte number
	Α	Double-byte alphanumerics (upper/lower case)	絵	Pictograph Code
	a	Double-byte alphanumerics (lower case)	区	Character Code

#### **Upper & Lower Case**

■ In double- or single-byte alphanumerics mode, press to toggle between upper case and lower case. For Pager Mode (see P.4-10), in double- or single-byte entry mode, press ﷺ to toggle between upper and lower case.



## Pictograph & Character Codes

Press (9) to toggle as follows:

Pictograph Code 1 → Pictograph Code 2 → Pictograph Code 3 → Pictograph Code 4 → Pictograph Code 5 → Pictograph Code 6 → Character Code → Pictograph Code 1

• Pictograph Code page number appears at the bottom.

- Handset Character Codes correspond to 6,355 kanji.
- Some characters are not available for mail addresses, etc.

## **Kev Assignments**

Multiple characters are assigned to each key. Press a key to toggle between character options for that key.

Example: In katakana entry, press (10 three times for ).

When entering characters, press (2) to toggle between character options in reverse. (Not available for entering single-byte numbers, Pictographs and Character Codes.)

Example: Enter し, then press つ to return to あ.

Konji (Hirogona) Kotekana Alebanyarina Numbera Dietagraph Code 1 6											
Kev	Kanji (Hiragana)	Katakana	Alphanumerics	Numbers	Pictograph Code 1 - 6						
,	[Double-byte]		[Double & Single-byte]	[Single-byte]	& Character Codes						
10 3	あいうえお	アイウエオ	@. /1	1	1						
(≥ <sup>ngc</sup> )	あいうえお	アイウエオ	□ (space)	2	2						
	かきくけこ	カキクケコ	ABCabc2		_						
(1) (1) (1) (1) (1) (1) (1) (1) (1) (1)	さしすせそ	サシスセソ	DEFdef3	3	3						
400	たちつてとっ	タチツテトッ	GHIghi4	4	4						
5 #	なにぬねの	ナニヌネノ	JKLjkl5	5	5						
E TE	はひふへほ	ハヒフヘホ	MNOmno6	6	6						
Z grans	まみむめも	マミムメモ	PQRSpqrs7	7	7						
<b>⊟</b> μος	やゆよゃゅょ	ヤユヨャュョ	TUVtuv8	8	8						
E S	らりるれろ	ラリルレロ	WXYZwxyz9	9	9						
□o€ <sup>à</sup>	わをんー、。 ぱ (Line Break)	ワヲンー、。 ∳ (Line Break)	0 ♣ (Line Break)	0	0						
*~%	<ul> <li>Log/Double-byte Symbol/Pictograph List<sup>1</sup></li> </ul>	* • _2	Single-byte Mail/ Web Extensions <sup>3</sup>	¥-P (Pause)⁴							
#58	Log, Doubl										
(5)	Conversion (Up)		Curso	or Up							
<b>②</b>	Conversion (Down)		Cursor Down	√ (Line Break)							
•		II.	Cursor Left								
(o)			Cursor Right								
文字			Change Entry Mode								
ZYSE-N	Toggle Case (for	some characters)	Toggle Case + Toggle Mode (upper/lower and lower case)								
Press	Delete One Character/ Cancel Conversion	]	Delete One Characte	r	Delete Code/One Character						
Long Press			Delete All								
0		Recover	up to 64 deleted cha	aracters <sup>6</sup>							
$_{ullet}$			OK								
<b>@</b>	Phonetic Conversion  Toggle Pictogra Code 1 - 6 and Character Cod										
	Hiragana to Katakana/ Alphanumerics Conversion  Character Code  Open list <sup>7</sup> for Pictograph Code 1										

<sup>&</sup>lt;sup>1</sup>Disabled until hiragana is converted.

<sup>&</sup>lt;sup>2</sup>- is available only in single-byte katakana entry.

<sup>&</sup>lt;sup>3</sup>Extensions are listed for easy entry.

<sup>&</sup>lt;sup>4</sup>- and **P** (Pause) are for phone number entry.

<sup>&</sup>lt;sup>5</sup>Single-byte for single-byte katakana/alphanumeric entry.

<sup>&</sup>lt;sup>6</sup>Press (7) once for each character to recover immediately after deleting. [Not available after deleting text with (Long Press).]

List is not available for Character Codes.

# **Entering Characters**

## Kanji, Hiragana & Katakana

Following the example below, enter **鈴木** to learn how to enter characters in kanji (hiragana) entry mode. Switch to double-byte or single-byte katakana mode to enter katakana. Alternatively, enter hiragana and then select katakana from the word suggestion list.

1 Press es three times

Word suggestions change as hiragana are entered.



**9** Press 📀

• When the next character is on the same key, press 🕞 first.



3 Press three times and press



**⊿** Press twice

• To enter hiragana without converting to kanji, skip to Step 6.



Fress © Convert and use © to select a word
To see other suggestions, press Part or © Back


To exit the list, press 💯.

To change segment, see "Segmenting Phrases" below.



6 Press



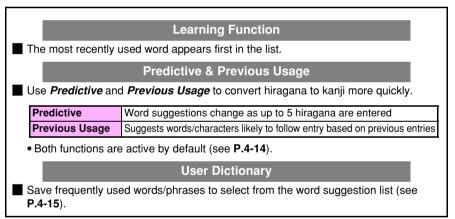

## **■** Segmenting Phrases

If the word is not in the list, press after Step 5 to exit. Then use to segment hiragana to convert separately.

Example: Segment みち into み and ち.



## Selecting Multiple Converted Words

Press (本漢字本)

Example: To enter 西山大輔









Small Kana (つ,ッ, etc.)

Enter small hiragana あ, い, う, え, お, つ, や, ゆ and よ as well as small katakana.


## Enter a character and press Argent



Adding or

## Enter a character and press

• In kanji (hiragana)/double-byte katakana entry, press the key once to add to か(Ka) row. さ(Sa) row and た(Ta) row characters, and press twice to remove. For the (Ha) row characters, press once to add \*, twice to add \* and three times to remove.

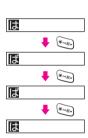



Entering Characters

#### In Single-byte Katakana Entry

- Press once to add and twice for . Symbols are single-byte.
- Press ( to remove \* or \* .

## **Entering Alphanumerics**

Enter alphanumerics in double-byte alphanumerics (upper & lower case) or single-byte alphanumerics (upper & lower case) mode. Alternatively, enter numbers in single-byte number mode.



- In double-byte or single-byte alphanumerics mode, press Fig. to toggle between upper and lower case.
- When the next character is on the same key (example: entering A then B), press () first to move cursor.

## Symbols, Pictographs & Emoticons

#### Symbols & Pictographs

## Press and or to open Log List (Log List is available in some entry modes)

Recently used Symbols/Pictographs appear.

- -- appears by default or when Log List is deleted (see below).
- Use •• to select one and press
  - Repeat Step 2 to enter more.
  - To see more lists, press 🕬 or 🥥. The list toggles as follows: Log List  $\rightarrow$  Symbol List (1 - 3)  $\rightarrow$  Pictograph List (6 - 1)
    - Press 🖦 to toggle the list in reverse order.
    - Press ② to scroll down.







- In a text entry window, press ♠ Menu ♦ Select Input/Conversion ♦ Press
  - Select \( \boldsymbol Clear Symbols \( \Delta \) \( \Press \( \Omega \) \( \Delta \) \( \Del
    - Press 🎾 twice to return to the text entry window.
- Log List cannot be deleted in Pictograph Code mode.

#### In Pictograph Code Mode

- To enter a Pictograph directly, enter 2 digits (see **OP.16-8 16-10**).
  - To edit a code mid-entry, press 💓 to clear first digit then enter correct digits.
- To select from Pictograph List, follow these steps.

Press ♠ Select a Pictograph ♦ Press •

• To toggle through Page 1 - 6 and Log List, press 🥥



- Single-byte Symbols do not appear in Log List.
- Symbols are double or single-byte according to the entry mode. (Pictographs are all double-byte.)
- Alternatively, enter きごう and press ② Convert. Some Symbols can be selected.

- Select **E***Emoticons* and press **(•)**
- Select an emoticon and press (•)
  - Enter two digits (01 50) to jump to the emotion assigned to the number.



Emoticons cannot be entered in Pictograph Code (1 - 6) mode.



**Entering Characters** 

• For other emoticons, enter **b** and press Onvert

• Alternatively, enter a descriptive word such as b-l or b-k and press c Convert. Corresponding emoticons can be selected.

#### **Space**

In a text entry window, press ()

• Alternatively in alphanumeric entries, press ( seven times to enter a space.



#### Line Break

Insert line breaks in text, Text Memo, BBS, etc.

Press (2) at the end of text


• To insert line breaks in text, press □ until 4 appears. For kanji (hiragana) entry mode, then press . Line break is inserted at the cursor position.

• Keystroke count varies by character entry mode (see P.4-3).




## **Mail & Web Extensions**

In alphanumeric entry, press

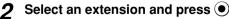

• Mail addresses and URLs are single-byte.

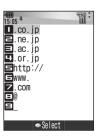

## **Copying from Phone Book**

Insert Phone Book entry items into text entry windows. Select from names, phone numbers, mail addresses or Personal Data.

In a text entry window, press 🔊 Menu

Press Q

Open a Phone Book entry

To search Phone Book, see P.5-13. ■ Skip the step of pressing () (TEL).

Use •• to select an item and press •

Use • to move cursor to target location

Press (•) Selected item is inserted.



#### **Inserting Owner Profile**

Press ● → Select ■ Profile → Press ● → Enter Security Code • For more, see Steps 4 - 6 above.

## **Character Code**

Use multi-digit Character Codes to enter characters.

In Character Code entry mode, enter four digits (see P.14-9 - 14-12)

**Entering Characters** 

2 Select ■Input/Conversion and press ●

3 Select Input Method and press

4 Select ■ Pager and press ●

Pager Code entry window opens.

To switch to Kana Mode, select **■Kana** Press •

5 Enter two digits (see P.4-11)

• Pager Mode is active until switched to Kana Mode.

#### **Character Entry Modes**

■ For text entry in Pager Mode, press (\*\*) to toggle between entry modes as follows:

Single-byte lower case (\*\*) → Pictograph Code 1 - 6 (徐) & Character Code

mode (区) → Double-byte lower case (\*\*)

• Press (9) to toggle between Pictograph Code 1 - 6 and Character Code mode.

■ Press (Type to toggle between upper and lower case.

Tip

**Entering Characters** 

• Hiragana to Katakana/Alphanumerics Conversion is disabled in Pager Mode.

• To enter \* or \*, see Pager Code List on **P.4-11**.

#### **Pager Code List**

• Blanks indicate no entry.

• Upper and lower case are available for characters with gray background. Press ( to switch.

#### Double-byte upper case

		S	eco	nd	digi	it (F	res	S S	eco	ndly	y)
		1	2	3	4	5	6	7	8	9	0
	1	あ	S	ぅ	え	お	Α	В	O	D	Е
t)	2	か	₩	٧	Þ	IJ	L	O	Ι	-	っ
first)	თ	さ	د	Ы	Þ	そ	×	J	Σ	Z	0
SS	4	た	þ	ቦ	٧	۲	Ը	Ø	ĸ	S	Т
Pre	5	な	IJ	Ø	а	6	כ	>	8	X	Y
digit (Press	6	は	Ó	ß	<	ほ	Ζ	٠.		-	/
diç	7	ま	み	ίЭ	ର	ŧ	¥	Ø			*1
First	8	ゃ	(	Ø	)	አ	X	#	Space	8	*2
F	თ	ß	ഉ	る	r	ろ	7	۵	თ	4	5
	0	ゎ	を	Ь	*	0	6	7	8	9	0

#### Single-byte upper case

		S	есо	nd	digi	it (F	res	s s	есо	ndl	y)
	•	1	2	3	4	5	6	7	8	9	0
	1	7	1	ゥ	Ι	1	Α	В	С	D	Ε
t)	2	ħ	#	ኃ	ታ	П	F	G	Ξ	-	7
firs	ფ	Ħ	ふ	ス	Þ	ゝ	K	<b>ا</b> ــ	M	N	0
SS	4	タ	Ŧ	シ	ī	4	Ρ	ø	R	S	T
Pre	5	t	11	ヌ	*	$\overline{}$	>	>	¥	Χ	Υ
jit (	6	٨	۲	כ	<	ħ	Ζ	٠.		1	1
diç	7	7	m	7	×	ŧ	¥	æ			*1
First digit (Press first)	8	þ	(	1	)	П	X	#	Space	8	*2
F	9	Ē	٦	۱	د		1	2	ფ	4	5
	0	7	Ŧ	ソ	*	0	6	7	8	9	0

#### Double-byte lower case

		S	есо	nd	digi	it (P	res	s s	есо	ndl	y)
		1	2	3	4	5	6	7	8	9	0
	1	ъ	S	'n	え	Ħ	а	Ь	С	d	е
t)	2						f	0,0	r	-	ij
First digit (Press first)	3						k	_	E	c	0
SS	4			ი			р	q	r	s	t
Pre	5						u	٧	w	х	У
jit (	6						Z				
diç	7										*1
irst	8	Þ		Ø		አ					*2
Ŧ	9										
	0				,	۰					

#### Single-byte lower case

		S	есо	nd	digi	it (P	res	s s	есо	ndl	y)
		1	2	3	4	5	6	7	8	9	0
	1	7	1	ゥ	I	オ	а	b	С	d	е
t)	2						f	100	h	-	j
firs	თ						k	-	€	r	0
SS	4			ッ			p	σ	۲	တ	t
First digit (Press first)	5						3	>	W	X	у
jit (	6						Z				
dig	7										*1
irst	8	Þ		ם		п					*2
Ē	9										
	0				,						

\*1Press (in mail message text, Text Memo, etc.).

\*2Press ( to toggle between upper and lower case.

• w and are double-byte.

4

**Entering Characters** 

# **Entering Characters**

# **Conversion Methods (Japanese Only)**

#### **Phonetic Conversion**

Enter alternate readings to search for kanji.

Enter reading in hiragana

Press (2) Kanji

Select a kanji and press



## **One-Hiragana Conversion**

Enter the first hiragana to access previously selected words.

Example: To enter 鈴木



- One-Hiragana Conversion and User Dictionary (see P.4-15) share memory. Selected words may not be saved if User Dictionary is full.
- Up to 20 entries are saved per hiragana (Title Word) between One-Hiragana Conversion and User Dictionary. When memory is full, the oldest entry is deleted to make room for a new entry. However, User Dictionary remains unchanged.

## Hiragana to Katakana/Alphanumerics Conversion

Enter katakana and alphanumerics in kanji (hiragana) entry mode.

Enter hiragana and press 🔛 Int letted • To enter AM, press Em E then D out letter

Use () to select a word and press (

 Hiragana to Roman Letter Conversion (hiragana with \* or \* is converted to the same characters/Symbols):

あ	@	い		う	/	え	_	お	Space
か	Α	き	В	<	С	け	Space	2	Space
さ	D	U	Е	す	F	t	Space	そ	Space
た	G	ち	Н	つ	ı	τ	Space	٢	Space
な	J	ΙC	K	ぬ	L	ね	Space	Ø	Space
は	М	ひ	N	ßı	0	^	Space	ほ	Space
ま	Р	み	Q	む	R	め	S	ŧ	Space
か	Т	ø	U	ょ	V				
5	W	b	Х	る	Υ	n	Z	ろ	Space
ゎ	,	を		h	Space	— (Long	Sound)、。L	ine Break	Space

• Hiragana to Number Conversion (hiragana with \* or \* is converted to the same numbers):

■あ (A) row...1 ■ か (Ka) row...2 ■さ (Sa) row...3 ■た (Ta) row...4 ■な (Na) row...5 ■は (Ha) row...6 ■ま (Ma) row...7 ■ † (Ya) row...8 ■ **5** (Ra) row...9 ■わをんー (Long Sound)、。Line Break…0

## **Quick Conversion (for Hiragana)**

Quick Conversion helps reduce keystrokes needed to enter frequently used words. A list of word suggestions appears based on the key pressed.

Use Quick Conversion in kanji (hiragana) mode only.

Example: To enter 微妙

Normal Conversion	(\$) (\$) (\$) (\$) (\$) (\$) (\$) (\$)
Quick Conversion	(ば) (ま) (ま) (で) (あ) (convert)

## Enter hiragana and press (\*)

Cursor turns green.

- While cursor is green, use to segment entered hiragana and then convert one segment at a time.
- To cancel Quick Conversion, press <a> Press</a> <a> for normal conversion</a>
- Use () to select a word and press (



The most recently used word (mostly nouns) appears first.

Characters

#### **One Hiragana Predictive Entry**

Enter hiragana and initiate Quick Conversion. Words starting with a hiragana in the same row ( $\boldsymbol{5}$ ,  $\boldsymbol{6}$ ),  $\boldsymbol{7}$ ,  $\boldsymbol{7}$ ,  $\boldsymbol{7}$  for  $\boldsymbol{5}$ ) appear. Word suggestions vary by time of day.

#### Example: When **5** is entered

5:00 - 10:59	11:00 - 16:59	17:00 - 22:59	23:00 - 4:59
朝一番 朝帰り	あちぃ〜 後でね	遊ぼう明日	アウチ!! ありがとう
行ってきます	いただきま~す♪	急いで行くよ	いえーい!!!
いってらっしゃい	移動中:	今どこ? :	行こうね :

- Words in the list are preset by time blocks.
- If Clock is not set, only words for 11:00 16:59 are available.

#### **One Hiragana Word Call**

Enter the first hiragana of entries you used Quick Conversion for. The most recently selected word appears first.

Example: You entered あたあさわ and selected お父さん last time.



## **Conversion Settings**

Disable Predictive Previous Usage

Disable  $\it Predictive$  or  $\it Previous Usage$  (see P.4-5)

Default On

In a text entry window, press 

Select 

Input/Conversion

Press 

Pr

Choose **□**Off → Press •

Reset Learning

Clear log of words selected in kanji conversion, Predictive, etc.


In a text entry window, press <a> ■ Menu</a> <a> ■ Select</a> <a> ■ Input/Conversion</a> <a> ■ New Menu</a> <a> ■ New Menu</a>

- → Press
   → Select
   Reset Learning
   → Press
   → Select
   OK
- ▶ Press ●
- Words saved in User Dictionary remain.

# **Dictionaries (Japanese Only)**

## **User Dictionary**

Save up to 100 frequently used words/phrases and assign Title Words in hiragana to entries. In text entry windows, enter Title Word and convert. Entries appear among word suggestions. Save up to five entries per Title Word.

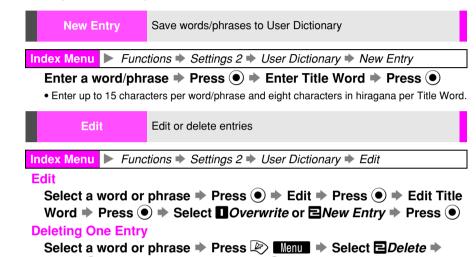

## **V302SH Download Dictionary**

Press (●) **→** Choose **□** Yes **→** Press (●)

**Deleting All** 

▶ Press (●)

Download specialized V302SH Download Dictionaries from Sharp's Space Town Mobile Internet site. Activate up to two dictionaries at one time to improve handset character conversion. Dictionary words appear among word suggestions. For details, access Sharp's *Space Town* Mobile Internet site (see P.8-2).

Press ▶ Menu → Select ■ Delete All → Press • → Choose ■ Yes



## From Dictionary Library

- Press Select Functions Press Select Settings 2 Press Press Select **■** User Dictionary **→** Press **●**) **→** Select **■** Acquire Dictionary **→** Press **●**) **→** Select **■** Dictionary Library **→** Press **● →** Select a dictionary **→** Press **●** Menu
  - Select ■Save Dictionary Press Select a number Press ●
  - When a file is already saved, Overwrite? appears → Choose Yes or No → Press (•)

Cancel

Cancel dictionary


ndex Menu ► Functions → Settings 2 → User Dictionary → Acquire Dictionary

Select a number → Press ● Press ▶ Menu → Select Cancel → Press (•)

# **Editing Characters**

## **Deleting**

Use 😯 to select a character and press 💯 The highlighted character is deleted.

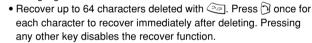





Press of 1+ seconds to delete an entire entry. Characters deleted in this manner cannot be recovered.

## Replacing

- Press to delete a character
- Enter another character



## Copy/Cut & Paste


When **Menu** appears, copy or cut and paste text (up to 6,000 single-byte characters) into the same window or another.

- In a text entry window, press 🔊 Menu
- Select **□** Copy or **□** Cut and press
- Move cursor to the first character of text and press (•)

Start point is set (End appears). To change the start point, press .

- Move cursor to the end of text and press •
- Open text paste target window and press 🔊 Menu
- Select Paste and press
- Move cursor to target location and press Text is inserted.




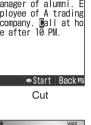



4-17

## **Deleting Text Before or After Cursor**

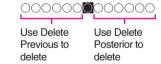

- Press 💫 Menu
- Select Delete Posterior or Delete Previous and press
- Press

# **Text Memo**

Save frequently used phrases for use in mail message, etc.

- Save up to 20 Text Memo phrases.
- Save up to 128 single-byte characters per phrase.
- Ten editable Text Art are saved by default. Edit and replace default entries.
- When memory is full, delete entries to make room for new ones.
- To create QR Code from Text Memo, see P.12-27.

Index Menu ► My Files

Select **Text Memo** and press •

Titles or the first part of saved text appear.

To open text, select one ▶ Press •

Select a number and press

If the number is already used, saved text appears. Press 🔊 Menu 🖈 Select 🗗 Edit 🖈 Press

Enter text and press •

Text is saved.

• To save more text, repeat Steps 2 - 3.

#### Saving from Message or Phone Book

In a text entry window, press ♠ Menu → Select ♣ Save Text Memo → Press • Move cursor to the first character of text → Press ● Move cursor to the end of text → Press • Select a number → Press •

Edit/Delete

Edit or delete Text Memo

Index Menu ► My Files → Text Memo


**Edit Memo** 

Select text → Press 🔊 Menu → Select Edit → Press • → Edit → Press

**Delete Single Text Memos** 

Select text → Press → Select Delete → Press → Choose **■** *Yes* **→** Press **●** 


• Default Text Art is restored after deleting text in 00 - 10

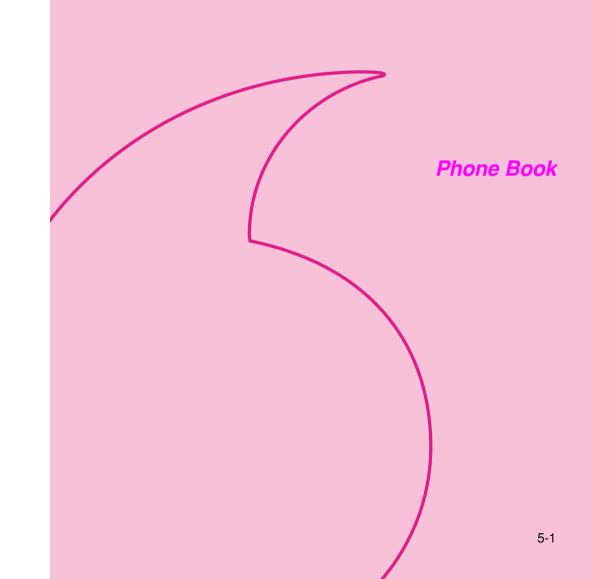

## **Overview**

Save frequently used phone numbers and mail addresses to Phone Book. Entry names appear for calls from numbers saved in Phone Book.

#### ■ Dialing from Phone Book (see P.5-11)

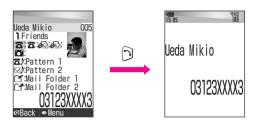

## Sending Sky/Long Mail from Phone Book (see OP.3-3)



#### ■ When a Call Arrives





#### **Back-up Important Information**

Keep a separate copy of important information. When battery is exhausted or removed for long periods, Phone Book entries may be lost. Handset damage may also affect information recovery. Vodafone is not liable for any damages resulting from accidental loss/alteration.



- Use Phone Book Lock (see P.11-3) to protect entries from accidental alteration and to restrict access to Phone Book information.
- Exchange Phone Book entries with other handsets, etc. via infrared (see P.10-2).

# **Saving to Phone Book**

## **Phone Book Entry Items**

- Save up to 500 entries (000 499) in Phone Book.
- To create QR Codes from Phone Book entries, see P.12-27.

	Item	Description			
		Enter up to 16 single-byte characters.			
1	: Name	Use kanji, hiragana, katakana (double or single-byte),			
		alphanumerics (double or single-byte) and Pictographs.			
2000	: Reading	Katakana, alphanumerics or Symbols appear as names are			
	. Heading	entered (up to 10 single-byte characters including * and *)			
8	: Phone Number	Enter up to three phone numbers (24 digits each)			
€₽	: Mail Address	Enter up to three mail addresses (60 single-byte characters each)			
••	: Group	Sort entries into 10 Groups (0 - 9). Change Group names or set			
~~	s. Group	Ring Tone by Group.			
	: Personal Data	Add personal details. Use up to 60 single-byte characters.			
1	: Secret Mode	Restrict access to Phone Book entries by saving them as Secret			
F	. Secret Mode	Mode entries			
		Select an image to appear when you open a Phone Book entry.			
O	: Photo	Activate Picture Call/Mail to see the image set here for incoming			
		calls/mail.			
ngs	Personal Ring Tone	Set Ring Tone by caller			
Settings	Incoming Notice	Set Ring Tone by sender			
	Picture Call/Mail	Set images to appear by caller or sender			
Option	Mail Folder	Messages are sorted into folders			

#### **Incoming Calls while Editing**

Contents are temporarily saved for later editing. To return, end the call and follow these steps.

Press ● → Choose ■ Yes → Press ●

5-2 5-3 Enter a name

Press (

)

Characters entered for names (reading for kanii) appear after ...

- Reading does not appear for Pictographs, pasted characters and names entered with Quick Conversion.
- Katakana, roman letters, numbers and Symbols appear in single-byte.
- To correct reading, select : ▶ Press ▶ Edit reading ▶ Press



Phone Book Details

Select **5**: and press •

## Enter a phone number

- Include the area code for landline phone numbers.
- To correct phone number, press € to move cursor Press ₹ to delete a digit at the cursor position → Enter a phone number (Press 🍑 for 1+ seconds to clear all.)
- Press (- counts as a digit.)
- To enter Push Tones, press ★ three times to enter Pause ( P) → Enter alphanumerics
- Each Pause ( P) indicates a one-second pause. The subsequent alphanumerics are also sent as Push Tones (see P.12-2).
- Press (•)
- Select an icon and press (•)
  - To save additional phone numbers, select **☎ :< Unsaved> ▶** Press ▶ Repeat Steps 4 - 6
- Select @ : and press (●)
- Enter a mail address
- Press
- Select an icon and press (•)
  - To save additional mail addresses, select &: < Unsaved> → Press → Repeat Steps 8 - 10
  - To set a Group, select 🞎: → Press 💿 → Select a Group → Press 💿
  - To enter Personal Data, select 🛂: → Press → Enter information → Press •
  - Photo: see **P.5-6**
  - Saving Secret Mode Entries: see P.5-7

## Press 🔊 Save

Memory Number entry window opens. Assign a Memory Number to each Phone Book entry.

## 19 Enter Memory No. (000 - 499)

Entry is saved to Phone Book.

- Use headphones to call the number saved in Memory Number 000 (see P.12-32).
- Use Speed Dial to call numbers saved in Memory Numbers 000 099 (see P.5-14).

#### Assign Memory No. Automatically

- Press \* to assign the smallest available number.
- To specify a range of numbers, enter hundreds or tens digit and press
  - To specify hundreds, enter first digit 

    Press 

    Press
  - Example: Enter . The range is 300 399.
  - To specify tens, enter two digits → Press 🖦 Example: Enter ( ) The range is 210 - 219.

#### Warning Messages

On Display	Cause	Operation
Overwrite?	The Memory Number is already in use	Choose <b>Yes</b> and press • to overwrite the entry. Choose <b>No</b> and press • to enter another Memory Number.  To assign Memory Number automatically, see above.
Memory Full Cannot Save	All Memory Numbers are in use	Overwrite or delete entries (see P.5-15)
Secret Data saved	The number is already used for a Secret Mode Phone Book entry	Activate Secret Mode (see <b>P.11-6</b> ) to overwrite

## **Photo**

Save an image (still image or animation) to Phone Book entries. The image appears for calls/mail from that entry.

#### **Setting Photo**

- 1 In Phone Book Details (see P.5-4), select 1 and press •
- Selecting from Data Folder
  - **1** Select **□** Data Folder and press
  - 2 Select an image from Data Folder (see P.9-6) and press
  - 3 Press

Phone Book Details (see P.5-4) returns. Complete other fields.

• Some images may be too large for Phone Book Photo.

#### Capturing New Image

- Select Mobile Camera and press ●
- 2 Select Sha-mail Mode or Wallpaper Mode and press 

  ■
- Frame image on Display
- 4 Press

Captured image appears.

5 Press

Image is saved to Data Folder and Phone Book Details (see **P.5-4**) returns. Complete other fields.

#### Picture Call/Mail

Picture Call/Mail is Off by default.

- 1 In Phone Book Details (see P.5-4), select *Option Settings* and press
- 2 Select Picture Call/Mail and press ●
- 3 Choose **□**On and press 
  - To cancel Picture Call/Mail (hide images for incoming calls/mail), choose **■** Off ▶ Press ●
- 4 Press © Set

Phone Book Details (see P.5-4) returns. Complete other fields.

Note

Picture Call/Mail is canceled when source image in Data Folder is deleted.

## **Saving Secret Mode Entries**

- 1 In Phone Book Details (see P.5-4), select **r**●: and press ●
- 2 Choose **□**On and press

Phone Book Details (see P.5-4) returns. Complete other fields.

• Activate Secret Mode (see P.11-6) to open Secret Mode entries.

#### **Change Secret to Standard**

- Activate Secret Mode (see P.11-6) and follow these steps.
  - Open a Phone Book entry (see P.5-11) → Press → Select *Edit* → Press → Select re: → Press → Choose **B** Off → Press → Save entry (see Steps 6 8 on P.5-15)



Do not save confidential information in Phone Book. Security Code and thus Secret Mode entries may be compromised.



When not in Secret Mode, Phone Book Names/Photo images do not appear for incoming calls/mail from numbers/addresses in Secret Mode entries. Personal Ring Tone and Incoming Notice are disabled. Names for numbers in Secret Mode entries do not appear in Redial or Call History. Names saved in Redial/Call History before an entry is converted to a Secret Mode entry appear even if handset is not in Secret Mode.

## Saving from Redial or Call History

Index Menu ► Tel Ops

Select \*\*Redial or \*\*Eall History and press \*\*O

Select an entry and press 🔊 Menu

Select Add to Phone Book and press (•)

New Entry

1 Select New Entry and press •

2 Enter name and press (•)

Phone number is entered automatically and Phone Book Details (see P.5-4) appears. Complete other fields.

#### New Item

■ Select ■ New Item and press ●

Select a Phone Book entry (see Step 2 on P.5-11)

• When three phone numbers are already saved, the phone number is not added.

3 Press (•)

4 Select an icon and press

Phone Book Details (see P.5-4) appears. Complete other fields.



Call History records without Caller ID cannot be saved to Phone Book.



Numbers and mail addresses in received messages (see OP.4-7) or Notepad Memory (see P.2-13) can be saved to Phone Book.

## **Phone Book Memory Status**

Index Menu 🕨 Functions 🖈 Settings 1

Select **Memory** and press •

Number of entries appears.

Press 🗐 to exit.



# **Option Settings**

Set Personal Ring Tone, Incoming Notice, Picture Call/Mail (see P.5-6) and Mail Folder. Select Set All or One Number/Address.

ISAT AII	Apply the same setting to every number/address in a single Phone Book entry. Set All cancels One Number/Address settings.
One Number/	Apply setting to each number/address independently. One Number/
Address	Address cancels Set All settings.

#### Overview

In Phone Book Details (see P.5-4), select *Option Settings* and press (•) Option Settings menu appears.

Select an item and press

Apply Same Setting to All

■ Select ■ Set All and press ●


## Settinas by Number/Address

■ Select ■ One Number/Address and press •

2 Select a number or address and press •

**3** Choose **■** On and press **●** 

To cancel, choose **□** Off → Press • Press • Press

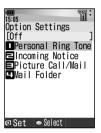

Option Settings Menu

#### Cancelina

1 Choose **■**Off and press **●** 

Option Settings menu returns.

Press 🞾 Set to exit.

Set Options (see P.5-10)

Phone Book Details (see P.5-4) returns. Complete other fields.



For phone numbers, the following settings apply only to Vodafone handset numbers: Incoming Notice and Mail Folder.

## **Setting Options**

Follow these steps after opening Option Settings menu (see P.5-9).

Personal Ring Tone Select Ring Tone, vibration, etc. for incoming calls/mail from & Incoming Notice numbers/addresses saved in Phone Book

#### **Ring Tone**

Select **■** Personal Ring Tone or **■** Incoming Notice **→** Press **●**) **→** Perform Step 3 on P.5-9 to set target number/address → Select ■Ring Tone → Press (•) → Select a tone or melody (see Steps 1 - 3) on P.8-3) → Press ② Set → Press ② Set → For One Number/Address, press Set again

#### Vibration

Select ■ Personal Ring Tone or ■ Incoming Notice → Press • → Perform Step 3 on P.5-9 to set target number/address → Select □Vibration → Press • → Select □On. □Off or □SMAF Link → Press ● Press ● Press ● Press ● For One Number/Address, press Set again

#### Vibration Pattern

Select ■ Personal Ring Tone or □ Incoming Notice → Press • → Perform Step 3 on P.5-9 to set target number/address 

Select 

Vibration Pattern Press ● Pr Press Q Set Provided For One Number/Address, press Q Set again Mobile/Small Light

Select **□** Personal Ring Tone or **□** Incoming Notice Press • Press Perform Step 3 on P.5-9 to set target number/address 

◆ Select **■**LED Indicator → Press ● Perform Steps 1 - 3 in "Mobile/Small Light" on P.8-4 to set pattern ▶ Press ② Set ▶ Press ② Set For One Number/Address, press Q Set again

#### Ring Time (for Incoming Notice)

Select **□***Incoming Notice* → Press (•) → Perform Step 3 on P.5-9 to set target number/address → Select **B**Ring Time → Press (•) → Enter time (01 - 99 seconds) → Press ● Press ● Press ● Press Q Set For One Number/Address, press Q Set again



- When source file in Data Folder is deleted, Ring Tone is set to Pattern 1 for Personal Ring Tone and Mail for Incoming Notice.
- To apply Personal Ring Tone or Incoming Notice setting to Secret Mode entries, activate Secret Mode first.

**Mail Folder** 

Specify Mail Folder for each Phone Book entry to sort messages automatically

Select ■Mail Folder Press (•) Select ■Inbox Auto Sort or **□**Sent Auto Sort → Press • Perform Step 3 on P.5-9 to set target number/address → Select a folder → Press • Pr Press Q Set For One Number/Address, press Q Set again

# **Using Phone Book**

## **Dialing from Phone Book**

Follow these steps to search Phone Book by Memory Number (default search method).


- To dial numbers saved in Secret Mode entries, activate Secret Mode first (see P.11-6).
- To search by other methods, see P.5-12.
- Press () (TELI)
- Press (2) Search or enter Memory No.
  - Press ( Search to open Phone Book Entry List in the order of Memory Number.
  - Enter Memory Number to open Phone Book Entry List including the entered number.
  - Use 🗘 to select an entry.




Phone Book entry opens.

Number is dialed.

When multiple numbers or addresses are saved, use • to select other icons.

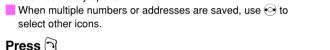


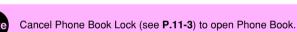



Phone Book

#### Window Description

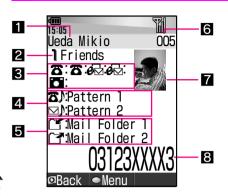

- 1 Name
- 2 Group Name
- **B** Icon for Saved Items

  - Mail Address ( Internet, Mobile)
  - Personal Data ( 🖳:)
  - Photo ( **□**:)
- Tone Set for Personal Ring Tone or Incoming Notice

**T**: Personal Ring Tone, ☑♪: Incoming Notice

Mail Folders Set for Auto Sort

[발: Inbox Mail Folder [작: Sent Mail Folder

- 6 Memory No.
- Image Set for Photo
- Phone Number or Mail Address



- Use to toggle saved items. Phone number or mail address appears in .
   Personal Data or Photo image appears in a new window.
- Press Back to return to Phone Book Entry List.

## **Phone Book Search**

#### Search Methods

Memory No. Search Lists Memory Numbers including the one you enter	
Katakana Search Shows entries with Reading starting with specified katakana katakana in the same row	
Group Search	Opens entries in a specified Group
Search by Reading	Shows entries with Reading starting with entered character

Search method is *Memory No. Search* by default.

#### **Switching Search Methods**

**1** Press ⊙ (ाः

The method used last appears.

- 2 Press 🔊 Menu
- 3 Select a method and press

Selected method appears.

• To search and open an entry, see below.

#### Searching/Opening Phone Book Entries

Follow these steps in Standby. Skip the step of pressing () (FEI) when continuing from Step 3 above.

Memory No. Search

Search by Memory Number

Set search method to *Memory No. Search* (see P.5-12).

Press (☐EL) → Enter Memory No. (000 - 499) → Select a name → Press (●)

Press 🖯 to dial.

Katakana Search

Search by katakana row which includes the first character of Reading

Set search method to *Katakana Search* (see P.5-12).

Press (→ (□) → Specify a row → Select a name → Press (●

Press 🕥 to dial.

• Katakana-Key Assignments:

ア(A) row	(6 g)	力(Ka) row	₽ <sup>nsc</sup>	サ(Sa) row	(10gr)	夕(Ta) row	4500
ナ(Na) row	S g	八(Ha) row	E 180	マ(Ma) row	Zage Sage	ヤ(Ya) row	<b>⊟</b> <sup>®</sup>
ラ(Ra) row	( ) ( ) ( ) ( ) ( ) ( )	ク(Wa) row	□n€ <sub>v</sub>	Others	#12%		

■ When Reading starts with a roman letter, number or Symbol, or is not entered, select *Others*.

**Group Search** 

Search by Group

Set search method to *Group Search* (see P.5-12).

Press (►) Select a Group Press (►) Select a name Press (►)

Press 🕥 to dial.

Search by Reading

Search by Reading saved in **...**:

Set search method to *Search by Reading* (see P.5-12).

Press (☐EI) → Enter reading (up to 10 single-byte characters) → Press (●) → Select a name → Press (●)

Press 🖯 to dial.

## **Speed Dial**

Use Speed Dial to call first phone number saved in Memory Numbers 000 - 099. To dial numbers saved in Secret Mode entries, activate Secret Mode first (see P.11-6). If not, **Secret Data saved** appears and handset returns to Standby.

Dialina Memory No. 000 - 009 1 Enter the last digit (0 - 9)

Dialing Memory No. 010 - 099

1 Enter the last two digits (10 - 99)

Press 7

Name and phone number appear and the number is dialed.

- When no entry/phone number is saved. **No Number** appears and handset returns to Standby.
- When multiple phone numbers are saved, the first one is dialed.



Cancel Phone Book Lock (see P.11-3) to use Speed Dial.

## **Show Photo**

Show the assigned images in Phone Book Entry List.



**Entry List** (Memory No. Search)



Entry List with Images (Memory No. Search)

- Press (TEL) then (Search
- Press 🔊 Menu
- Select Show Pics and press

Images appear in Phone Book Entry List.

To hide images, while list with images appears, press 🔊 Menu 🖈 Select **Show List** ▶ Press ●

# **Editing Phone Book**

## Correction/Change

- Press () (TEL), then open an entry
- Press (•)
- Select *Edit* and press (•) Phone Book Details appears.
- Select an item and press (•) Edit contents.
  - Procedure is the same as when saving to Phone Book (see P.5-4).
  - Edit Reading manually after editing names.
- Press (•) when finished

Phone Book Details returns.

- To edit other items, repeat Steps 4 5.
- Press 🔊 Save
- Press
- Choose **T** Yes and press (•)

The entry is overwritten.

To save to another Memory No., choose **■No** → Press • → Enter another Memory No. (or press \*\*\*\*)

## **Deleting Entries**

- Press () (TEL), then open an entry
- Press (•)
- Select *Delete* and press •
- Choose **I** Yes and press •



The source files remain in Data Folder, even if you delete entries containing Original Ring Tones, Voice files and images set for Personal Ring Tone, Incoming Notice or Picture Call/Mail.

# **Group Settings**

Rename Groups and customize Ring Tone settings by Group. Personal Ring Tone and Incoming Notice settings (see **P.5-10**) take priority over Group Settings.

## **Changing Group Name**

Index Menu ► Functions → Settings 1 → Group Settings → Change Group Name

- 1 Select a Group and press
- 2 Enter a name
  - Enter up to 10 single-byte characters.
- **3** Press
  - Repeat Steps 1 3 for other Groups.
- 4 Press 🗟 to exit


## **Group Ring Tone**

Group Ring Tone is Off for all Groups by default.

Index Menu ► Functions ► Settings 1 ► Group Settings ► Group Ring Tone

- ¶ Select a Group and press ●
- 2 Select ■Incoming Call or ■Incoming Mail and press ●
- 3 Select ■Call Functions and press ●
- 4 Choose **On** and press **O** 
  - To cancel, choose **□Off** → Press •
- 5 Select from ■Ring Tone to ■Ring Time and press
  - **ERing Time** is available for incoming mail only.
  - For Ring Tone settings, see P.8-3.
  - For vibration and Mobile/Small Light patterns, see P.8-3 8-4.
  - For Ring Time setting, see P.8-5.
- 6 Press 🗟 to exit
- Tip

When Group Ring Tone is Off, Ring Tone setting for incoming calls applies.

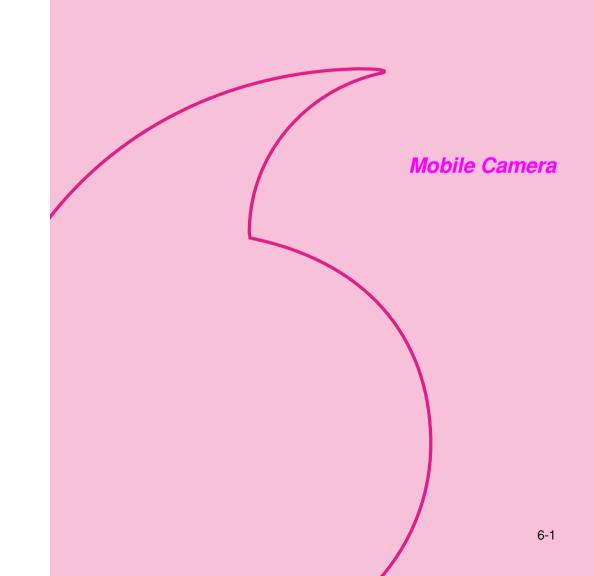

fingerprints and oil off.

**Getting Started** 

• Still Images: see P.6-5

Mode

Sha-mail

Wallpaper

**Action Snap** 

Camera

Shooting/saving images while handset is hot may affect the image quality.
Subjecting the lens to direct sunlight will damage the camera's color filter.

• Check that lens cover (see P.1-6) is clean before image capture. Use a soft cloth to wipe

• Mobile camera is a precision instrument. However, some pixels may appear brighter or darker.

■ Before image capture, mobile camera ends after five minutes of inactivity and handset returns to Standby.

Save Location

Data Folder (Images)

See P.9-3

See **P.9-2** 

See P.9-2

Camera folder

Action Snap Folder

• Video: see P.6-13

V302SH features a 0.31 megapixel camera. Capture still images and record video.

• Viewfinder & Key Assignments: see P.6-4 • Shooting Options: see P.6-16

JPEG high color (.jpg),

Format

PNG normal/soft 256 colors (.png)

**File Formats & Save Locations** 

JPEG (.jpg)

JPEG (.ipg)

**Mobile Camera Basics** 

MPEG-4 (.ASF)

- Captured still image is temporarily saved. To return, end the call and follow these steps.
  Press Choose Yes ▶ Press ●
- Unsaved video is lost.

#### **Camera Mode Image Orientation**

■ Camera mode images appear rotated 90 degrees when viewed on PCs. To compensate for this, hold handset horizontally for image capture as shown to the right.




#### Anti-Flicker

Display may flicker (stripes appear) when capturing images under fluorescent lights. In this case, change Anti-Flicker settings (see P.6-17).

## **Camera Display Indicators**

Below are descriptions of icons that may appear on Display while mobile camera is active. For details, see the referenced pages.

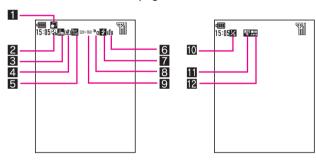

**1** Toggle Preview (see P.6-16)

**□**: 100%, **□**: 200%

2 Self Timer (see P.6-9)

Mode (see P.6-20)

🚇: Sha-mail, 🛂: Wallpaper, 🔟: Camera

E: Action Snap

4 File Format (see P.6-19)

ப்: JPEG High, மீ №ா: PNG Normal, மீ ிர்: PNG Soft

Image Quality (see P.6-18)

Standard. Fine

U

Mobile Camera

- **6** Remaining Memory Capacity (see P.6-6) or Maximum Recording Time (see P.6-13)
  - the: More than 100 still image files
  - Red background: 5 or less still image files
- Mobile Light (see P.6-17)
- Brightness (see P.6-18)

Dark ◆ Standard ◆ Bright

- Image Size (see P.6-18) or Mic Settings (see P.6-19)
- 10 Burst Shot Picture Count
  - ✓ ✓ : Captured/Total
  - **⊞**: Index Image is on Display.
- Burst Mode


四: 4-Burst Mode, 回: 9-Burst Mode, 四: 25-Burst Mode

12 Burst Speed

E Rapid, E Slightly Fast, E Normal, E Moderate, E Slow, E Manual

## **Viewfinder & Key Assignments**

View a summary of key assignments on the handset (see P.6-20 "Key Ops Guide").

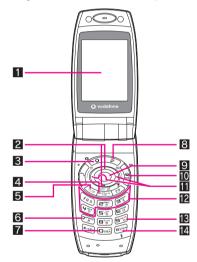

- 1 Viewfinder
- 2 Brightness (see P.6-18)

(5) (brighter), (2) (darker)

**3** Camera Startup

In Standby, press of for 1+ seconds to activate the mode used last (default: Sha-mail).

- 4 Toggle Preview (see P.6-16)
- 5 Cancel
- 6 High Speed Zoom (zoom out)

#### **☑** Image Size (see P.6-18)

In Sha-mail mode, press before image capture to toggle image size between 120x128 and 120x160.

- 8 Menu
- Shutter
- 10 End
- II Zoom

(zoom out), (zoom in)

**☑** Select Mode (see P.6-20)

While mobile camera is active, press keys to activate the corresponding modes.

<b>1</b> @ ₹	Sha-mail (see below)	3.80	Camera (see below)
₽ <sup>resc</sup>	Wallpaper (see below)	4 5578	Action Snap (see <b>P.6-13</b> )


In Standby, press (a) - (4) for 1+ seconds to activate the corresponding modes.

- IB High Speed Zoom (zoom in)
- Mobile Light (see P.6-17)

Press to turn on or off.

# Still Images

## **Still Image Modes**

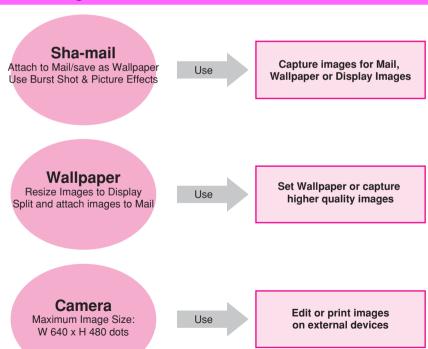

6-4

Mobile Camera

	Sha-mail	Wallpaper	Camera
Image Size	W 120 x H 160 dots (QQVGA) W 120 x H 128 dots	W 240 x H 320 dots (QVGA)	W 640 x H 480 dots (VGA) <sup>1</sup>
Image Quality	ity - Standard/Fine		rd/Fine
Zoom	2x/4x	2x	-
Attach to Long Mail	Sha-mail size	Wallpaper size, Sha-mail size or Split	Thumbnails only
Format JPEG/PNG JPEG		EG	
<b>Memory Capacity</b>	1,600 files <sup>2</sup>	530 files <sup>2</sup>	200 files <sup>2</sup>

<sup>&</sup>lt;sup>1</sup>Thumbnails (W 120 x H 160 dots) are saved with the original images.

<sup>&</sup>lt;sup>2</sup>Values are approximate for images captured with default size and quality.



- Saving video or V-Application reduces memory for images.
- To check memory status, see P.6-22.

#### **File Names**

Sha-mail/Wallpaper	Image files are saved by date and time by default. Example: <i>05-09-15_12-34</i> indicates the image was captured at 12:34, September 15, 2005.
Camera	Default file name starts from VFSH0001 then VFSH0002, and so on

Rename Sha-mail and Wallpaper mode files (see P.9-23).



Camera mode images may not appear on handset if file names are changed on PCs, etc. (Camera mode files cannot be renamed on handset.)

## **Capturing Still Images**

Index Menu 
Camera

- Select Sha-mail Mode, Wallpaper Mode or **■**Camera Mode and press •
- Frame image on Display
  - Viewfinder & Key Assignments: see P.6-4
  - Shooting Options: see P.6-16



Press S or •

Shutter clicks and the captured image appears on Display.

- To start over, press → Choose **T**Yes → Press •
- To edit image, see P.9-12 9-19.
- To send image via Long Mail, press 🔎 Sha-mail 🗼 Perform from Step 2 on **O P.3-3**
- ⚠ Press to save image Viewfinder returns for another shot.
- Press 🗟 to exit



When Captured Image is Unsaved Exit? appears.

- Choose Yes and press to end. Handset returns to Standby.
- Choose **E**No and press to return to the captured image.

#### Before Saving

Follow these steps after capturing an image in Step 3 above.

Add to **Phone Book** 

Save images to Phone Book

Press ▶ Menu → Select Add to Phone Book → Press • → Perform Step 4 on P.5-8

Save As Thumb

Save only thumbnails (W 120 x H 160 dots) to Data Folder (Images)

Press ♠ Menu → Select Save As Thumb → Press •

**Rotate Thumb** 

Rotate and save thumbnails (W 120 x H 160 dots) to Data Folder (Images)

Press ▶ Menu ▶ Select Rotate Thumb ▶ Press ●

- To rotate further, press Rotate.
- Press ( ) to save rotated thumbnails.

## **Still Image Functions**

#### **Before Image Capture**

Press Menu to use the following functions:

In Camera mode, Special Features does not appear.

Toggle	Preview	Switch Viewfinder size (see P.6-16)	
Mobile Light		Turn Mobile Light on or off (see <b>P.6-17</b> )	
Image Size <sup>1</sup>		Select image size (see <b>P.6-18</b> )	
Image	Quality <sup>2</sup>	Select Standard or Fine (see P.6-18)	
	Self Timer	Set Self Timer (see <b>P.6-9</b> )	
al es	Set Burst Mode <sup>3</sup>	Select mode and speed (see P.6-11)	
Special Features	Frame <sup>3</sup>	Add frames (see P.6-10)	
R. F.	Lens Effects <sup>3</sup>	Capture images with special effects (see P.6-11)	
Soft Focus <sup>1</sup>		Capture softer images for attachments (see P.6-18)	
Shutter Click		Change Shutter Click sound (see P.6-16)	
"	Save As <sup>1</sup>	Select file format (see P.6-19)	
Option Settings	Save to <sup>3</sup>	Select a folder (see P.6-20)	
Op	Auto Reset	All settings return to defaults when mobile camera shuts down (see P.6-20)	
	Anti-Flicker	Change the setting when Display flickers under fluorescent lights (see <b>P.6-17</b> )	
Delete		Delete files on handset (see P.6-22)	
Key Ops Guide		View a summary of key assignments (see P.6-20)	
Brightness		Adjust amount of light (see <b>P.6-18</b> )	
Select Mode		Switch to other mobile camera modes (see P.6-20)	

<sup>&</sup>lt;sup>1</sup>Available for Sha-mail mode.

#### **Before Saving**

Press ( Menu to use the following functions:

## Sha-mail & Wallpaper

Toggle Preview	Switch Viewfinder size (see P.6-16)
Save As <sup>1</sup>	Select file format (see <b>P.6-19</b> )
Picture Effect	Edit images (see <b>P.9-12</b> - <b>9-19</b> )
Image Quality <sup>2</sup>	Select Standard or Fine (see P.6-18)
Save to	Select a folder (see P.6-20)
Attachment	Attach images to Long Mail (see P.6-22)
Add to Phone Book	Save images to Phone Book (see P.6-7)
Delete	Delete files on handset (see P.6-22)

<sup>&</sup>lt;sup>1</sup>Available for Sha-mail mode.

#### Camera

■Toggle Preview	Switch Viewfinder size (see <b>P.6-16</b> )
<b>■</b> Save As Thumb	Save only thumbnails (see P.6-7)
■Rotate Thumb	Rotate thumbnails by 90 degrees (see P.6-7)
Image Quality	Select Standard or Fine (see P.6-18)
<b>⊟</b> Attach Thumb	Attach thumbnails (see <b>P.6-24</b> )
■Delete	Delete files on handset (see P.6-22)

## **Self Timer**

Release shutter automatically to capture images or record video.

Sha-mail	0	Wallpaper	0
Camera	0	Action Snap	0

- Follow these steps before capturing an image (after Step 2 on **P.6-7**) or recording video (after Step 1 on **P.6-14**).
- Self Timer is Off by default.

## 1 Press 🔊 Menu

• For Camera and Action Snap modes, skip ahead to Step 3.

## 2 Select ■Special Features and press ●

## **3** Select *Self Timer* and press ●

To change countdown time (default: 10 Seconds), select **ESet Time** → Press ● → Select time → Press ●

## 4 Select ■Self Timer On and press ●

Viewfinder returns ( appears).

To cancel, select **■Self Timer Off** Press (Omit the next steps.)

## 5 Frame image on Display and press

Tone sounds and countdown starts.

- After the set time, shutter is released and captured image appears or video recording starts
- To release shutter manually during countdown, press 

   Image is captured or video recording starts and Self Timer is canceled.
- To cancel Self Timer during countdown, press Q Cancel
  - Viewfinder returns. (Self Timer setting remains.)

## 6 Saving Still Images

## 1 Press

Self Timer is canceled and Viewfinder returns.

## Saving Video

## **1** To stop, press **●**

## **2** To save, select **■** Save and press **●**

Self Timer is canceled and Viewfinder returns.

<sup>&</sup>lt;sup>2</sup>Available for Wallpaper and Camera modes.

<sup>&</sup>lt;sup>3</sup>Available for Sha-mail and Wallpaper modes.

<sup>&</sup>lt;sup>2</sup>Available for Wallpaper mode.

- Incoming calls and Alarm cancels image capture and Self Timer.
- During countdown, the following settings are not available:
- Brightness, Mobile Light, Select Mode and Image Size

## **Adding Frames**

Sha-mail	0	Wallpaper	0
Camera	×	Action Snap	×

- In addition to Preset Frames, use transparent PNG files obtained via Web or Long Mail.
- Follow these steps before capturing an image (after Step 2 on P.6-7).

Press 🔊 Menu

Select Special Features and press

Select **E**Frame and press •

**Preset Frames** 

■ Select ■ Preset Frames and press •

2 Select a frame and press •

Selected image (frame) appears on Display.

To toggle between frames, press 🝳 Back or 🔊 Next

3 Press (•)

#### **Original Frames**

**1** Select **□** Original Frames and press (•)

· Some images may not be used as a frame.

2 Select a frame and press (•)

Selected image (frame) appears on Display.

To change image (frame), press ② Back → Start over from Step 1

**3** Press (●)

• In Wallpaper mode, frames smaller than W 120 x H 160 dots are enlarged.

## Cancelina

**1** Choose **■** Off and press **●** 

Capture an image

For details, see Step 3 and onward on P.6-7.

In Burst Mode, frame is added to each image.

## **Lens Effects**

Sha-mail	0	Wallpaper	0
Camera	×	Action Snap	×

- Lens Effects cancels Frame setting (see P.6-10), and vice versa.
- Soft Focus (see **P.6-18**) is disabled even when set to **On**.
- Follow these steps before capturing an image (after Step 2 on **P.6-7**).

Press 💫 Menu

Select **E**Special Features and press •

Select Lens Effects and press

Choose **I**On and press •

To cancel, choose **□Off** → Press • (Omit the next steps.)

Select an effect and press (•)

To toggle between effects, press Q Back or P Next

Press (•)

Capture an image

For details, see Step 3 and onward on P.6-7.

#### **Burst Mode**

Sha-mail	0	Wallpaper	0
Camera	×	Action Snap	X

Use Burst Mode to capture images sequentially.

Press ( ) for the first shot. Handset captures the rest automatically.

Mode	Description	Sha-mail <sup>*</sup>	Wallpaper
4-Burst Mode	Capture four separate images	Available	Available
9-Burst Mode	Capture nine separate images	Available	Available
25-Burst Mode	Capture 25 separate images	Available	N/A

\*Set file format to JPEG beforehand (see P.6-19).

- In 4-Burst or 9-Burst Mode, select shutter interval from five levels, or select Manual to release shutter manually.
- Follow these steps before capturing an image (after Step 2 on **P.6-7**).

Press 💫 Menu

Mobile Camera

- 2 Select Special Features and press
- 3 Select ■Set Burst Mode and press
  - To change shutter interval (default: Normal), select Burst Speed ⇒ Press ⇒ Select speed ⇒ Press ●
- 4 Select ■4-Burst Mode On, ■9-Burst Mode On or ■25-Burst Mode On (Sha-mail mode) and press
  - To cancel, choose *Off* → Press •
- 5 Frame image on Display and press S or

The first frame is captured with subsequent frames captured at selected speed.

- For manual shutter control (4-Burst and 9-Burst Modes), repeat Step 5 for each frame.
- To cancel, press 🔊 Stop .
- Image capture cannot be canceled when Burst Speed is *Rapid* or in 25-Burst Shot Mode.
- Press to save captured images.
- To cancel during manual shutter control, press ② Cancel → Choose Yes → Press (Captured images are deleted.)

## 6 Index Image appears

- Use to toggle between frames and Index Image.
- To save images individually, select a frame or Index Image with 

  → Press → Press → Select □ Save Screen → Press →
- To send images via Long Mail, select a frame of Index Image with 

  → Press → Menu → Select Attach Screen → Press → 
  (Attachment options may appear depending on the image size.)



4-Burst Mode

## 7 To save, press

Captured frames are saved with Index Image. Viewfinder returns with selected Burst Mode active.

8 Press 🗟 to exit



In low light or while Mobile Light is on, Burst Speed may slow down.

## **■** Before Saving

Press ( Menu to use the following functions:

Toggle Preview	Switch Viewfinder size (see P.6-16)
Save Screen	Save a selected image (see above)
Image Quality*	Select Standard or Fine (see P.6-18)
Attach Screen	Attach images to Long Mail (see above)
Delete	Delete files on handset (see P.6-22)

<sup>\*</sup>Available for Wallpaper mode.

## **Video**

#### **Video Mode**

## **Action Snap**

Playable only on V302SH Record with sound and zoom Self Timer available Use

Capture short video clips of memorable occasions quickly and easily

Tip

For best results, record within 1.5 meters, in well-lit conditions.

Video recording and playback are based on MPEG-4.

This product is licensed under the MPEG-4 Visual Patent Portfolio License for the personal and non-commercial use of a consumer to (i) encode video in compliance with the MPEG-4 Video Standard ("MPEG-4 Video") and/or (ii) decode MPEG-4 Video that was encoded by a consumer engaged in a personal and non-commercial activity and/or was obtained from a licensed video provider. No license is granted or implied for any other use.

Additional information may be obtained from MPEG LA. See http://www.mpegla.com.

This product is licensed under the MPEG-4 Systems Patent Portfolio License for encoding in compliance with the MPEG-4 Systems Standard, except that an additional license and payment of royalties are necessary for encoding in connection with (i) data stored or replicated in physical media which is paid for on a title by title basis and/or (ii) data which is paid for on a title by title basis and or permanent storage and/or

## Action Snap Mode Features

See http://www.mpegla.com for additional details.

Image Size	W 120 x H 88 dots
Recording Time (per shot)	Up to 60 seconds with Standard quality or 40 seconds with Fine quality
Image Quality	Standard/Fine
Zoom	4x
Attach to Long Mail	N/A
Format	MPEG (Files are saved by date and time by default.)
Memory Capacity	9 files*

<sup>\*</sup>When recorded for 60 seconds, with default Mic Settings and Image Quality.



• Saving V-Applications, etc. reduces memory for video.

use. Such additional license may be obtained from MPEG LA, LLC.

• To check memory status, see P.6-22.

6-12

Mobile Camera

- Viewfinder & Key Assignments: see P.6-4
- Shooting Options: see P.6-16

Press S or •

Recording begins after a tone.

• To record sound (Mic Settings is *On*), keep handset within approximately 50 cm from sound source.



15:05 🖼 🌌 🗞 °o 🙃

● Select

Action Snap Mode

■Save ■Preview ■Cancel ■Save to

When Memory is Already Full

Insufficient Memory Cannot Record appears and Viewfinder returns. Perform Steps 1 - 5 in "When Memory is Full" on P.6-22 to delete files and try again.

To stop, press S or •

Recording stops with a tone.

- Recording automatically ends when limit is reached.
- To play back, select **□Preview** → Press •
- To start over, select **E** Cancel → Press (•) → Choose **I** Yes → Press



Press 🗟 to exit



When Captured Image is Unsaved

Exit? appears.

- Choose **I** Yes and press to end. Handset returns to Standby.
- Choose **E**No and press to return to the window after recording.

## **Video Recording Operations**

## **Before Recording**

Press P Menu to use the following functions:

	oggle Preview	Switch Viewfinder size (see P.6-16)		
<b>⊠</b> Mobile Light		Turn Mobile Light on or off (see P.6-17)		
<b>Image Quality</b>		Select Standard or Fine (see P.6-18)		
■s	elf Timer	Set Self Timer (see <b>P.6-9</b> )		
	lic Settings	Activate to record sound (see P.6-19)		
gs	■Save to	Select a file (see <b>P.6-20</b> )		
S	<b>⊒</b> Auto Reset	All settings return to defaults when mobile camera shuts down (see <b>P.6-20</b> )		
<b>Option</b>	<b>■</b> Anti-Flicker	Change the setting when Display flickers under fluorescent lights (see P.6-17)		
<b>Z</b> D	elete	Delete files on handset (see P.6-22)		
■Key Ops Guide		View a summary of key assignments (see P.6-20)		
■Brightness		Adjust amount of light (see P.6-18)		
♦Select Mode		Switch to other mobile camera modes (see P.6-20)		

#### **Before Saving**

The following menu items appear after recording:

<b>□</b> Save	Save video (see P.6-14)
₽review	Play video (see <b>P.6-14</b> )
<b></b> ■Cancel	Start over (see P.6-14)
■Save to	Select a folder (see P.6-20)

Mobile Camera

ı	Toggle	Preview
---	--------	---------

Switch Viewfinder size or hide indicators

Sha-mail	0	Wallpaper	0
Camera	0	Action Snap	0

Default Sha-mail: 100%, Action Snap: 200%

Press ♠ Menu → Select ■ Toggle Preview → Press ●

• Setting returns to default when the mode is changed or mobile camera shuts down.

Shutter Click Change Shutter Click sound						
Sha-mail		0	Wallpaper		0	
Camera		0	Action Snap		X	

Default Pattern

Press ▶ Menu → Select Option Settings → Press ● → Select

Shutter Click → Press ● → Select a pattern → Press ●

• Shutter Click setting applies to all Sha-mail, Wallpaper and Camera modes.

- To check sound, select a pattern and press 🔎 Play
  - Press Stop to stop.

Note

- Volume is fixed.
- Shutter Click sound for Burst Mode is unique and fixed.

**Mobile Light** 

Turn Mobile Light on or off

Sha-mail	0	Wallpaper	0
Camera	0	Action Snap	0

Default Of

Press  $\bigcirc$  Menu  $\Rightarrow$  Select  $\bigcirc$  Mobile Light  $\Rightarrow$  Press  $\bigcirc$   $\Rightarrow$  Choose  $\bigcirc$  On or  $\bigcirc$  Off  $\Rightarrow$  Press  $\bigcirc$ 

- To change lighting time (default: 1 Minute), press ♠ Menu ♦ Select ♠ Select Illumination Time ♦ Press ♠ Select time ♦ Press ♠
- To return to Viewfinder, select ◆ Back → Press Press Press Press
- Select shorter Lighting Time to lengthen Battery Time.
- Illumination Time setting applies to all mobile camera modes.



Do not use Mobile Light near people's faces or look into the light yourself.

Anti-Flicker Change the setting when stripes appear on Display under fluorescent lights

Sha-mail	0	Wallpaper	0	
Camera	0	Action Snap	0	,

Default Mode 2 (60Hz)

Press ▶ Select Option Settings → Press ● → Select

Anti-Flicker → Press ● → Select ■ Mode 1 (50Hz) or ■ Mode 2 (60Hz)

→ Press ●

• Anti-Flicker setting applies to all mobile camera modes.



In extremely dark or bright places, stripes may not disappear completely.

Mobile Camera

Mobile Camera

# **Image Settings**

- Available settings vary by mode.
- Follow these steps before capturing an image (after Step 2 on P.6-7) or recording video (after Step 1 on P.6-14). When the setting is complete, Viewfinder returns. Perform from Step 3 on P.6-7 or Step 2 on P.6-14 to proceed.

Brightness	Adjust light sensitivity for still images and video						
Sha-mail		0	Wallpaper	0			
Camera		0	Action Snap	0			

Default 0 (standard)

Press ▶ Menu → Select Brightness → Press • → Select from five levels **▶** Press **●** 

• Setting returns to default when mobile camera shuts down.

Soft Focus	Capture softer Sha-mail mode images for attachments				
Sha-mail	0	Wallpaper	X		
Camera	×	Action Snap	X		

Press ▶ Menu → Select □ Special Features → Press • → Select **Soft Focus** → Press • → Choose **On** or **Off** → Press •

To return to Viewfinder, press ② Back → Press ② Back

Image Size	Select image size				
Sha-mail		0	Wallpaper	×	
Camera		X	Action Snap	X	

Default 120x160

Press ▶ Menu → Select ■ Image Size → Press • → Select a size ▶ Press (●)

Image Quality Select image or video quality Sha-mail Wallpaper Camera 0 Action Snap 0

**Default Standard** 

Press ▶ Menu → Select ■ Image Quality → Press • → Select quality **▶** Press **●** 



Select *Fine* for better quality. Saving higher quality images requires more space in memory and shortens recording time.

Select file format

Sha-mail	0	Wallpaper	X
Camera	×	Action Snap	×

Default JPEG High

**Before Image Capture** 

Press ▶ Menu → Select **□** Option Settings → Press • → Select **B**Save As → Press • Select format → Press •

**Before Saving** 

Press ▶ Select ■ Save As ▶ Press • Select format ▶ Press (•)

- PNG Soft images are softened by error diffusion.
- To change file format after saving to Data Folder, see P.9-19 "Change File Format."



Burst Mode (see P.6-11) is not available when format is PNG. Some PNG images may not be saved (a message appears after image capture). Convert to JPEG and try again.

Mic Settings

Record sound together with video

Sha-mail	X	Wallpaper	X
Camera	×	Action Snap	0

Default On

Mobile Camera

Press ▶ Menu → Select ■ Mic Settings → Press • → Choose **□**On or **□**Off **→** Press **⊙** 



Recording sound with video consumes more memory, shortening recording time.

# **Additional Settings**

- Available settings vary by mode.
- Follow these steps before capturing an image (after Step 2 on **P.6-7**) or recording video (after Step 1 on **P.6-14**). When the setting is complete, Viewfinder returns. Perform from Step 3 on **P.6-7** or Step 2 on **P.6-14** to proceed.

Select Mode Switch to other mobile camera modes

Sha-mail O Wallpaper O Camera O Action Snap

Press <a> ▶ Press <a> ● Press

Mode used last activates whenever mobile camera is activated with Camera Startup key.

					_
Save to	Select a fold	der to sa	ave image/video files		
Sha-mail		0	Wallpaper	(	5
Camera		X	Action Snap	(	)

Default Image Folder 0/Action Snap Folder 0

Press ▶ Select Option Settings ▶ Press ● ▶ Select Save to ▶ Press ● ▶ Select a folder ▶ Press ●

Auto Reset All settings return to defaults when mobile camera shuts down

Sha-mail	0	Wallpaper	0
Camera	0	Action Snap	0

Default Off (Settings are retained.)

Press ▶ Select Option Settings ▶ Press ● ▶ Select

Auto Reset ▶ Press ● ▶ Choose ■ On or □ Off ▶ Press ●

To return to Viewfinder, press ② Back → Press ② Back

· Auto Reset setting applies to all mobile camera modes.



Setting does not affect Anti-Flicker and Shutter Click.

Key Ops Guide View a summary of key assignments

Sha-mail	0	Wallpaper	0
Camera	0	Action Snap	0

Press ▶ Menu → Select Key Ops Guide → Press ●

Press 
 to scroll down.

To return to Viewfinder, press 🥥 Back → Press 🥥 Back

# **Opening Images & Playing Video**

## **Opening Still Images**

Index Menu ► My Files ► Data Folder ► Camera

# 1 Select Sha-mail/Wallpaper or Camera Images and press •

For Camera Images, select a folder Press

2 Select a file and press 
Image appears.

To open other files, press



To view available functions, open a file and press (2) Menu . For more, see P.9-10 - 9-22.



Sha-mail/Wall paper

#### Camera Mode Images

■ Images are reduced to thumbnail size (Show Thumbnails) to fit Display. To restore the original size, follow these steps.

Press <a> ▶</a> Select <a> □ Original Size <a> ▶</a> Press <a> ●</a>

• Use 🚱 to scroll up, down, left and right.

• Press • to rotate images 90 degrees clockwise.

#### **Opening Burst Shot Files**

Press ● → Select My Files → Press ● → Select ■ Data Folder → Press ● → Select Burst Shots → Press ● → Select a file → Press ●

■ To toggle between frames and Index Image faster, press ② Menu → Select Fast Forward → Press ③

## **Playing Video**

Index Menu ► My Files ► Action Snap Folder

## 1 Select a file and press

Video plays and stops automatically at the end.

- To open other files, press 🥥 Back
- Use 🕚 (up) or 🔾 (down) to adjust volume.
- To replay, press 🔊 Play



# **Memory Status**

Index Menu ► My Files

Select 

Memory Status and press

Memory usage status appears as a percentage (%).

#### When Memory is Full

When saving images, memory shortage warning may appear. To save images, follow these steps to delete files.

Press 🔊 Menu

Select *Delete* and press •

Select a folder and press

Select a file and press

Choose **1** Yes and press •

# **Sending Still Images**

## **Sha-mail Mode Images**

Capture and send images as Long Mail attachments.

- To attach Burst Shot images, use •• to select a frame or Index Image.
- To attach images in Data Folder, see P.9-7.
- Capture an image in Sha-mail mode

For details, see Steps 1 - 3 on P.6-7.

Before saving, press 🥥 Sha-mail

Image is saved to Data Folder and Long Mail Composition window opens with image attached.

To send images without saving to Data Folder, see **OP.6-3** "Save & Send Image."



#### When 2-Touch Mail List Appears

• Select a recipient and press • Long Mail Composition window opens (see OP.3-3).

• 2-Touch Mail: see OP.3-12

When Target Recipient is not in 2-Touch Mail List Select **-<a href="Mail Address">Select -<a href="Mail Address">Address</a>>** and press (•).



## Complete other fields and send Long Mail (see Step 2 and onward on OP.3-3)



When attaching images before saving, character limit for message subject is 46 single-byte alphanumerics (20 double-byte characters or 44 single-byte katakana). Once attached, files cannot be added, deleted or changed.



Make sure that the recipient's handset is able to receive attachments. For information about Mail service and compatibility with other handset models, contact Vodafone Customer Center, General Information (see P.14-20).

## **Wallpaper Mode Images**

#### Attaching as Wallpaper or Sha-mail

- Capture an image in Wallpaper mode
  - For details, see Steps 1 3 on P.6-7.
- Before saving, press Sha-mail
- Select Attach as Sha-mail or Wallpaper Size and press (•) Image is saved to Data Folder and Long Mail Composition window opens with image attached.
  - To send images without saving to Data Folder, see **P.6-3** "Save & Send Image." When 2-Touch Mail List Appears: see **P.6-22**
- Complete other fields and send Long Mail (see Step 2 and onward on OP.3-3)

## Split Images

Split Mail transmission charges are equivalent to sending four Long Mail messages.

- Capture an image in Wallpaper mode For details, see Steps 1-3 on P.6-7.
- Before saving, press (2) Sha-mail
- Select **E**Attach Split Mail and press (•)

Image is saved to Data Folder and Select Address window opens (image attached).

- To send images without saving to Data Folder, see **P.6-3** "Save & Send Image."
- When 2-Touch Mail List Appears: see P.6-22

Mobile Camera

4 Select or enter a recipient (see Steps 3 - 4 on OP.3-4)

Four messages with split images are saved to Outbox.

- For each Split Mail message, subject is automatically entered as: Upper Left, Upper Right, Lower Left and Lower Right.
- 5 Sending Messages from Outbox
  - Choose Yes and press
    - Outbox opens. See OP.4-19 to send Long Mail.

#### Saving Messages to Outbox

■ Choose ■ No and press ●



When attaching images before saving, character limit for message subject is 46 single-byte alphanumerics (20 double-byte characters or 44 single-byte katakana). Once attached, files cannot be added, deleted or changed.



Make sure that the recipient's handset is able to receive attachments. For information about Mail service and compatibility with other handset models, contact Vodafone Customer Center, General Information (see **P.14-20**).

## **Camera Mode Thumbnails**

- Capture an image in Camera mode
  For details, see Steps 1 3 on P.6-7.
- 2 Before saving, press 🔊 Menu
- 3 Select **Attach Thumb** and press Image is saved to Data Folder and Long Mail Composition window opens with image
  - To send images without saving to Camera folder, see **OP.6-3** "Save & Send Image." When 2-Touch Mail List Appears: see **P.6-22**
- Complete other fields and send Long Mail (see Step 2 and onward on OP.3-3)



When attaching images before saving, character limit for message subject is 46 single-byte alphanumerics (20 double-byte characters or 44 single-byte katakana). Once attached, files cannot be added, deleted or changed.



Make sure that the recipient's handset is able to receive attachments. For information about Mail service and compatibility with other handset models, contact Vodafone Customer Center, General Information (see **P.14-20**).

## **Postcard & Calendar**

Add text or calendar mask to Camera mode images to create original Postcards or Calendars.

- Created Postcard/Calendar images are saved to Camera folder as new files.
- Postcard images are compressed when created and the quality may change.

## **Postcard**

<mark>dex Menu</mark> ▶ *My Files* **▶** Camera **▶** Select a folder

- Select an image and press
  - Alternatively, select an image and press 🔊 Menu . Skip ahead to Step 3.
  - Press to rotate images 90 degrees clockwise.
- 2 Press 🔊 Menu
- 3 Select Postcard and press •
- ✓ Select 

  ☐ Text and press
- 5 Enter text and press 💿
  - Enter up to 18 single-byte characters per line (up to five lines are available).
  - · Animated Pictographs stay still in Postcard images.
- Select a color combination and press 🗨
  - To not to outline text with the latter color, follow these steps first: Select **□***Border* → Press Choose **□***Off* → Press •
- 7 Select a size and press

A rectangle appears indicating the location of text.

8 Use ♦ to move the rectangle to target location and press ●

Text appears for confirmation.

9 Press 💿



Postcard

Text

**□**Calendar

Text Outside Frame

Will Not Appear

Mobile Camera



Postcard images are saved with thumbnails (see **P.6-6**). Portions of thumbnails may turn black depending on the size of original images.

- Index Menu ► My Files ► Camera ► Select a folder
- Select an image and press
  - Alternatively, select an image and press 🔊 Menu. Skip ahead to Step 3.
  - Press to rotate images 90 degrees clockwise.
- Press 🔊 Menu
- Select Postcard and press
- Select **□**Calendar and press •
- Select ■Month (Small) or ■2-Month and press Current month appears.
- Enter month and press

A rectangle appears indicating the location of calendar mask.

Use 💸 to move the rectangle to target location and press


Calendar mask appears for confirmation.

Press





- Change color for days of the week in Set Color (see P.7-3).
- Calendar images are saved with thumbnails (see P.6-6). Portions of thumbnails may turn black depending on the size of original images.

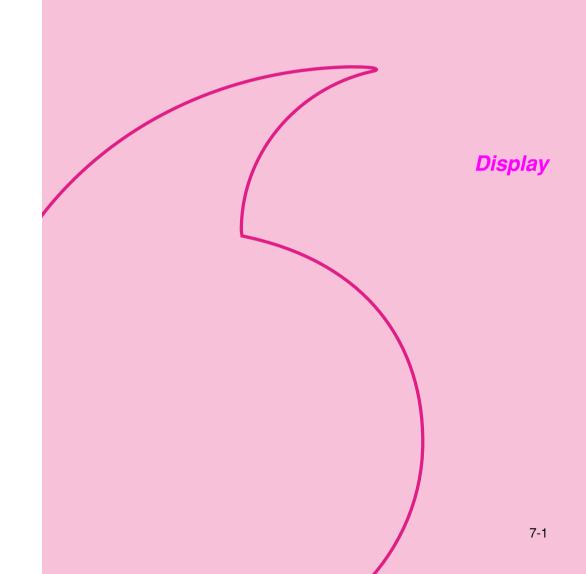

# Wallpaper

Use Wallpaper to set an image or animation to appear in Standby. Choose from preset images, images captured with mobile camera, and images or animation obtained via Web or Long Mail.

- Some images may not be used.
- Wallpaper is Off by default.

Index Menu ► Functions → Settings 2 → Display Settings → Wallpaper

**1** Choose **■** On and press **●** 

To cancel Wallpaper, choose **□Off** → Press **()** (Omit the next step.)

2 Preset Images

Select from ■ Squared Away to ■ Disney2 and press ●Press ●

Original Images

1 Select Original and press

If Original image is already saved, press (Change to use other image.

■ Existing image is replaced. (Images not saved to Data Folder are deleted.)

2 Select an image from Data Folder (see P.9-6) and press •

To change image size, press ♠ Menu → Select ■ Enlarge/Reduce → Press ● Use ♦ Use ♦ to enlarge or reduce

To create split-screen Wallpaper, press → Menu → Select **E**Split Picture → Press → Select from **2** to **4** → Press → Select an image from Data Folder → Press → twice → Press ✓ Set

3 Press

#### **Show Indicators**

- To hide indicators in Standby while Wallpaper is set, follow these steps.

  Press 
  Select Functions Press 
  Select Settings Press 
  Select Show Indicators Press 
  Press 
  Press 
  Press 
  Press 
  Press 
  Press
- While indicators are hidden, press 🖨. Indicators appear for five seconds.
  - Regardless of this setting, indicators always appear in windows other than Standby and when Wallpaper is not set.

Tip

- Even if Wallpaper is not set, it is automatically activated when an image from Vodafone live! or Data Folder is saved as Wallpaper.
- When a V-Application is set for Standby, Wallpaper may not appear.
- Using Wallpaper shortens Battery Time. Using animation or multiple images consumes more handset power.
- Wallpaper does not appear when Calendar Large Stamp or Schedule & Stamps appears in Standby (see below).
- Animation may stop after 15 seconds of inactivity.
- During animation, Calendar (Month (Large) 6-Month) does not appear (see below); Small Clock appears even if Large Clock is set.

## Clock & Calendar

Choose a Clock type and layout or use Calendar for Standby.

## **Clock Display**

Clock Display is Large by default.

Index Menu ► Functions → Clock → Clock Display

1 Select ■Large or ■Small and press ●

To hide Clock, choose **⊈***Off* **→** Press **⊙** 



When **LOff** is set, Calendar (see below) is also hidden.

## Calendar

Select from seven Calendars: Month (*Large Stamp*, *Schedule & Stamps*, *Large* and *Small*), 2-Month, 4-Month and 6-Month.

- Select Large Stamp to show stamps on Large Calendar. Select Schedule & Stamps to show Schedule as well as stamps.
- For Month (Small) and 2-Month, select a display position.

Index Menu ► Functions → Clock → Clock Display

1 Select ■ Calendar and press ●

To hide Calendar, choose **□Off** → Press •

■ When **#**Off is set, Calendar (see above) is also hidden.

2 Select from ■Large Stamp to ■6-Month and press ●

For **■Month (Small)** and **国2-Month**, select a display position **⇒** Press **⊙** 

To customize colors of the days of the week, select **□Set Color** → Press **●** → Select a day

▶ Press ● ▶ Select a color ▶ Press ●

7

)isplav

- Press ( ) once to open the previous month, and press ( ) once to open the next month. Use ( ) to toggle between months. (In 2-Month Calendar, display changes by one month at a time. In 4-Month and 6-Month Calendars, display changes by two months at a time.) Press or to return to the current month.
- Press (a) to hide Calendar temporarily. While Calendar is hidden, press (b) to open Key Long Press Guide or (2) to open Call History. (Press (2) again to show Calendar.)



- Calendar appears on Wallpaper. However, Wallpaper does not appear when Calendar is Large Stamp or Schedule & Stamps.
- Calendar does not appear while a Wallpaper animation is active.
- When a V-Application is set for Standby. Calendar may not appear.

# **Display Images**

Select images to use them for Power On/Off, incoming calls and Alarm windows. Use images captured with mobile camera or received via Web or Long Mail. Display Images is *Off* for all items by default.

Index Menu ► Functions ► Settings 2 ► Display Settings ► Display Images

## Select an item and press

- Select I Fixed Graphic, Disney or Original and press
  - For **I** Fixed Graphic or **Disney**, skip ahead to Step 5.
    - To cancel Display Images, choose **Doff** and press (a). (Omit the next steps.)
    - When Original image is already saved, press (Change to use other image.)
    - Existing Original image is replaced. (Images not saved to Data Folder are deleted.)
- Select an image from Data Folder (see P.9-6) and press (•) Image appears with a rectangle indicating display size (see below).
  - Unavailable images do not appear.

Power On	W 120 x H 130 dots	Incoming Calls	W 120 x H 38 dots
Power Off	W 120 x H 130 dots	Alarm	W 120 x H 51 dots

• Display Images appear 200% larger.

To toggle display size between 100% and 200%, press

## Use •• to specify display area

- Display area may not be specified depending on image size.
- Press I to select another image Start over from Step 3

## Press (•)



Picture Call/Mail setting takes priority over Display Images when receiving calls (with caller ID) from callers with Picture Call/Mail set while **Incoming Call** is **Original**.

## **Fonts**

Change the size and weight of handset fonts.

Font weight is *Font 3*, and font size is standard (Large Font: *Off*) by default.

Index Menu ► Functions ► Settings 2 ► Display Settings

Font Weight

■ Select ■ Fonts and press •

2 Select from **1** Font 1 to **1** Font 4 and press **1** 

Font Size

■ Select ■ Large Font and press ●

**2** Choose **■** On or **■** Off and press **●**)

• When Large Font is active, major menu items (Functions, Settings, Briefcase, etc.) always appear large. However, other items may appear in standard size.

V302SH employs LC Fonts for easing viewing of handset menus and messages. LC Font/LC FONT, as well as the LC logo are all registered trademarks of SHARP Corporation.



# **Display Patterns**

Item	Description	Default
Battery Level	Select from five icons	Icon 1
Signal Strength	Select from five icons	Icon 1
Title Bars	Select from five color schemes	Color 1
Menu Design	Select from five number key patterns for menu items	Menu Design 1
Guide Keys	Select from five Soft Key patterns	Pattern 1
Indicator Bar	Select from five background patterns for upper part of Display on which indicators appear	Background 1

ndex Menu 🕨 Functions 🖈 Settings 2 🖈 Display Patterns

Select an item and press

Select an option and press (•)

• For other settings, repeat Steps 1 - 2.

Cancel Disney Style to customize Display Patterns.

## **Light Settings**

Activate or deactivate Backlight and Keypad Light, Adjust Active Time and Brightness.

- Specify Active Hours to activate lights for a set period of time each day. (Set Clock first. See P.1-20.)
- Backlight and Keypad Light are On (15 seconds) by default.

Index Menu ► Functions → Settings 1 → Light Settings

**Backlight** 

1 Select Backlight and press

Kevpad Light

■ Select ■ Keypad Light and press •

Changing Active Time

**1** Choose **□** On and press **●** 

**2** Enter Active Time (01 - 99 seconds) and press ●

Active Time is set.

## Backlight Off

**11** Choose **□** Off and press **●** 

• Backlight remains on while using mobile camera even if Off is set.

Specifying Active Hours and Active Time

■ Select ■ Active Hours and press •

2 Enter Start Time and End Time, then press (•)

Backlight and Keypad Light are available between Start Time and End Time.

**B** Enter Active Time (01 - 99 seconds) and press ●

- Active Hours is ignored if Clock is not set.
- Shorten Active Time to lengthen Battery Time.

**Brightness** 

Select Display Brightness from four levels

Default Level 4

► Functions → Settings 1 → Light Settings → Brightness

Press (♦) (Brighter) or (♀) (Darker) ▶ Press (♠)

Set Backlight/Keypad Light to illuminate while using In-Car Charger

Index Menu ► Functions → Settings 1 → Light Settings → In-Car Backlight

Choose **□**On **→** Press **⊙** 

To cancel In-Car Backlight, choose **□Off** Press •

# **Sub Display Settings**

Sub Display On/Off Activate or deactivate Sub Display

Default On

Index Menu ► Functions → Settings 1 → Sub Display → Sub Display On/Off

Choose **■** On or **■** Off **→** Press **●** 

Backlight Settings Specify Active Hours and Active Time

Available when Sub Display is active.

Index Menu ► Functions → Settings 1 → Sub Display → Backlight Settings

#### **Active Time**

Choose **■** On **→** Press **● →** Enter Active Time (01 - 99 seconds) **→** Press **●** 

To disable Backlight, choose **□Off** → Press •

#### **Active Hours**

Select ■ Active Hours → Press ● → Enter Start Time and End Time → Press ● → Enter Active Time (01 - 99 seconds) → Press ●

• Backlight is available between Start Time and End Time.

Adjust Contrast Adjust Sub Display contrast from nine levels

Available when Sub Display is active.

Default Contrast 5

Index Menu ► Functions → Settings 1 → Sub Display → Adjust Contrast

Press (⁵) (Darker) or (⊋) (Lighter) → Press (●)

Recipient Display Show or hide caller's number or name on Sub Display

Available when Sub Display is active.

Index Menu ► Functions → Settings 1 → Sub Display → Recipient Display

Choose **■** On or **■** Off **→** Press **●** 

# **Other Display Settings**

Language

Switch handset user interface between Japanese and English

Default 日本語 (Japanese)

Index Menu ► Functions → Settings 1 → 言語選択

Select **□日本語** or **□**English **→** Press **●** 

Power On Message

Create a short text message to appear on Display each time handset power is activated

efault Off

Index Menu ► Functions ► Settings 2 ► Display Settings ► Power On Message

Choose **■**On **→** Press **● →** Enter text **→** Press **●** 

Enter up to 16 single-byte characters.
 To cancel, choose **□** Off Press ①

Vodafone live!
Animation

Show or hide animations when sending/receiving mail or receiving Web/Station information. Set for each occasion separately.

Default On (All)

Index Menu ► Functions ► Settings 2 ► Animation ► Vodafone live!

Select from  $\blacksquare$  Send Mail to  $\blacksquare$  Web Activated  $\Rightarrow$  Press  $\bullet$   $\Rightarrow$  Choose  $\blacksquare$  On or  $\blacksquare$  Off  $\Rightarrow$  Press  $\bullet$ 

Mail Background

Set animation to appear in backgrounds of received messages containing compatible Pictographs

Default On

Index Menu ► Functions ► Settings 2 ► Animation ► Mail Background

Choose **■**On or **■**Off **→** Press **●**)

<u></u>.

Display

Animation appears on Display when left open for a specified period of inactivity

Default Off

Index Menu ► Functions → Settings 2 → Animation → Screen Animation

#### **Preset Animation**

Choose **■** On **→** Press **●**) **→** Select **■** Animation **→** Press **●**) **→** Select ■Animation 1 or ■Animation 2 → Press • twice

## **Original Animation**

Choose **□**On **→** Press **○ →** Select **□**Animation **→** Press **○ →** Select **■**Original **→** Press **● →** Select an image **→** Press **●** twice

#### **Period of Inactivity**

Choose **■**On **Press ● Press ● Press ● Press ● Press ●** Select a period 

◆ Press 

◆

#### Canceling

Choose **□**Off **→** Press **⊙** 

- Only E-Animation files (.nva) are available.
- While animation appears, press any key to stop it.
- Animation may not appear depending on handset status (in Standby, mobile camera active, etc.).

Using Screen Animation shortens Battery Time.

**Disney Style** 

Disney themed graphics appear during calls, when sending/ receiving messages, in Index Menu, etc.

Default Off

Index Menu ► Functions ► Settings 2 ► Disney Style

## Choose **□** On or **□** Off **→** Press **⊙**

• Disney themed indicators also appear for Signal Strength and Battery Strength.

Incoming Light


Set Small Light to flash for incoming calls/mail, Alarm, etc.

Default Off (All)

Index Menu ► Functions → Settings 2 → Incoming Light

Select an item → Press • Choose **□** On or **□** Off → Press •

- Small Light flashes while Missed Call notice or Delivery Notice appears.
- In Off-Line Mode, Small Light always flashes while handset is closed or while Display shuts down for Panel Saving.

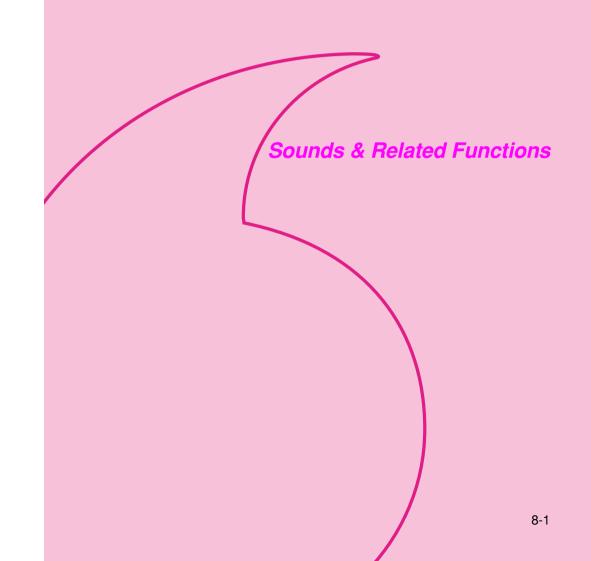

# **Call Functions**

Use Call Functions menu items to adjust Ring Tones, Vibration, Mobile or Small Light, and Ring Time settings. See below for the default settings.

	Incoming Call	Incoming Mail	Incoming Web	New Station Info	Received Complete	Confirm Delivery
Ring Tone	Pattern 1	Mail	Web	Station	Pattern 5	Report
Ring Tone Level	Level 5	Level 5	Level 5	Level 5	Level 1	Level 5
Vibration		Off				
Vibration Pattern	Vibration 1	Vibration 2	Vibration 3	Vibration 4	Vibration 5	Vibration 2
LED Indicator	Mobile Light	Small Light				
Mobile/Small Light Blink Patterns		Pattern 1				
Ring Time	N/A	10 Seconds	10 Seconds	10 Seconds	1 Second	10 Seconds

- Received Complete settings apply after you:
- Retrieve complete messages or acquire Unretrieved List
- Delete Server Mail
- Manually update Station Main List or Location Info
- Confirm Delivery settings apply to Delivery Reports.
- Settings remain even after handset power is turned off.
- Manner Settings (see P.3-4) take priority over.



V-Application set for Standby that also responds to incoming communications may take priority over Ring Tone and Vibration Pattern set in Call Functions.

## **Ring Tone Level**

Index Menu

► Functions → Sounds → Call Functions → Select an item → Ring Tone Level

- 1 Use 🗘 to adjust level
  - Level 5 is maximum. When Rising Tone is set, volume increases in the order of Level 1 - Level 5 every three seconds.
  - To check volume, press 🥥 Play.
  - Press Stop to stop.
- **2** Press

When Ring Tone Level is *Rising Tone* for Incoming Call, ② appears in Standby, and ⑤ appears for *Silent*.

## **Ring Tone**

Select from preset patterns, preset melodies, Original Ring Tones, Voice files, etc. Check preset melodies on handset.

Index Menu 

Functions 

Sounds 

Call Functions 

Select an item 

Ring Tone

#### 1 Preset Patterns/Melodies

1 Select ■ Preset Tones or ■ Preset Melodies and press ●

• ミッキーマウスマーチ (Mickey Mouse March) is preset on handset.

License: T-0570387

#### Melodies in Data Folder

■ Select ■ Data Folder and press ●

#### Voice Files

■ Select ■ Voice Folder and press ●



- Voice files cannot be used for Received Complete.
- Files cannot be selected if the file name exceeds 24 single-byte characters.
- Some files may not be used.

## Select a tone or melody

- To play tones or melodies, press 🥥 DPlay
- Press ② Stop to stop.
- When Manner Mode is active or Ring Tone Level is *Rising Tone* or *Silent*, sounds play at Level 1.



For some preset melodies, handset vibrates to the melody when Vibration (see below) is set to **SMAF Link**.

? Press •



If source file in Data Folder or Voice Folder is deleted, Ring Tone returns to default.

## **Handset Vibration**

Index Menu

► Functions → Sounds → Call Functions → Select an item → Vibration

**1** Choose **■***On* and press **●** 

To cancel, choose **□Off** → Press ●

To link to SMAF files, select ■SMAF Link → Press ●

Sounds & Related Functions

Select **SMAF** Link to allow compatible SMAF files to control Vibration.



- Disable vibration when charging.
- Manner Settings (see P.3-4) take priority over.

#### **Vibration Pattern**

Index Menu

► Functions → Sounds → Call Functions → Select an item → Vibration Pattern

1 Select a pattern and press

<b>Vibration Pattern</b>	Operation (repeats)
Vibration 1	Vibrate (0.75 Sec) → Stop (0.75 Sec)
Vibration 2	Vibrate (0.25 Sec) → Stop (0.25 Sec) → Vibrate (0.25 Sec) → Stop (1 Sec)
Vibration 3	Vibrate (1 Sec) → Stop (2 Sec)
Vibration 4	Vibrate (1 Sec) → Stop (1 Sec) → Vibrate (1 Sec) → Stop (2 Sec)
Vibration 5	Vibrate (0.5 Sec) $\rightarrow$ Stop (0.5 Sec) $\rightarrow$ Vibrate (0.5 Sec) $\rightarrow$ Stop (1 Sec)

## Mobile/Small Light

Index Menu

▶ Functions ⇒ Sounds ⇒ Call Functions ⇒ Select an item ⇒ LED Indicator

- 1 Select Mobile Light or Small Light and press
- To cancel, choose **■Off** → Press **()** (Omit the next steps.)
- Select a blink pattern
  - To check patterns, press 🔎 Light

Pattern	Operation (repeats)
Pattern 1	On (0.75 Sec) → Off (0.75 Sec)
Pattern 2	On (0.25 Sec) → Off (0.25 Sec) → On (0.25 Sec) → Off (1 Sec)
Pattern 3	On (1 Sec) → Off (2 Sec)
Pattern 4	On (1 Sec) → Off (1 Sec) → On (1 Sec) → Off (2 Sec)
Pattern 5	On $(0.5  \mathrm{Sec}) \to \mathrm{Off} (0.5  \mathrm{Sec}) \to \mathrm{On} (0.5  \mathrm{Sec}) \to \mathrm{Off} (1  \mathrm{Sec})$
SMAF Link	Flashes according to SMAF files (Small Light only)



Select **SMAF Link** to allow compatible SMAF files to control Small Light.

**3** Press **●** 

## **Ring Time**

Ring Time settings are not available for Incoming Call.

Index Menu ► Functions → Sounds → Call Functions

- **1** Select an item other than **■***Incoming Call* and press
- Select ■Ring Time and press ●
- 3 Enter time (01 99 seconds) and press •

## **Sound Effects**

Adjust sounds and volume for handset operations.

	Keypad Sound	Error Tone	Power On	Power Off	Sound Volume	Set LED to Sound
Setting	On	On	On	On		
Sound	Push Tones	Error Tone	Opening 1	Ending 1	Level 5	Small Light
Volume	Level Medium	Level Medium	Level 5	Level 5	Level 5	
Time	0.05 Seconds	0.5 Seconds	3 Seconds	3 Seconds	•	

- Power On is when turning on handset, and Power Off is when turning off.
- Sound Volume applies to sounds in Data Folder, mail attachments, Web, etc.
- Set LED to Sound is for flashing Mobile or Small Light with sounds.
- Settings remain even after handset power is turned off.

## **Sounds**

Index Menu ► Functions → Sounds → Sound Effects

- 1 Select ■Keypad Sound, ■Error Tone, ■Power On or ■Power Off and press ●
- 2 Choose On and press 
  To cancel, choose Off Press (Omit the next steps.)
- 3 Select ■Sound and press ●

## △ Preset Patterns/Melodies

1 Select ■ Preset Tones or ■ Preset Melodies and press ●

#### Melodies in Data Folder

■ Select ■ Data Folder and press •



- Files cannot be selected if the file name exceeds 24 single-byte characters.
- Some files may not be used.

#### Push Tones (Kevpad Sound)

## ■ Select ■ Push Tones and press •

Pattern is set (omit the next steps).

## Select a tone or melody

- To play tones or melodies, press 🥥 Play
- Press ② Stop to stop.
- Press (•)
  - To adjust Sound Effect volume, select  **Volume** → Press → Use () to adjust level ▶ Press ●
  - To set Sound Effect duration, select  **Time** Press Press Select time (Keypad Sound/ Error Tone) or enter time (Power On/Power Off) → Press ●



If source file in Data Folder is deleted, sound pattern returns to default.

## **Basic Sound Settings**

ound Volume/Set **LED to Sound** 

Set to flash Mobile or Small Light with sound

Default See P.8-5.

► Functions → Sounds → Sound Effects

#### **Sound Volume**

Select **■**Sound Volume **→** Press **●**) **→** Use **(¹)** to adjust level **→** Press (•)

## **Light Settings**

Select ■ Set LED to Sound > Press • > Select ■ Mobile Light, **□**Small Light or **□**Off **▶** Press **●** to complete



Blink pattern for Set LED to Sound is fixed to Pattern 1 for Mobile Light and SMAF Link for Small Light.

# **Original Voice**

- Record sound for up to 30 seconds and use as Ring Tones.
- Sound is saved to Voice Folder 0.

Index Menu ► Functions → Sounds → Original Tones → Original Voice

## Enter title and press

- Enter up to 24 single-byte characters. Title is mandatory.
- Original Voice files are saved by title by default.

## Press (•)

Recording starts.

## Press to stop

• When maximum recording time is reached, recording stops automatically and sound is saved.

#### Incoming Calls while Recording

Recording stops and recorded material is lost.

#### **Playing Recorded Sounds**

■ After Step 3, select a Voice file → Press •

■ Press Stop to stop.

#### **Voice Ring Tone**

■ To use as Ring Tone, follow these steps after Step 3.

Select a Voice file → Press 🔊 Menu → Select Incoming Tone → Press • Select an item → Press ●

• Voice files cannot be used for Received Complete.

Sounds & Related Functions

# **Original Ring Tones**

#### **Basics**


Create melodies to use as Ring Tones, or to send via Long Mail.

- Use up to 95 sounds x 32 chords, 190 sounds x 16 chords, or 380 sounds x 8 chords.
- Original Ring Tones are saved to Data Folder (Melodies). See P.9-3.




- Original Ring Tones are saved in SJM format. To send Original Ring Tones to handsets other than Vodafone live! packet-enabled Sharp handsets, convert them to Melody files or SMAF files (see P.3-7).
- Converted files may not play on recipient handsets.

## Window Description

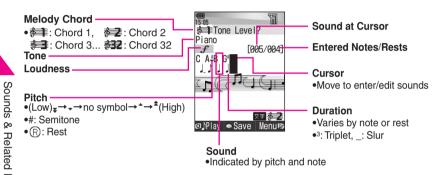

## Pitch Range

Use the following scales (range: approximately 4 octaves including semitones).

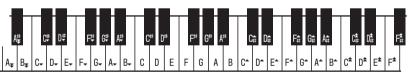

#### **Notes & Rests**

Note	Rest	Duration	Note	Rest	Duration
o	-	Whole note/rest	J.	<b>=</b> -	Dotted half note/rest
٨	*/	Sixteenth note/rest	-3T	-37	Whole note triplet/rest
٨	۲	Eighth note/rest	ħ	499	Sixteenth triplet/rest
Ŋ.	٩	Dotted eighth note/rest	Ĵ	7°77	Eighth triplet/rest
J	\$	Quarter note/rest	ſĵĵ	\$\$\$\$ -3-	Quarter triplet/rest
<b>J</b> .	ş.	Dotted quarter note/rest	[]]		Half note triplet/rest
	_	Half note/rest			

#### **Tones**

Handset contains 128 basic tones and 61 extra tones preset.

- Create tones and save as Instrument Effects (up to 8 types to 3 locations).
- Adjust octave of tones (see P.8-21).

#### **Procedure**

#### 11 Enter title

- The entered title will appear when selecting Ring Tone.
- Enter up to 24 single-byte characters. Title is mandatory.

#### Select tempo

• J: Number of quarter notes played per minute

■Fast	J = 150	<b>■</b> Slightly Slow	<b>J</b> = 107
<b>⊒</b> Standard	J = 125	■Slow	<b>J</b> = 94

#### Select number of chords

• Type: 8 Phonetic Chord, 16 Phonetic Chord and 32 Phonetic Chord

## 4 Enter sounds one by one for melody chord 1 (

- Arrange pitch, octave or duration of each sound, and use semitones and triplets (see **P.8-10 8-11**).
- Press Play to play all entered sounds. When you press sounds are played up to cursor. Adjust playback volume in Sound Volume (see **P.8-6**).
- In Manner Mode, sounds play at Level 1 even if Silent is set in Manner Settings, Sound Volume.

# For harmony, enter sounds in other melody chords (Melody chord 2: €2, melody chord 3: €3...melody chord 32: €32)

- Press 
   to move to other melody chords.
- Enter sounds in the same way as melody chord 1.

#### 6 Select tone

- Piano is set for all melody chords by default.
- Select preset tones or Instrument Effects (see P.8-16) created beforehand.
- Selected tone applies to two melody chords (pairs: 1&17, 2&18, 3&19...16&32).

#### 7 Adjust loudness

- Strong is set for all melody chords by default.
- Select Strong, Standard or Faint for each melody chord.
- Selected loudness applies to two melody chords (pairs: 1&17, 2&18, 3&19...16&32).

## 8 Save melody as Original Ring Tone

• To use as Ring Tone, select from Data Folder (see P.8-3).

## Entering Sounds

This section describes how to enter a sound.

The same procedure applies to melody chord 1 to 32.

#### 1 Pitch & Rest

Key Assignments:


Do	Re	Mi	Fa	Sol	La	Ti	Rest
(8 g)	₽ <sup>mac</sup>	A ONE	(1) (1) (1) (1) (1) (1) (1) (1) (1) (1)	S girc	E THE	(grade)	(นัสด

#### <Changing Pitch>

 Press a key once to enter a quarter note. Press the same key repeatedly to adjust the octave.



• Use 💲 to change pitch by semitone.

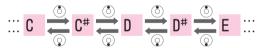


## <Entering Rests>

• Press . A quarter rest (with (R)) is entered.

## Note/Rest Type

Press or repeatedly to change type.

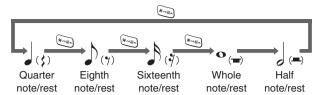

#### <Using Dotted Notes or Triplets>

• Enter a note and press FS.

The dotted version is available for half/quarter/eighth notes and rests.



• Connect 3 triplets as follows:





Melodies may not play properly, or may not attach to Long Mail if contained triplets are not a set of three. Use triplets of similar pitch to avoid failure.

#### <Using Slurs>

 Enter a note and press (a). \_ appears on the right connecting the note to the next.



## A sound is entered.

To enter more, press • to move cursor and repeat the same procedure.

• Use () to enter the same sound as the one on the left.



- Sounds may not play properly if notes of the same scale/pitch play in some melody chords simultaneously.
- Distortion may occur when multiple melody chords play simultaneously.



In Manner Mode, Keypad sound is muted.

## **Creating an Original Ring Tone**

Make sure there is enough free memory. When Data Folder is full, delete files and try again (see **P.9-24**).

Index Menu ► Functions → Sounds → Original Tones → Original Ring Tone

- 1 Enter title and press
  - Enter up to 24 single-byte characters. Title is mandatory.
  - Original Ring Tones are saved by title by default.
- 2 Select tempo (see P.8-9) and press
- $oldsymbol{3}$  Select number of chords and press  $oldsymbol{ullet}$
- ▲ Enter pitch or rest (see P.8-10)
- 5 Specify note or rest type (see P.8-11)
- 6 Press to set Cursor moves right.
- 7 Repeat Steps 4 6 to enter more
  - To adjust tone or loudness here, press (loudness).
  - Press Play to play sounds in all melody chords.
  - Press ② Stop to stop.
  - To play current melody chord up to cursor, press
  - Press ② Stop to stop.
  - To move to other melody chords, press (repeatedly).
- R Press when finished
  - To save melody without adjusting tone or loudness, skip ahead to Step 19 on P.8-13.
  - To edit entered sounds, select **□***Edit* → Press Perform Step 3 on **P.8-14**
- **9** Select *Tone* and press ●
- Select a melody chord and press
- 11 Select a genre with and a tone with
  - To use Instrument Effects, select Original (FM) or Original (WT)
  - To check tones, press 🔊 Set ...
  - Press 🔊 Stop to stop.
- 19 Press 💿
  - Repeat Steps 10 12 for other melody chords.
  - To play melody, press 🥥 Play
  - Press Stop to stop.

- 3 Press 🔊 Back
  - Skip ahead to Step 19 when not adjusting loudness.
- 14 Select Adjust Loudness and press
- 15 Select a melody chord and press
- 16 Select from ■Strong to ■Faint
  - To check loudness, press O Play
  - Press Stop to stop.
- 17 Press
  - Repeat Steps 15 17 for other melody chords.
  - To play melody, press 🥥 Play
    - Press ② Stop to stop.
- 18 Press 🔊 Back
- 19 Select **Save** and press

#### **Incoming Calls while Creating**

Melody is temporarily saved for later editing. To return, end the call and follow these steps.

Press ● Dress Press ●



Although most tones are named after musical instruments, they may sound different. Also, playback volume may vary or distortion may occur depending on the tone/scale.

Tip

When you press (I Play), Cannot play back too many Phonetic chords may appear, and when you press (I Save), Cannot save too many Phonetic chords may appear. Delete melody chords, replace short notes with longer notes, or reduce triplets.

Sounds

Qο

Related Functions

## **Editing an Original Ring Tone**

Make sure there is enough free memory. When Data Folder is full, delete files and try again (see **P.9-24**).

Index Menu ► Functions → Sounds → Original Tones → Data Folder

- Select a file and press 🔊 Menu
  - Original Ring Tones are marked with III.
- 2 Select Edit and press
  - To change tone, see Steps 9 13 on P.8-12 8-13 (omit the next steps).
  - To change loudness, see Steps 14 18 on **P.8-13** (omit the next steps).
- 3 Edit title and press •
- 4 Select tempo and press •
- 5 Select number of chords and press •
- 6 Move cursor to sound
  - To edit other melody chords, press 🗐.

## When Changing Number of Chords

■ When changing the number of phonetic chords, a warning of possible data loss may appear. To proceed, choose ■ Yes and press ● (see table below).

■To cancel, choose **Press** ■ Press

Current Chords	Changed to	Data to be Lost
8	16	Sounds after the 191st
8	32	Sounds after the 96th
16	32	Sounds after the 96th
16	8	Melody chords 9 - 16
32	8	Melody chords 9 - 32
32	16	Melody chords 17 - 32

Tone may alter when number of chords is changed.

- **7** Editing Sounds
  - 1 Use () to change pitch and switch type with (see P.8-11)
    - Keys (8) (2) are not available for this operation.

## **Adding Sounds**

1 Enter sound

Sound is entered at the cursor position.

• Refer to entry limit (see P.8-8).

#### **Deleting Sounds**

1 Press 🤊 🌣

Sound at the cursor position is deleted.

- To delete all sounds, press for 1+ seconds.
- To delete sound sequence before or after cursor, press ♠ Menu ♦ Select ☐ Delete Posterior or ☑ Delete Previous ♦ Press twice

#### Copy/Cut & Paste Melodies

- 1 Press 🔊 Menu
- 2 Select **■**Copy or **■**Cut and press
- Move cursor to the first sound of a portion and press
- Move cursor to the last sound of the portion and press ●

Portion disappears when cut.

- **5** Open a window to paste the melody
  - When pasting into other melodies, close the current melody and open another window.
- 6 Press 🔊 Menu
- Press at target location
- **R** Press (•) when finished
  - To edit tone or loudness, see Steps 9 18 on P.8-12 8-13.
- **9** Select **■** Save and press
- 10 Select **□**Overwrite and press •

Original Ring Tone is overwritten.



To save edited melody separately, select **\\_New Entry** and press **①**. The original melody remains and the edited melody is saved as a new file.

## **Deleting an Original Ring Tone**

Index Menu ► Functions → Sounds → Original Tones → Data Folder

Select a file and press 🔊 Menu

**2** Select *Delete* and press **•** 

3 Choose ■ Yes and press •

## **Instrument Effects**

#### **Basics**

Create original tones for Original Ring Tones and other melodies. Save up to eight tones per chord type (8/16 Chords, 32 Chords and WT Original Tone).

#### **Procedure**

This system, based on FM synthesis, allows you to select *Algorithm* and *Effect Level* and adjust parameters of *Operator* to create Instrument Effects.

- Select and arrange preset tones or Instrument Effects you have already created.
- Play sounds as you arrange tones to check effects of changes.
- Use WT synthesis by selecting WT Original Tone.

#### 1 Select chord

• Type: 8/16 Chords, 32 Chords and WT Original Tone

#### 2 Select a location to save

#### 3 Enter name

- Name appears when selecting tones.
- Enter up to 12 single-byte characters.

#### 4 Select source tone

• Select from preset tones if this is your first time.



## 5 Select Algorithm

- Choose from six types for 8/16 Chords, and two types for 32 Chords.
- Algorithm setting is not available for WT Original Tone.



15:05 Set OP 1

Multiple

Sustain

Key Scale Rate Key Scale Level

Total Level

Attack Rate Decay Rate

Sustain Level

Sustain Rate

☑ Play • Adjust Set

#### 6 Adjust parameters of each Operator (OP)

- There are four types of Operators for 8/16 Chords and two types for 32 Chords.
- Default parameters are the same as those of the source tone.
- Use () to select parameter and to adjust.
- Press Play to check effects of parameter changes.

#### 7 Set Effect Level, Basic Octave, etc.

#### 8 Save tone (Instrument Effects)


• Select Instrument Effects from tones to use for Original Ring Tone, etc.

#### WT Synthesis

WT synthesis is based on recorded waveform data from musical instruments, etc. which are close to original sounds.

## FM Synthesis

This system synthesizes various tones by generating a sine wave called *Operator*. *Algorithm* is a combination of Operators. Depending on the Algorithm, Operators work either as *Modulator* (that which modulates) or *Carrier* (that to be modulated).

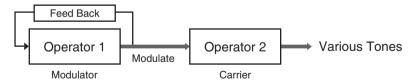


- Adjust a variety of parameters including Multiple and Sustain.
- Some Operators have a parameter called Feed Back for more effects.

tc.

## Algorithm

Select a combination of Operators from six types (8/16 Chords) or two types (32 Chords).

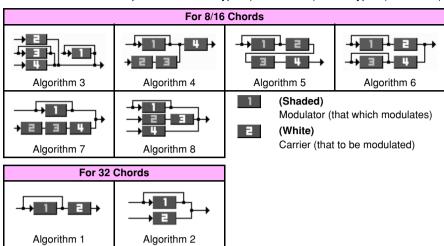

- Available Operators vary depending on the combination.
- Algorithm setting is not available for WT Original Tone.

#### Operator (OP)

See the table for details. Available parameters may vary by the number of chords.

Parameter	Description
Multiple	Multiple affects tones most. The higher the Carrier level, the higher the
(13 levels)	pitch. Adjust the Modulator level for a variety of tones.
Sustain	When Sustain is set, sound continues after produced. Choose <i>On</i> to
(On/Off)	provide sustaining effects to tones in Piano, Glockenspiel, etc.
Key Scale Rate	Set Key Scale Rate high to shorten the rise and fall time. Select 2 to
(two levels)	emphasize this effect.
Key Scale Level	The higher the Key Scale Level, the lower the volume level. Select 0 to
(four levels)	disable this effect.
	(1) Carrier
	The higher the Carrier value, the higher the volume level.
	Normally set 64 (maximum value), and select smaller values to use tones
Total Level	effectively at low volume for accompaniments, etc.
(64 levels)	(2) Modulator
	Increasing Modulator value brightens tones.
	Select smaller values for softer tones. Normally set between 40 and 64 to
	enjoy effects of tone changes.

Parameter	Description
Attack Rate (15 levels)	The higher the Attack Rate, the longer sounds take to reach the maximum volume. When using tones with Attack Rate high, use longer notes or select slower tempo.
Decay Rate (16 levels)	Lower Decay Rate to shorten the time sounds reach down to Sustain Level
Sustain Level (16 levels)	The Sustain Level for a Normal Tone equals the sustained volume. For Step-Down Tones, Sustain Level measures the volume at which Ring Tone begins to decrease. The higher the Sustain Level, the higher the volume.
Sustain Rate (16 levels)	The lower the Sustain Rate, the longer the Sustain Level volume is sustained. <i>16</i> is Normal Tone, and other levels are Step-Down Tones.
Release Rate (16 levels)	The Release Rate for a Normal Tone equals the time from beginning to end of a sound. For Step-Down Tones, Release Rate measures the time from when a sound begins to decrease until it ends completely. The lower the Release Rate, the sooner the sound ends. For sustaining effects, increase Release Rate.
KEYOFF Nullify (On/Off)	Choose ${\it On}$ to avoid sound skipping of Step-Down Tones including those in DRUM
Wave Select (29 types)	Select from 29 waveforms
Vibrato (four levels/Off)	Vibrato is a periodic variation in pitch
AM Modulation (four levels/Off)	The higher the AM Modulation level, the stronger the tremolo (periodic changes in loudness)
Feed Back (eight levels)	Set Feed Back (not available for some Operators)



When Release Rate is set high for Normal Tones, rests may be ignored in playback.

## **Additional Settings**

Parameter	Description		
Effect Level	Effect Level affects cycle time of wavering quality in pitch or loudness.		
(four levels)	Select high level to shorten the cycle.		
Basic Octave	A division of the con-		
(four levels)	Adjust octave of tones		
Panpot	Panpot measures the position of sounds, which varies by combination of L (left) and		
(31 levels)	R (right). Sound bias is emphasized as the value difference increases.		
Sustain (On/Off)	Choose <i>On</i> to extend sounds		
Vibration Level	Colort higher level for etranger vibrate		
(four levels/Off)	Select higher level for stronger vibrato		

**Basic Octave**, **Sustain** and **Vibration Level** settings are not available for WT Original Tone.

Select **18/16** Chords, **232** Chords or **2WT** Original Tone and press **9** If Instrument Effects are already saved and renamed, they appear in Effects list.

Select a location to save and press (•) twice

• To leave the name unchanged, press once and skip ahead to Step 4.

Enter name and press (•) • Enter up to 12 single-byte characters.

Select Base Tone and press (•)

Select a genre with • and a tone with ()

To check tone, press Q Play ■ Press Stop to stop.

Press (•)

Select *Tone* and press (•)

• To keep Algorithm unchanged, skip ahead to Step 10.

Select Algorithm and press ( )

Select Algorithm and press (•)

• To keep each Operator (OP) unchanged, skip ahead to Step 14.

Select Operator (OP 1, etc.: see P.8-17) and press ●

Default parameters are the same as those of the source tone.

Select a parameter with (1) and adjust it with (0) For parameter descriptions, see P.8-18 - 8-19.

Repeat Step 11 to adjust other parameters

Press Q Play to check effects of parameter changes.

■ Press Stop to stop.

Press 
or 
Set

Select Effect Level and press

Select a frequency for tremolo/vibrato and press Confirmation appears.

Select *Basic Octave* and press (•)

Select a level and press

Select Panpot and adjust with •••

Select Sustain and choose On or Off with

Select Vibration Level and adjust with •••

Press 🔊 Set

When finished with all settings, press 🔊 Set

To create more, repeat Steps 2 - 22 on P.8-20 and above.

## Other Sound Related Functions

Speaker Phone/ Speaker

Select whether to activate Speaker Phone (for handsfree conversations) or Speaker (to listen only)

Default Off

Functions ⇒ Sounds ⇒ Speaker

Select **■** Speaker Phone or **■** Speaker **→** Press (•)

To use Earpiece and Microphone for phone conversations, choose **■Off** Press •

#### Talk with Speaker

■ Before or during calls, press 🕥 for 1+ seconds.

• ♣: Speaker Phone is active. ◄: Speaker is active.

When Speaker is **D** Off, use Earpiece and Microphone for phone conversations.

• To cancel manually during a call, press 7 for 1+ seconds.

When calls end, speaker talk is canceled.

Speaker is not available when headphones, etc. are in use.

• When Speaker Phone is active, ringback tone may not sound. Handsfree conversations may be hampered by ambient noise. Keep handset as close as possible when using Speaker Phone.

**Tone Octave** 

Select an octave for each tone from four levels

Index Menu ► Functions ► Sounds ► Tone Octave


Select a genre with • and a tone with ♦ Press • Select a level **▶** Press **●** 

To check tone or octave, press 🞾 Play

■ Press ② Stop to stop.


Adjust octave of Instrument Effects in Basic Octave setting (see Steps 16 - 17 on P.8-20).

Sounds & Related Functions

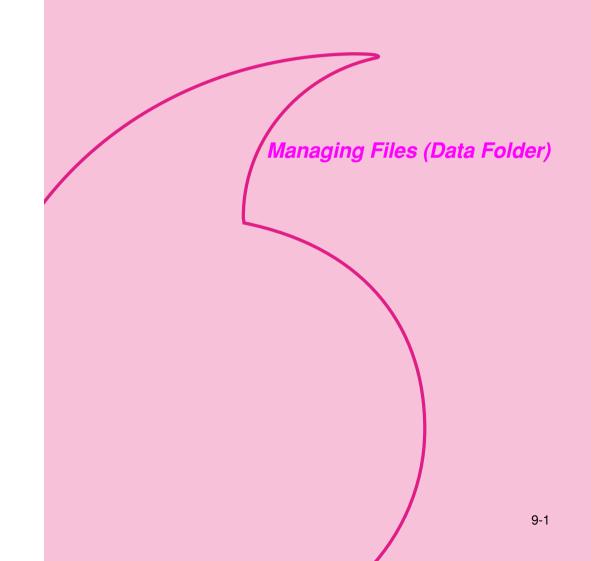

# **File Organization**

Handset has two storage areas. Files are automatically sorted into *Memory* by function and into *File Cabinet* by file format. Handset File Cabinet capacity is approximately 8 MB.

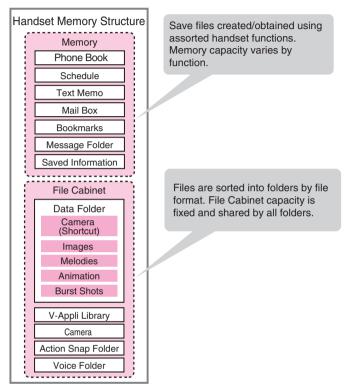

Tip

**File Cabinet Memory Status** 

To check memory usage status, press ● ➤ Select My Files ➤ Press ● ➤ Select ■Memory Status ➤ Press ●

## **Data Folder**

## **Contents**

Files created or obtained via Web or Sky/Long Mail are organized in separate folders according to file format. Files are sorted as follows:



Create QR Codes from image/melody files in Data Folder (see P.12-27).

## **Window Description**

To open Data Folder from Standby, follow these steps.

Press 

→ Select My Files → Press → Select

Data Folder → Press →



Data Folder

#### **File View**

Open a folder to view files.

- Example: Images folder
- To customize the appearance of File View, see P.9-5 "Display Settings."

## File View (List)




Format, Name and Size (of selected image) Saved Files

 Icons appear for files other than images or images not supported by handset.

Managing Files (Data Folder)

## File View (List File Names)

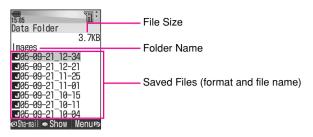



To view folders first, select *Thumbnails* or *File List* in Display Settings for Images. Animation or Burst Shots folder (see P.9-5).

#### **Icons**

#### **Still Image & Animation Files**

	lcon	Format	Description	
	(P: white)	PNG	PNG image	
	<b>⊡</b> * (P: purple)	Transparent PNG	Transparent PNG image	
	<b>■</b> *	JPEG	JPEG image	
	2	Burst Shot (consisting of Index Image and 4, 9, or 25 frames)	Burst Mode image	
	E <sup>*</sup> (E: white)	E-Animation (NEVA files)	Animation (may include sound)	
	(E: Yellow)  E-Animation (NEVA files) with jump buttons  Animation (JPEG, PNG, or PNG/JPEG Animation)		Animation (may include sound)	
			Animation	

<sup>\*</sup>Blue icon: forwardable, red icon: unforwardable

- Unforwardable files cannot be edited, combined, attached to Long Mail, converted to QR Codes or sent via infrared.
- A yellow triangle appears ( ) on icons of the files used in Phone Book, Useful Diary or Schedule entries.

#### **Sound Files**

Icon	Format	Description
s*	SMAF	Melody via Web or Long Mail (may include images)
<b>"</b>	Melody	Melody via Web or Long Mail
<i>L</i> 33	Sky Melody	Melody downloaded from Sky Melody Center (unforwardable).
Ш	Original Ring Tone	Original melody (forwardable)
V	Voice	Voice/sound you recorded (forwardable)

<sup>\*</sup>Blue icon: forwardable, red icon: unforwardable

- Unforwardable files cannot be edited, combined, attached to Long Mail, converted to QR Codes or sent via infrared.
- A yellow triangle appears ( ) on icons of the files set for Ring Tones, Alarm, etc.

## **Display Settings**

Customize appearance of each folder in Data Folder.

Setting	Description
List <sup>1</sup>	Thumbnails appear
List File Names <sup>2</sup>	File names appear
Thumbnails <sup>1</sup>	Sub folders appear (thumbnails appear within)
File List <sup>3</sup>	Sub folders appear (file names appear within)

<sup>&</sup>lt;sup>1</sup>Not available for Melodies folder.

Index Menu ► My Files → Data Folder

Select a folder and press 🔊 Menu

Select \*\*Display Settings\* and press \*\*O

**Enter Security Code** 

Select a type and press



In this manual, most operations are described with Data Folder appearance set to *List*. Operations may differ if folders are set to appear.

<sup>&</sup>lt;sup>2</sup>Appears as *List* for Melodies folder.

<sup>&</sup>lt;sup>3</sup>Appears as *Folder* for Melodies folder.

# Managing Files (Data Folder)

# **Opening Files**

## **Handset Data Folder**

ndex Menu ► My Files

- Select Data Folder and press
- Select a folder and press Thumbnails or file names appear (see P.9-3 "File View").
- Select a file and press (•)

The content plays or appears.

• Press to open or play the next file, and press to open or play the previous one. (Available in most cases.)



File View (Images Folder)

#### Opening Burst Shot Files

Index Image appears. Use • to view single frames.

#### JPEG Images Exceeding W 240 x H 320 Dots

Images are reduced to fit Display. To restore the original size, press 🔊 Menu select *Original Size* and press .

Press to return to File View

#### E-Animation Files with Jump Buttons

Some E-Animation files contain jump buttons with which to access the Mobile Internet or open linked images. Follow these steps to use the buttons.

▶ Press (●)

Click buttons on screen for operations.

Exchange files via infrared with compatible devices (seeP.10-2).

## Sending Files via Long Mail

Attach files to Long Mail from Data Folder.

Index Menu ► My Files ► Data Folder ► Open a folder

- Select a file and press 🔊 Menu
- Select *Attachment* and press (•)
  - For large JPEG image, select **Attach 1/4 Size**, **Attach Original** or **Attach Split Mail** ▶ Press (●)
  - For Melody files or Original Ring Tones, select a file format (see OP.3-8) Press O
- Complete other fields and send Long Mail (see Step 2 and onward on OP.3-3)

#### **Sending Burst Shot Images**

■ Press • → Select My Files → Press • → Select ■ Data Folder → Press • → Select Burst Shots → Press • → Select a file → Press • → Select an image with • Press ▶ Press ▶ Perform Select • Attach Screen ▶ Press • Perform from Step 2 on O P.3-3

#### **Sending Split Images**

To split an image (240 x 320 dots) into four frames and attach to Long Mail, follow these steps.

Press ● → Select My Files → Press ● → Select ■ Data Folder → Press ● Select a folder → Press ● → Select an image → Press ▶ Menu → Select Attachment → Press • → Select ■ Attach Split Mail → Press • → Select or enter recipient → Choose **1** Yes → Press (•) (See Step 3 and onward in "Send Continuously" on OP.4-19.)

Split Mail transmission charges are equivalent to sending four Long Mail messages.

Managing Files (Data Folder)

## **Properties**

Index Menu ► My Files

1 Open Data Folder or a folder within it, and select a folder or file

2 Press 🔊 Menu

3 Select Property and press

Details appear.

• Press 🕠 to scroll down.

• Item Descriptions

1			
Title <sup>1</sup>	Melody file name		
Туре	File/folder type		
Location	File/folder location		
File Size	Data Size		
Memory Used	File size on handset		
Width x Length <sup>2</sup>	Image size in dots		
Conv/Eud	OK: can be copied within Data Folder		
Copy/Fwd	Invalid: not supported		
Save	OK: can be saved		
Save	Invalid: not supported		
Transfer	OK: can be transferred to external device		
Transier	Invalid: not supported		
Phone Book (Photo) <sup>3</sup>	Yes: set for Photo setting		
Incoming Tone <sup>1</sup>	Yes: set for Ring Tones, Alarm, etc.		
Set Useful Diary <sup>3</sup>	Yes: set for Useful Diary		
Schedule Memo <sup>3</sup>	Yes: set for Schedule		

<sup>&</sup>lt;sup>1</sup>Appears for files in Melodies folder.

## **Animation File**

## **Simple Animation**

Select up to four images to create Simple Animation. Images appear one after another at the selected tempo.

- Use JPEG images captured with mobile camera or obtained via Web/Long Mail.
- Simple Animation files are saved to Animation folder. However, those made of a single image are saved to Images folder.
- When memory is full, delete files to free some space (see **P.9-24**).
- Image quality may change when used for animation.

#### **Creating Simple Animation**

Index Menu ► Functions → Settings 2 → Animation → Simple Animation → New

- 1 Enter title and press
  - Enter up to 32 single-byte characters. Title is mandatory.
  - Files are saved by title by default; change file names later (see P.9-23).
- 2 Select tempo and press

In animation, images appear in numerical order at the tempo.



Simple Animation

File Name[Easy-goin]

Tempo[Slightly Slow]

05-09-21\_11-08

- 3 Select a number and press
- 4 Select an image in Data Folder and press
  - For operations in Data Folder, see P.9-6.
  - To use a 4-Burst Shot (all frames), select a Burst Shot file ▶ Press ▶ Select

     Animate Burst File ▶ Press
    - Animate Burst File is available only when is selected in Step 3 with no other
  - images specified. Burst Shot files of 240 x 320 dots are not available.

    To use a Burst Shot frame, select a Burst Shot file → Press ➤ Select Choose One
  - Press Proceed to Step 5
     To start over from selecting an image in Data Folder, press P Change
  - To start over from Step 3, press (2) Back
- 5 Press
  - The image is set.

  - Animation Playback → Press •
  - To return, press 🔎 Back 🗼 Press 💯
  - To change images, select one ▶ Press 🔊 Menu ▶ Select
  - **□** Change → Press Start over from Step 4
  - To delete images, select one → Press ❷ Menu → Select
    - **■** Delete → Press → Choose **■** Yes → Press ●
- Repeat Steps 3 5 to add images

  Select up to four images.
- 7 Press Set when finished
  - To send animation via Long Mail, select **■** Attachment **→** Press **● →** Perform from Step 2 on **O** P.3-3
  - For large animation, choose Yes → Press (File may be too large to be attached even if the size is reduced.)
- $m{8}$  Select lacktriangle Select lacktriangle

<sup>&</sup>lt;sup>2</sup>Appears for JPEG/PNG/Burst Shot images, etc.

<sup>&</sup>lt;sup>3</sup>Number of entries for which the file is used also appears.

Managing Files (Data Folder)

#### **Editing Animation**

When memory is full, delete files to free some space (see P.9-24).

Index Menu ► Functions → Settings 2 → Animation → Simple Animation → Edit

- Select animation and press
- Edit title and press
- Select tempo and press (•)
  - To add images, select a number 🖈 Press 🌒 🖈 Select an image 🖈 Press 🗨 twice
  - To change images, select a number → Press 🔊 Menu → Select 🗷 Change → Press 💿 Select an image → Press → twice
  - To delete images, select a number → Press 🔊 Menu → Select 🗉 **Delete** → Press 💿 ◆ Choose ■ Yes ◆ Press ●
- When finished editing, press Q Set
- Select **Save** and press
- Select **New Entry** and press (•)

The animation is saved to Data Folder (Animation).

To overwrite, select **□Overwrite** → Press •

## **Opening Animation Files**

Index Menu ► My Files ► Data Folder

- Select a folder and press (•)
- Select animation file and press (•)

The selected animation plays.

- Press (2) Back to stop.
- To use animation files, see below.

# **Using Images & Animation**

Some images may not be used.

## **Changing Display Size**

Open a file and press 不知

Display size toggles between 100% (with indicators), 100% (no indicators), Enlarged (with indicators) and Enlarged (no indicators).

- Size may not be changed or size options may vary depending on the file. When enlarged, the entire image may not appear on Display.
- **□**: 100%. **□**: Enlarged

## **Setting Image & Animation as Wallpaper**

Save As Wallpaper can be selected only for compatible files.

Index Menu ► My Files → Data Folder → Open a folder → Open a file → Menu

*Images* 

■ Select □ Display Setting and press •

2 Select **1** Save As Wallpaper and press (•)

**Animation** 

Select Save As Wallpaper and press

**2** Press (●)

## **Setting Image & Animation as Display Images**

To Display Images can be selected only for compatible files.

Index Menu ► My Files → Data Folder → Open a folder → Open a file → Menu (🗷

**Images** 

■ Select □ Display Setting and press •

2 Select ≥ To Display Images and press ●

**Animation** 

■ Select To Display Images and press (•)

Select an item and press (•)

For more, see Step 4 and onward on P.7-5.

## **Saving Burst Shot Images**

Save all frames and Index Image of a Burst Shot file (2) as individual images at one time, or select a single image to save.

Individual Burst Shot images are saved to Data Folder (Images) in JPEG format. (Source file remains.)

Index Menu ► My Files ► Data Folder ► Burst Shots ► Open a Burst Shot file

Saving All Images Individually

1 Press 💫 Menu

**2** Select **2** Save Single Frames and press **●** 

Saving a Single Image

1 Select a frame or Index Image with • and press 🔊 Menu

2 Select ■ Save Screen and press (●)

Index Menu ► My Files → Data Folder → Open a folder

- 1 Select an image and press 🔊 Menu
- 3 Select ■Slide Show and press ●

Slide Show starts from the selected image.

- To stop Slide Show, press .
- To resume, press .
- To skip images manually, press 🔊 Next

#### **Setting Interval**

■ Interval is Standard by default. To change interval, follow these steps.
After Step 2 above, select ■Display Speed → Press ● Select an interval

▶ Press ●

# **Editing Images**

## **Enlarging/Reducing Image**

Index Menu (♠) → My Files → Data Folder → Open a folder → Open a file → Menu (♠) → Image Size

- 1 Select ■Enlarge/Reduce and press
  - If *Move* does not appear at the lower left, press Resize
  - Shortcut: From Data Folder, open an image and press Q Resize



Managing Files (Data Folder)

#### To Center the Point to Enlarge

- Press and use to move the point to the center of Display.
- Image stops when you release the key or the limit is reached.

To Return to Resize Mode Press (2) Resize.


# Press and hold to enlarge and to reduce the size

To stop resizing, release the key (stops automatically when the limit is reached).

To soften images, press 🔊 Soft



- Portions outside Display are cut when saved.
- When Move is pressed after resizing, image returns to the original size.

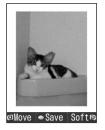

**3** Press **●** 

Resized image is saved as a new entry.

## **Changing Image Size**

Resize images in Data Folder to send via Long Mail or set as Wallpapers.

- Alternatively, crop image for size. File size changes when images are resized.
- Images may not appear depending on the size.
- Change Image Size can be selected only for compatible files.

#### **Resize to Preset Size**

Index Menu 

My Files 

Data Folder 

Open a folder 

Open a file 

Menu (♠)

Image Size 

Change Image Size

# 1 Select from **Wallpaper** to **Alarm** and press A rectangle appears on the image (except for **Wallpaper**.)

Wallpaper	W 240 x H 320 dots
Sha-mail Size	W 120 x H 160 dots
Power On/Off	W 120 x H 130 dots
Incoming Call	W 120 x H 38 dots
Alarm	W 120 x H 51 dots

To start over from selecting preset size, press 🥮 or 🔊 Size



Managing Files (Data Folder)

## Selecting Display Area

## 1 Use ♦ to specify display area and press ●

• Display area may not be specified depending on image size.

#### Enlarge or Reduce

1 Press 😕 Resize

Move appears in the left bottom corner.

Press to enlarge and to reduce the size, and press

**3** Press **●** 

Image is saved as a new entry.

## **Cropping Images**

Index Menu 

My Files → Data Folder → Open a folder → Open a file → Menu (②)

→ Image Size → Change Image Size

- 1 Select **□**Cut and press
- **2** Use � to move + to the upper left corner of the portion to crop and press ●
- **3** Use **3** to move + to the lower right corner of the portion

To cancel, press ② Back → Start over from Step 2



- To start over from selecting preset size, press or low size.
- To adjust display area/scale, see Step 2 in "Resize to Preset Size" above.



## **Marker Stamp**

Add text/stamps (arrows/plus sign) to images.

- Apply to JPEG and PNG images. Some images may not be used.
- Marker Stamp can be selected only for compatible files.

Index Menu (♠) → Data Folder → Open a folder → Open a file → Menu (♠) → Picture Effect

## 1 Select Marker Stamp and press

- To specify the color, select **Z**Font Color → Press → Select a combination → Press ●
- To not to outline text/stamp with the latter color, select **■**Border → Press Choose **■**Off → Press •



For PNG images, *Font Color* and *Border* cannot be selected (*White w/ Black* applies).

## 2 Entering Text

■ Select ■ Character and press ●

■ Enter text and press ●

- Enter up to 16 single-byte characters.
- Press ( to change the color and ( to toggle Border On and Off.

## **Adding Stamps**

## ■ Select a stamp and press ●

- To change stamp, press 🥥 Back
- Press 🕼 🗐 to change the color and 🔤 to toggle Border On and Off.
- 3 Use ♦ to move text or stamp to target location and press ●
- - To add more text or stamp, select **□Marking** → Press Press ▶ Menu → Repeat Steps 2 4
  - To check the image, select **□Check Image** → Press •
  - To cancel editing, select **□ Cancel Edit** → Press Choose **□ Yes** → Press •
- 5 Select **■**Complete and press •
- 6 Choose **1** Yes and press Image is saved as a new entry.

## **Visual Effects**

Dress up images with preloaded visual effects.

- Apply to JPEG images including Burst Shot files.
- Use images between W 52 x H 52 and W 240 x H 320 dots. Images larger than W 240 x H 320 dots are automatically cropped and centered.
- Image Decoration or Burst Shot Effects can be selected only for compatible files.

Index Menu ► My Files → Data Folder → Open a folder → Open a file → Menu (🔊)

## 1 Select Picture Effect and press

To decorate Burst Shot images, select **■**Burst Shot Effects → Press **③** → Skip ahead to Step 3



For Burst Shot files, decorations are added to all images. To decorate a single image, save it as an individual image first (see **P.9-11**).

2 Select □Image Decoration and press ●

Managing Files (Data Folder)

## 3 Select an effect and press

• Picture Effects:

Sepia	Renders image in sepia tones		
Sparkling	Adds sparkling effect to bright portions of an image		
Soap Bubbles	Superimposes bubbles over an image		
Kaleidoscope	Renders an image as a kaleidoscopic image		
Emboss	Renders images in black and white relief		
Scrunch	Renders image as a pencil sketch		
Aluminum Can	Superimposes image onto a 3D can image		
Round Frame	Adds a round, opaque frosting to the edges of an image		
Soft Frame	Adds a soft, opaque edged frame to image		
Zigzag Frame	Adds a jagged edged frame around image		

**4** Press ●

Image is saved as a new entry.



Managing Files (Data Folder)

Edited images may be too large to save or send via Long Mail.

## **Face Arrange**

Make smiley, angry or sad faces.

- Apply to JPEG images.
- Use portrait images.
- Face Arrange may not fit all images. Adjust position and size as required (see P.9-17).
- Face Arrange can be selected only for compatible files.

Index Menu	<ul> <li>My Files → Data Folder → Open a folder → Open a file → Menu (</li> <li>Picture Effect → Face Arrange</li> </ul>
	→ Picture Effect → Face Arrange

## Select a type and press

Mirror: Right-half	Copies right side of face onto left side	Slender	Stretches face to lengthen appearance
Mirror: Left-half	Copies left side of face onto right side	Crush Face	Shortens distance between top and bottom of face
Grin	Pulls eyes down & mouth up	Dark	Darkens skin tone
Mad	Pulls eyes up & mouth down	Fair	Brightens skin tone
Sad	Pulls eyes & mouth down	Angry Mark	Adds a stress mark to face

To start over, press 🔾 Back

**2** Press • Image is saved as a new entry.




When using Face Arrange, take care not to create images that may embarrass or offend others. Always obtain permission before photographing others.

#### **Adjusting Face Arrange Position**


After Face Arrange (Step 1 on **P.9-16**), change the positions and sizes of targets to fit your images. Changes apply to the current image only.

- **1** Select **₹** Positioning and press **●** Face Arrange targets appear.
- Press Modify
  A rectangle appears with + in the upper left corner.

## 3 Set the face line

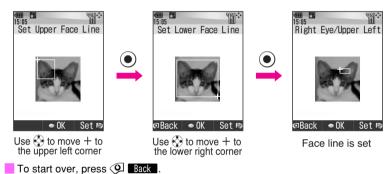

## 4 Set the eyes and then mouth in the same way

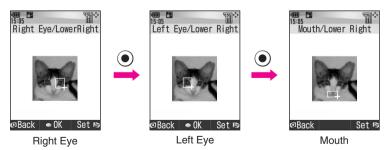

9-16 9-17

After Arranging Face..., all the targets appear.

- To start over from the face line, return to Step 2.
- To restore the original positions, press 🥥 Reset

6 Press ●

7 Choose ■ Yes and press ●

Image is saved to Data Folder as a new entry with Face Arrange positions adjusted, and Face Arrange menu returns.

• Complete Face Arrange. Face Arrange is applied to the adjusted positions.

## **Additional Picture Effects**

- Frame, Burst Mode Frame, 90° turn, Change File Format and Moving Photo Frame can be selected only for compatible files.
- Edited images are saved as new entries.

Frame

Add Frame to JPEG images

Index Menu ► My Files ► Data Folder ► Open a folder ► Open a file ► Menu (🔊)

#### **Framing Standard Images**

Select ■ Picture Effect → Press ● Select ■ Frame → Press ● → Select ■ Preset Frames or ■ Original Frames → Press ● Select a frame → Press ● twice

- To check frames, select one ▶ Press 🥥 Show
  - Press ② Back to return to Frame list.

## **Framing Burst Shot Images**

Select ■Burst Mode Frame → Press ● → Select ■Preset Frames or ■Original Frames → Press ● → Select a frame → Press ● twice

- To check frames, select one ▶ Press 🥥 Show
- Press ② Back to return to Frame list.



For Burst Shot files, frames are added to all images. To frame a single image, save it as an individual image first (see **P.9-11**).

90° turn

Rotate images

Index Menu

My Files ⇒ Data Folder ⇒ Open a folder ⇒ Open a file ⇒ Menu (♠)
 ⇒ Picture Effect

Select **□**90° turn **>** Press **○**) **>** Press **○**)

\*To rotate further, press Rotate. Each press rotates image by 90 degrees.

loving Pho Frame Add Moving Photo Frame to JPEG images to create animations

Index Menu

► My Files → Data Folder → Open a folder → Open a file → Menu (🔊)

→ Picture Effect → Moving Photo Frame

## Select a frame ▶ Press ● twice

- To view file animation alone, select one ▶ Press 🥥 Show
  - Press Back to return to Moving Photo Frame list.
- Animations are saved as *E-Animation* files with a .nva extension.



Moving Photo Frame size is W 120 X H 130 dots. For images larger than this size, Moving Photo Frames appear centered. Resize or crop images to fit frame (see **P.9-14**).

Change File Format

Convert image format to JPEG (■) or PNG (■)

Index Menu

My Files → Data Folder → Open a folder → Open a file → Menu (
 Change File Format

#### Select a format **→** Press **⊙**

- Apply to images smaller than 120 x 160 dots.
- The original format cannot be selected.



Changing file format may affect image quality.

# **Combining Images**

Some images may not be combined and menu items may vary by file type.

## **Split Screen**

Combine up to four reduced images into one.

- Apply to JPEG images including Burst Shot files.
- Make sure there is enough free memory.
- Images are placed in the upper left, upper right, lower left and lower right in numerical order.



Split Image

Index Menu ► My Files ► Data Folder ► Open a folder

## Select an image for upper left and press

• To use a Burst Shot image for upper left, select any standard image temporarily and change it to a Burst Shot image later (see Step 10 on **P.9-20**).


Managing Files (Data Folder)

Press 🔊 Menu Select **E**Composite and press • Select Split Image 120 x 160 or Split Image 240 x 320 and press Enter name and press (•) • Enter up to 32 single-byte characters. Name is mandatory. Select a number and press (•) Data Folder opens. Select a folder and press Select an image and press (•) • Some images may not be selected. To change the image, press 🔊 Change. To start over from selecting a number, press Q Back Press (•) Repeat Steps 6 - 9 to add images To preview Split Image, press 🔊 Menu → Select Split Picture File Name[MyPhoto ■ Split Screen → Press • **■**05-09-20 15-17 ■ To return, press 🔊 Back 🕨 Press 🖘 **2**05-09-20\_15-18 To change images, select one → Press 🔊 Menu → Select **1**05-09-20 15-20 **□**Change → Press • Start over from Step 7 To delete images, select one → Press 🔊 Menu → Select **■** Delete → Press • Choose **■** Yes → Press • Press Q Set when finished To send Split Image via Long Mail, select **□ Attachment** → Press • → Perform from Step 2 on **O P.3-3** Select **Save** and press Image is saved as a new entry. Using a Single Image of Burst Shot File

# Using a Single Image of Burst Shot File Follow these steps after Step 6. Select Burst Shots → Press ● → Select a Burst Shot file → Press ● → Use ⊕ to select an image → Press ● → Perform from Step 10 above 1/4 - 4/4, etc. is added to the file name. Index Image can be used (⊞ is added to the file name).

## **Panorama Images**

Combine two images into one.

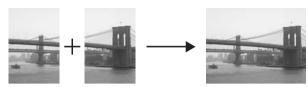

Select two images

Merge Panorama

#### Panorama Image Effects:

Standard Applicable to all kinds of shots			
Near View	Best suited for close-up shots with parallax correction		
Document	Use for images with text		

- Use JPEG images between W 48 x H 64 and W 120 x H 160 dots/W 160 x H 120 dots.
- Some portions may be cropped to adjust two images to the same size.
- The result may not be satisfactory if color tones are different between two images.



- 1 Select an image and press
- 2 Press 🔊 Menu
  - For Burst Shot images, skip ahead to Step 4.
- 3 Select **□** Composite and press **⊙**
- 4 Select Merge Panorama and press 
  The first selected image appears on the left when combined.

• Merge Panorama can be selected only for compatible files.

- 5 Select from **■** Standard to **■** Document and press •
- 6 Select 🖹 and press 💿 Data Folder opens.
- 7 Select another image and press

Managing Files (Data Folder)



The selected image appears on the right. Two images are set.

- If the image is too large or too small, select another.
- To change the image press <a> Change</a> <a> Start over from Step 7</a>
- 9 Press Set when finished
  - Combined image appears.

     Use 🚱 to scroll the image.
  - To switch the positions, press Replace.



Image is saved as a new entry.

## **Combining Split Mail Images**

Use one of four Split Mail images to combine them all into one.

- Images may not be combined properly if file names of Split Mail images are changed, or the same file name exists.
- When combined, image quality may change.

Index Menu 

My Files 

Data Folder 

Open a folder 

Open a file 

Menu 

Composite

## 1 Select ■ Combine Split Mail and press ●

**2** Press ●

Image is saved as a new entry.

# **Melody Files**

Some functions may not be available and menu items may vary by file type.

## **Playback Volume**

Index Menu ► My Files ► Data Folder ► Melodies

- 1 Select a file and press 🔊 Menu
- 2 Select ■Playback Volume and press ●
- **3** Use 💲 to adjust level and press 💿



## **Using for Incoming Tone/Sound Effects**

Files cannot be used if the file name exceeds 24 single-byte characters.

Index Menu ► My Files ► Data Folder ► Melodies

- Select a file and press 🔊 Menu
- 2 Select Elncoming Tone or ESound Effects and press
- Incoming Tone or Sound Effects can be selected only for compatible files.
- 🗿 Select an item and press 💿

## **Editing Melodies & Adjusting Tone or Loudness**

- Press → Select My Files → Press → Select Data Folder → Press → Select Melodies → Press → Select a melody → Press ▶ Menu
  - ■To edit melodies, select **E**Edit → Press (•) → Perform from Step 3 on P.8-14
  - To adjust tone, select **Tone** Press Perform Steps 10 13 on **P.8-12 8-13**
  - ■To adjust loudness, select **Z** Adjust Loudness Press Perform Steps 15 18 on **P.8-13**
  - Melody format files are saved as Original Ring Tone format after Edit.

# **Editing Files & Folders**

To change folder names, set folders to appear from Display Settings (see P.9-5).

Changing Folder/ File Name

Rename folders (except Folder 0) or files

Index Menu ► My Files ► Data Folder

#### **Folder Names**

Select a folder → Press ⊙ → Select from Folder 1 to Folder 9 → Press ▷ Menu → Select □ Folder Name → Press ⊙ → Enter name → Press ⊙

#### **File Names**

Select a folder → Press ● → Select a file → Press ▷ Menu → Select Change File Name → Press ● ▶ Enter name → Press ●



- Changing names does not affect titles of sound files.
- When you attach a file to Long Mail, single-byte katakana used in the name change to double-byte, and Pictographs are deleted.
- Some single-byte Symbols may not be used for file names.

Managing Files (Data Folder

Index Menu ► My Files ► Data Folder ► Open a folder

Select from Folder 1 to Folder 9 → Press 🔊 Menu → Select **■** Secret Mode → Press • **→** Enter Security Code → Choose **■** On or **□**Off **→** Press **⊙** 

• Enter Security Code to open folders set to On.



Secret Mode is not available for Camera folder (shortcut).

Copy/Move

Copy or move files to other folders within each Data Folder

Index Menu ► My Files ► Data Folder ► Open a folder

Select a file → Press 🔊 Menu → Select Copy or Move → Press 💿

**⇒** Select a destination folder **⇒** Press **⊙** 

Delete

Delete a single file or all files at once

Index Menu ► My Files → Data Folder

## **Deleting Single Files**

Select a folder → Press ● → Select a file → Press ▶ Menu → Select *Delete* → Press • Delete?\* appears → Choose • Yes → Press


\*If the file is used for Incoming Tone, Picture Call/Mail, Useful Diary, etc., File in Use Delete? appears.

## **Deleting All Files**

Select a folder → Press → Select Delete All → Press •

**▶** Enter Security Code **▶** Choose **■** Yes **▶** Press **●** 

Managing Files (Data Folder)

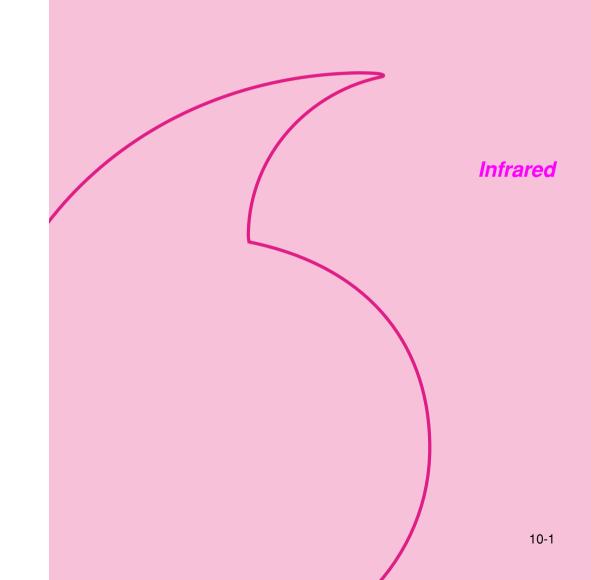

Exchange information and files with infrared-compatible Vodafone handsets and other devices.

- V302SH complies with IrMC 1.1, but some files may not be exchanged.
- Infrared transfers are disabled while handset is connected to the Network (receiving/ sending mail or information) or while using Vodafone live! services.
- During infrared transfers, handset automatically enters Off-Line Mode (see P.3-6). Thus transfers are disabled while receiving calls/messages, during calls, while using Vodafone live! services, while editing mail or data, etc. Off-Line Mode is canceled after transfers.

## **Available Files**


Function	One File	All Files	Note
Phone Book	Available	Available	The following settings are lost: Photo, Personal Ring Tone, Incoming Notice and Mail Folder. In one file transfers, Group and Secret settings are also lost. All file transfer includes Owner Profile (except handset phone number).
Data Folder	Available	N/A	Transfer JPEG and PNG files in Images folder as well as E-Animation (NEVA files) in Animation folder. Copy protected files cannot be transferred.
Camera Mode Images	Available	N/A	Transfer a DCF format file of up to 210 KB



- Files over 40 KB cannot be transferred (except Camera mode images).
- Images may not appear on recipient handsets.

## **Precautions**

• Bring handsets to within 20 cm and place the ports face-to-face. Do not place objects between handsets.

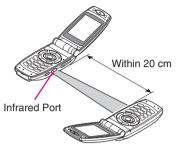

- Keep the ports face-to-face during transfer.
- Transfers may fail under direct sunlight or fluorescent lights, or near infrared equipment.
- Clean the ports with a soft cloth. Dirty ports may not transfer files properly.



When transfer fails, Remote Device Not Found Reconnect? appears. Take the above precautions and try again. (Choose **I Yes** and press **()**.)

## **Set IR Password**

IR Password is specific for infrared transfers. Transfers are possible when passwords of both handsets match.

The password specified when receiving an infrared transfer for the first time remains valid. Use the procedure described below to change IR Password.

Index Menu ► Infrared → Set IR Password

## **Enter Security Code**

## **Enter IR Password**

Password is set and Infrared Transfer menu returns.



If IR Password is set by this procedure beforehand, password entry is not requested when receiving an infrared transfer for the first time.

# **All File Transfer**

Security Code and IR Password are required to transfer all files.

- Security Code: see P.1-26
- IR Password is required for infrared transfers. Transfers are possible when the passwords of both handsets match. To set recipient handset password before transfer, see P.10-3.

## Sending All Phone Book Entries

## Select Send All Entries and press

Off-Line Mode is set.

Index Menu 
Infrared

- When handset fails to enter Off-Line Mode. Infrared Transfer menu returns.
- **Enter Security Code**
- Prepare recipient handset
- **Enter IR Password**
- Within 15 seconds, choose **T** Yes and press Transfer starts. When finished, Infrared Transfer menu returns.

• If IR Password is incorrect. Infrared Transfer menu returns.

## Receiving All Phone Book Entries

## Index Menu ► Infrared → Acquire Signal

## **Enter Security Code**

Standing by... appears and handset receives files if sent within 30 seconds. (A confirmation appears.)

- Press 🞾 Cancel to cancel.
- Press 😭 to end.
- When IR Password? appears, see P.10-4 "Infrared Password."

## To Add Entries

## ■ Select ■ New Item and press (•)

Transfer starts. When finished, Infrared Transfer menu returns.

## To Overwrite Existing Entries

- Select □ Delete All & Save and press •
- **2** Choose **■** Yes and press

Transfer starts. When finished, Infrared Transfer menu returns



When Phone Book is overwritten, all Owner Profile contents are deleted, except handset phone number.

# **Transferring Files**

## One File Transfer

#### Sendina

Send one file or entry from Phone Book or Data Folder.

## Open file list and highlight a file

- Alternatively, for Phone Book, open an entry.
- Press 
  Menu or 
  Menu
- Select Send via Infrared and press

Off-Line Mode is set and title entry window opens.

- When handset fails to enter Off-Line Mode, file list returns.
- Edit title and press (•)
  - Source file or entry name remains unchanged. To proceed without changing the title, press .



005 Ueda Mikio

007 Kitavama

008 Kimura Tet

03123XXXX8

03123XXXX5

03123XXXX3

- Prepare recipient handset
- Within 15 seconds, choose **1** Yes and press (•)

Transfer starts. When finished, file or entry list returns.

Receiving

Index Menu ► Infrared ► Acquire Signal

**Enter Security Code** 

Standing by... appears and handset receives files if sent within 30 seconds. (A confirmation appears.)

- Press Q Cancel to cancel.
- Press 🗐 to end.




#### Infrared Password

- IR Password? appears when receiving an infrared transfer for the first time. Enter a 4-digit password to start receiving.
- The entered password remains valid. See P.10-3 to change the password.
- If incorrect, Infrared Transfer menu returns.
- Choose **II** Yes and press •

File is saved and Infrared Transfer menu returns.

To cancel transfer, choose **□No** → Press • Choose **□Yes** → Press •

Infrared

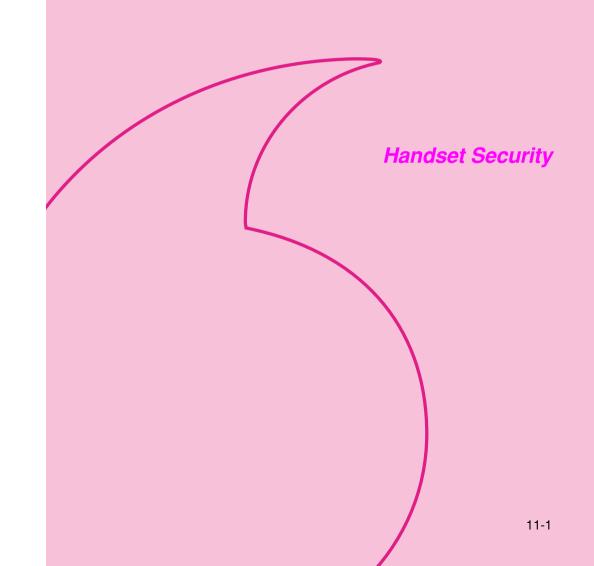

# **Changing Security Code**

Whenever necessary, change Security Code.

Center Access Code cannot be changed from handset.

Index Menu ► Functions → Privacy → Change Code

**Enter current Security Code** 

Security Code: see P.1-26

If incorrect, handset returns to Standby.

**Enter new Security Code** 

Re-enter Security Code

If incorrect, handset returns to Standby.

## **Handset Locks**

## **Keypad Lock**

Restrict access to handset functions.

Index Menu ► Functions ► Privacy ► Keypad Lock

**Enter Security Code** 

fi appears and Keypad Lock is set.

#### When Keypad Lock is Active

■ In Standby, press for 2+ seconds to deactivate handset power, Press for 1+ seconds to activate/cancel Key Guard. 🖼 - 🖼 to enter Security Code or 💯 to edit Security Code entry. Emergency calls to Police (110). Fire (119) and Coast Guard (118) are possible.

Dialing from Keypad is disabled except for emergency calls to Police (110), Fire (119) and Coast Guard (118).

- During a call, press (a) to end the call, (b) to answer another call or switch between callers in Call Waiting, 🖼 - 🗐 to enter Security Code or 🥥 to edit Security Code entry.
- Answer calls by pressing or keys for Anykey Answer (see P.2-6). Press of to forward incoming calls or press (a) to place callers on hold.



Emergency calls (110, etc.) are possible while Keypad Lock is active. For more, see P.2-5 "Emergency Calls."

#### Canceling

## **Enter Security Code**

disappears and Keypad Lock is canceled.

- Keypad Lock can be canceled during calls.
- Keypad Lock remains active even if handset power is deactivated, then reactivated.

## **Auto Key Lock**

Index Menu ► Functions → Privacy → Auto Key Lock

**Enter Security Code** 

Choose **II**On and press (•)

• Keypad Lock activates from the next time handset power is turned on.



Emergency calls (110, etc.) are possible while Auto Key Lock is active. For more, see P.2-5 "Emergency Calls."

#### Canceling

Cancel Keypad Lock (see above) first and follow these steps.

Index Menu ► Functions → Privacy → Auto Key Lock

**Enter Security Code** 

Choose **□**Off and press **●** 

## **Phone Book Lock**

Protect Phone Book entries from accidental alteration and restrict access to Phone Book information.

Index Menu ► Functions ► Privacy ► Phone Book Lock

**Enter Security Code** 

Choose **I**On and press •

To cancel Phone Book Lock, choose **EOff** → Press •



When Phone Book Lock is active, the following Phone Book operations are disabled:

- Searching, saving, editing and dialing, including Speed Dial (see P.5-14)
- Creating QR Codes from Phone Book entries or Owner Profile (see P.12-27)

Index Menu ▶ Functions ▶ Privacy ▶ Restrict Dial

**Enter Security Code** 

Choose **I**On and press •

To cancel Restrict Dial. choose **□Off** → Press •

When Restrict Dial is Active

■ Dialing from Keypad is disabled except for emergency calls to Police (110), Fire (119) and Coast Guard (118).

Emergency calls (110, etc.) are possible while Restrict Dial is active. For more, see P.2-5 "Emergency Calls."

# **Accept Call & Reject Call**

Designate numbers from which to accept or reject calls.

Accept Call	Accept calls from designated numbers only. Calls from other numbers are rejected and caller hears a busy tone.
Reject Call	Reject calls from designated numbers. Caller hears a busy tone.

• For rejected calls, Missed Calls appears in Missed Call notice (see P.2-15) and Reject appears in Call History.

• Accept Call and Reject Call operate only when Caller ID is sent.

• To reject calls with No Caller ID or Payphone calls, see P.11-6.

• Accept Call and Reject Call cannot be set at the same time.

## **Saving Entries**

• Save at least one entry before activating Accept Call or Reject Call.

• Save up to 10 entries each.

Index Menu ► Functions ► Privacv

Accept Call

■ Select ■ Accept Call and press •

2 Enter Security Code

Reiect Call

■ Select ■ Reject Call and press ●

2 Enter Security Code

Select Specify Number and press

Select **E**Save to List and press (•)

Names or phone numbers appear if saved.

To delete list entries, select a number → Press <a> Press</a> <a> Press

Select a number and press • Select ----- for new entry.

Enter a phone number

To select from Phone Book, see P.5-13.

Press (•)

Name appears if selected from Phone Book. Number appears if entered directly. (Name does not appear even if saved in Phone Book.)

• Repeat Steps 3 - 5 to save other numbers.

## **Accept Call**

• At least one entry is required to set Accept Call (see P.11-4).

· Cancel Reject Call before activating Accept Call.

Index Menu ► Functions → Privacy → Accept Call

**Enter Security Code** 

Choose **I**On and press •

To cancel, choose **□Off** → Press •

## **Reject Call**

• At least one entry is required to set Reject Call (see P.11-4).

Cancel Accept Call before activating Reject Call.

Index Menu ► Functions → Privacy → Reject Call

**Enter Security Code** 

Select Specify Number and press

Choose **I**On and press •

To cancel, choose **⊒Off** → Press ●

## F29 F27

## **Rejecting Other Calls**

Reject calls with No Caller ID or Payphone calls. Handset does not ring and caller hears a rejection message.

Index Menu ► Functions ► Privacy ► Reject Call

- **1** Enter Security Code
- 2 Select **□***No ID* or **□***Payphone* and press **⊙**
- **3** Choose **□** On and press **⊙** To cancel, choose **□** Off **→** Press **⊙**

## **Secret Mode**

Activate Secret Mode to open Secret Mode entries.

## **Activating Secret Mode**

Index Menu ► Functions → Privacy

- 1 Select Secret Mode and press ●
- 2 Enter Security Code
  Secret Mode is set and \$ appears.

## 11



Secret Mode is canceled when handset power is turned off.

#### **Exiting Secret Mode**

Index Menu ► Functions → Privacy

1 Select **Secret Mode** and press **Secret Mode** is canceled.

## **Opening Secret Mode Entries**

Activate Secret Mode and open a Phone Book entry.

- \$ lights for standard entries and flashes for Secret Mode entries.
- To edit or delete Secret Mode entries, see procedures for standard entries.



## Reset

#### **Reset Defaults**

Cancel custom settings and return handset functions to their default settings.

- Phone Book entries are unaffected.
- For settings affected by Reset, see P.14-2 14-5.

Index Menu ► Functions ► Privacy ► Reset Defaults

- **1** Enter Security Code
- **2** Select **□** OK and press **●**To cancel, select **□** Cancel **→** Press

#### Reset All

Clear all Phone Book entries, Original Tones and other data (including Mail and Web). Custom settings return to their defaults. However, Security Code is unchanged.

Index Menu ► Functions ► Privacy ► Reset All

- **1** Enter Security Code
- 2 Select **□** OK and press •


  To cancel, select **□** Cancel Press •



Files removed using Reset All cannot be recovered.

A

Handset Security

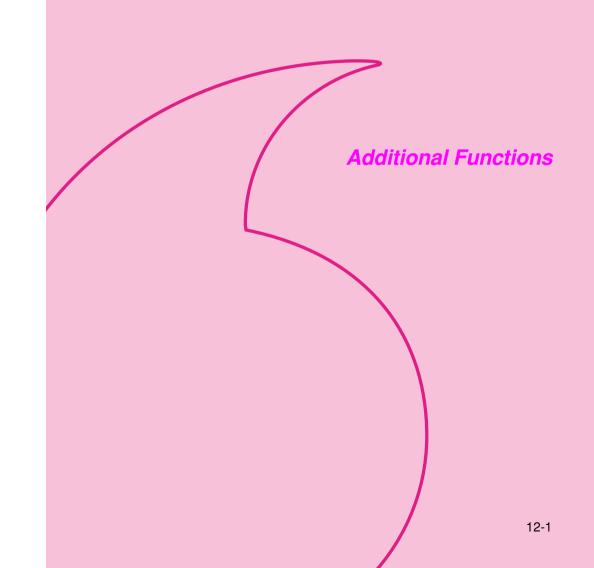

# **Handy Call Functions**

## **Signal Alert**

When Signal Alert is active, handset emits warning beeps when the signal is weak and the call may be disconnected. Signal Alert is Off by default.

Index Menu ► Functions → Settings 1 → Signal Alert

Choose **I**On and press •

To cancel Signal Alert, choose **□Off** → Press •



Even when Signal Alert is active, calls may be disconnected without warning.

## **Push Tones**

Use Push Tones to send alphanumeric messages to pagers or operate a home answering machine remotely.

#### From Phone Book

Use this function to send set messages to pagers.

- Save Push Tones to Phone Book first (see P.5-4).
- When saving Push Tones to Phone Book ( :), do not save other information to that entry.
- After a connection is established, press () (EE) to open Phone Book
- entry (see P.5-13) Press (•)
- Select Send All Push Tones and press (•)



Additional Functions

Enter P (Pause) in Push Tones to separate each sequence. To send following sequences, press P Send Tones for each.

#### **Direct Entry**

Press Keypad to send individual Push Tones during calls.

- After a connection is established, use Keypad to enter numbers
  - For more information, see the manual for the recipient device/corresponding service.
  - Use 0 9, #and # to send Push Tones.
- Press Press Send Tones

# **Side Key Settings**

## For Incoming Calls

Press S for 1+ seconds to activate the assigned function while ringing/vibrating. Available functions:

Hold	Place callers on hold
Quick Silent	Temporarily mute ringer for incoming calls
Reject Call	Reject and end the call
Message Recorder	Record caller messages on handset
Forward Voice Mail	Forward incoming calls to Voice Mail

Message Recorder is assigned by default.

Index Menu ► Functions → Settings 1 → SideKey Settings

Select Incoming Calls and press

Select a function and press

## Standby S

Press S for 1+ seconds to activate the assigned function in Standby. Available functions:

Details	Corresponding indicators appear on Sub Display for incoming communications
One-Shot Mail	Send a preset Sky Mail message to a specific recipient
Off	No function is assigned. (Sub Display backlight illuminates.)

Details is set by default.

Index Menu ► Functions ► Settings 1 ► SideKey Settings

Select Standby and press

Select a function and press To cancel, choose **■Off** → Press •



# **Message Recorder**

## **Activating**

Record caller messages on handset.

- Message Recorder cannot be used when handset is off, out-of-range or in Off-Line Mode. Use Voice Mail to record caller messages when Message Recorder is not available (see P.13-4).
- Record up to 90 seconds or 20 messages between Message Recorder. Voice Memo (see P.12-6) and My Voice Memo (see P.12-6).

Index Menu ► Tel Ops → Message Recorder

## Select **Recorder Settings** and press (•)

Remaining recording time appears and Message Recorder menu returns ( appears).

- To sample outgoing message, select **■Outgoing Message** → Press •
- To activate or mute Earpiece for outgoing message/caller message recordings, select ■ Volume Level → Press • → Select ■ Volume Level Link or ■ Silent → Press •

#### Message Recorder Disabled

- In Manner Mode, activate/deactivate Message Recorder via Manner Settings only.
- When less than 4 seconds remain or 20 messages are recorded. Message Recorder is disabled. Delete messages (see P.12-6) to activate Message Recorder.

#### **Answer Time**

Adjust ring time between 0 and 59 seconds (Message Recorder waits to answer calls). Answer Time is 09 seconds by default.

Press ● → Select Tel Ops → Press ● → Select Message Recorder → Press ● Select ■ Answer Time Press ● Enter time (00 - 59) Press (

- To start recording immediately after a call arrives, enter **00** → Press •
- When Message Recorder and Voice Mail or Call Forwarding are both active, the function with the shortest ring time takes priority. However, if Message Recorder is full, handset is in Off-Line Mode or out-of-range, incoming calls are handled by Voice Mail or Call Forwarding.

#### In-Car Recorder

Activate In-Car Recorder to automatically activate Message Recorder when In-Car Charger is in use. In-Car Recorder is active by default. To cancel this setting, follow these steps.

Press ● → Select *Tel Ops* → Press ● → Select **Z***Message Recorder* → Press ● Select □In-Car Recorder → Press • Choose □Off → Press •

#### When Message Recorder is Active

- For incoming calls, outgoing message plays and recording starts.
  - Recording continues even if handset is closed.
  - To answer calls, press during recording (no message will be recorded).
- If recording capacity becomes full (see P.12-4 "Message Recorder Disabled") after the recording. Message Recorder is deactivated and disappears. (A remains lit until the message is deleted.)

#### **Quick Recorder**

- Use Quick Recorder to record caller messages on handset when Message Recorder is inactive. When a call arrives, press ( ) ( ) to activate Quick Recorder, Outgoing message plays and caller's message is recorded.
  - Alternatively, set Side Key Settings for incoming calls (see P.12-3) to Message Recorder to activate Quick Recorder with Side Key. When a call arrives, press S for 1+ seconds. Outgoing message plays and caller's message is recorded.
- When recording capacity is full (see **P.12-4** "Message Recorder Disabled"), delete messages (see P.12-6) to activate Message Recorder.

## **Deactivating**

Index Menu ► Tel Ops → Message Recorder

Select **Recorder Settings** and press • Message Recorder is deactivated and menu returns ( disappears).

## **Playing Messages**

Tel Ops > Message Recorder

Select **□***Play* and press (•)

Number of recordings appears and playback starts from the most recent message. After all messages have played, playback ends and handset returns to Standby.

Press 🗟 to stop playback.

Message playback stops for incoming calls. Press 🗇 to answer the call.

Playback Operations (Example: 3 Messages are Recorded)

Skip the message	Replay the message	Play the previous message
Press Q during playback	Press	Press (5) twice during playback
No.3 No.2 No.1	No.3 No.2 No.1	No.3 No.2 No.1
— Playback → Playback →	— Playback → Playback →	Playback — Playback —

#### **Deleting Recorded Messages**

■ While message is playing, press 🍑 Choose 🛮 Yes 🕈 Press 💿

• The next message plays, if any. disappears after all messages are deleted.

## **Voice Memos**

Record the other party's voice (Voice Memo) during a call or your own (My Voice Memo) in Standby.

- For Voice Memo, only the other party's voice is recorded.
- Record up to 90 seconds between Voice Memo, My Voice Memo and Message Recorder (see P.12-4). When less than 3 seconds remain or 20 messages are recorded, messages cannot be recorded.
- 1 Recording Voice Memo

1 During a call, press ♣ for 1+ seconds

#### Recording My Voice Memo

In Standby, press for 1+ seconds Select My Voice Memo and press

- ? Recording starts
  - For My Voice Memo, talk to Microphone from the distance of 5 10 cm.
- 3 Press or ﷺ to stop recording



- If Close to End Call (see **P.2-3**) is active, calls and Voice Memo recordings end when handset is closed. The remaining recording time will not appear.
- My Voice Memo stops for incoming calls. Press keys for Anykey Answer (see P.2-6) to answer the call. (The recorded message is saved.)



- Recordings remain even after handset power is turned off.
- Refer to the description for Message Recorder on P.12-5 and above to play or delete Voice Memo/My Voice Memo.

## **Alarm**

## **Setting Alarm**

Set Alarm to sound at a specific time each day or on specific days of the week.

- Save up to 5 Alarm settings.
- Save a message or phone number to appear with Alarm. Customize Ring Time, Tone Volume, Alarm Tone, LED Indicator and Vibration.

Index Menu ► Functions → Clock → Alarm

- 1 Select a number and press
  - For a new entry, select -----
- 2 Select ■Input Time and press ●
- 3 Enter time and press
  - Apply 24-hour clock format.
  - To set Alarm Tones, Vibration, Snooze, etc., see P.12-9.
- 4 Select **■**Weekly and press •
- **5** Daily

■ Select ■ Daily and press ●

#### Specified Day of the Week

- Select Weekly and press ●
- 2 Select a day of the week and press

The day is set and **☑** appears.

- To cancel, highlight the selected day and press .
- 3 Repeat 2 to select more
- 4 Press Set when finished
- 6 Press Set when finished Alarm is set.
  - For more settings, repeat Steps 1 6.
- 7 Press 🗟 to exit

Handset returns to Standby and  ${\bf \triangle}$  appears.  ${\bf \bigcirc}$  (blue) appears in Alarm list when Schedule Alert (see **P.12-9**) is set.



Alarm Settings

#### At Alarm Time

Alarm is activated, sounding/vibrating, etc. according to related settings. Image appears if Display Images is set. However, SMAF file images take priority over Display Images.

#### **Stopping Alarm Tone**

- Press a or S.
  - Alternatively, press keys for Anykey Answer (see P.2-6).

#### Snooze

- Alarm repeats at the set interval.
  - Snooze is not canceled even when Alarm is stopped by pressing (2).
  - Accept incoming calls. After each call, press (a) to reactivate Snooze.
- To cancel Snooze after initial Alarm Time, press keys for Anykey Answer, choose ■ Yes and press •.
  - Snooze is canceled automatically 60 minutes after initial Alarm Time.

#### **Phone Number**

- While saved name or number appears, press to dial the number.
  - Cancel Snooze before dialing.
- Press (a) instead of (b) to close window without dialing.

#### Sending Advance Mail Message

- ■ Send Mail → Press • Press ▶ Send
  - Cancel Snooze before sending a message.



- While Alarm Message, Phone Number or Advance Mail appears, Alarm will not sound for other Alarm settings.
- If Alarm Time arrives during a call, no tone will sound. End the call to reactivate Alarm.



While **ALARM** appears on Sub Display, press S to show the saved message, number, etc. Press S again for 1+ seconds to return to Standby (except when Snooze is active).

## **Alarm Options**

- Follow these steps after Step 3 on P.12-7.
- After each setting. Alarm settings window returns. Complete other settings.

		iami settings window returns. Complete other settings.
Select a type ▶ Press ● ▶ Select a te		
		Select ■Sound → Press
Tone Volume		Set volume for Alarm Tone
		Select ■Sound → Press ● → Select ■Tone Volume → Press ● → Select a level with ② → Press ● → Press ④ ■ Back • No tone sounds when Silent is selected.
		Set ring time
Ring Time		Select <b>■Sound</b> → Press <b>③</b> → Select <b>■Ring Time</b> → Press <b>④</b> → Enter time (02 - 99 seconds) → Press <b>⑤</b> → Press <b>②</b> ■ Back
		Set Alarm to activate at set intervals after initial Alarm Time
Snooze		Select <b>Snooze</b> → Press <b>O</b> → Choose <b>IOn</b> → Press <b>O</b> → Enter interval (02 - 20 minutes) → Press <b>O</b> → Choose <b>EOff</b> → Press <b>O</b>
		Saved message appears at Alarm Time
ме	ssage	Select <b>⑤</b> <i>Message</i> → Press <b>⑥</b> → Enter message → Press <b>⑥</b>
		Set handset to vibrate at Alarm Time
Vibration		Select <b>②</b> Option Settings → Press ● → Select <b>③</b> Vibration → Press ● → Choose <b>⑤</b> On or <b>⑤</b> Off → Press ● → Press <b>⑤</b> ■ Back • Vibration Pattern is the same as that for incoming calls.
LE	D Indicator	Customize blink patterns
Select <b>Z</b> Option Settings → Press ● → Select <b>Z</b> LED I		Select <b>Z</b> Option Settings → Press ⊙ → Select <b>E</b> LED Indicator → Press ⊙ → Select <b>I</b> Mobile Light → Press ⊙ → Select a blink pattern → Press ⊙ → Press ⊙ <b>Back</b>
	Small Light	Select <b>Z</b> Option Settings → Press ⊙ → Select <b>E</b> LED Indicator → Press ⊙ → Select <b>E</b> Small Light → Press ⊙ → Select a blink pattern → Press ⊙ → Press ⊙ <b>E</b> Back
	Cancel	Select <b>Z</b> Option Settings → Press ● → Select <b>E</b> LED Indicator → Press ● → Choose <b>E</b> Off → Press ● → Press ④ Back
Schedule Alert		Set an Alert to announce upcoming Alarm Time beforehand
		Select <b>Z</b> Option Settings → Press ⊙ → Select <b>E</b> Schedule Alert → Press ⊙ → Choose <b>I</b> On → Press ⊙ → Enter time (02 - 99 minutes) → Press ⊙ → Press ⊙ → Press ⊙ → Press ⊙ → Select <b>E</b> Schedule
		Alert → Press   Choose   Off → Press   Press   Back

12-8

_
➣
0
$\overline{}$
≌.
母.
0
≍
≂
<u>a</u>
П
$\overline{}$
⊑
Ĕ
ction
Ctio

Phone Number	Saved phone number appears at Alarm Time
	Select <b>☑Option Settings</b> → Press ● → Select <b>및Phone Number</b> →
	Press ● ▶ Enter a phone number ▶ Press ● ▶ Press 夂 Back
	Dial the number after Alarm stops.
	• Phone Number and Advance Mail cannot be set at the same time.
	• To copy from Phone Book, press 🕒 (🖭) before entering a phone number.
Advance Mail	Saved outgoing mail appears at Alarm Time
	Select <b>ZOption Settings</b> → Press ● Select <b>EAdvance Mail</b> →
	Press ● → Select a message → Press ● → Press ● Back
	<ul> <li>To cancel, select a message and press</li></ul>
	<ul> <li>Advance Mail and Phone Number cannot be set at the same time.</li> </ul>

## **Canceling & Reactivating Alarm**

Cancel

Cancel Alarm and retain the settings

Index Menu ► Functions → Clock → Alarm → Select a number

Select **□**Cancel **→** Press **○** 

- 角 or 🗣 disappears.
- Reactivate Alarm to use the same settings.

**Delete** 

Delete Alarm settings

Index Menu ► Functions → Clock → Alarm → Select a number

Select **■** Delete **→** Press **●** 

Settings

Reactivate Alarm with the same settings, or change current settinas

Index Menu ► Functions → Clock → Alarm

Same Settings

Select a number → Press • → Select ■ Settings → Press • → Press Set

**Change Settings** 

Select a number → Press ● → Select **I**Settings → Press ● → Perform from Step 2 on P.12-7

## **Auto Power On/Off**

### **Auto Power On**

Use Auto Power On to activate handset power automatically at a specific time each day.

- Once set. Auto Power On remains active until canceled.
- Alarm can be set to sound for Auto Power On.
- Auto Power On is Off by default.

Index Menu ► Functions ► Clock ► Auto Power On Choose **II** On and press (•)

To cancel Auto Power On, choose **■Off** → Press (•) (Omit the next steps.)

- Select Elnput Time and press
- Enter time and press (•)
  - Apply 24-hour clock format.
  - To set Alarm, see P.12-12.
- Press (9) Set



Auto Power On Settings

Additional Functions

#### At Auto Power On Time

#### ■ When Handset is Off

Handset turns on. When Alarm is set, Alarm is activated, sounding/vibrating, etc. according to related settings.

Image appears if Display Images is set. However, SMAF file images take priority over Display Images.

#### ■ When Handset is On

When Alarm is set, Alarm is activated, sounding/vibrating, etc. according to related settings.



If Auto Power On Time arrives during a call, no tone will sound. Press (a) after the call to reactivate Alarm.



Press to stop Alarm. Alternatively, press sor keys for Anykey Answer (see P.2-6).

#### **Setting Alarm**

- Follow these steps after Step 3 on P.12-11.
- After each setting, Auto Power On settings window returns. Complete other settings.
- Activate Alarm (Set Alarm On) before setting other Alarm options.

Set Alarm		Activate Alarm at Auto Power On Time
Se	t Alailii	Select <b>■Set Alarm</b> → Press <b>①</b> → Choose <b>■On</b> or <b>■Off</b> → Press <b>①</b>
Alarm Tones		Set a tone to sound at Alarm Time
		Select <b>■</b> Alarm Tones → Press ● → Select a type → Press ● →
Aic	ariii rones	Select a tone ▶ Press ●
		• To select a tone, see procedures for Ring Tone (see <b>P.8-3</b> ).
		Set volume for Alarm Tone
Tone Volume		Select <b>■ Tone Volume</b> → Press <b>●</b> → Select a level with <b>♦</b> → Press <b>●</b>
		No tone sounds when <i>Silent</i> is selected.
		Set handset to vibrate at Auto Power On Time
Vik	oration	Select <b>□</b> Vibration → Press <b>①</b> → Choose <b>□</b> On or <b>□</b> Off → Press <b>①</b>
		Vibration Pattern is the same as that for incoming calls.
LED Indicator		Customize blink patterns
	Mobile Light	Select <b>Z</b> LED Indicator → Press ● → Select <b>I</b> Mobile Light →
		Press ● ➤ Select a blink pattern ➤ Press ●
	Small Light	Select <b>Z</b> LED Indicator → Press ● → Select <b>Z</b> Small Light → Press ●
		Select a blink pattern → Press ●
	Cancel	Select <b>ZLED Indicator</b> → Press ● → Choose <b>E</b> Off → Press ●
		Set ring time
Rir	ng Time	Select <b>□Ring Time</b> → Press <b>●</b> ★ Enter time (02 - 99 seconds) ★
		Press

#### **Auto Power Off**

Use Auto Power Off to deactivate handset power automatically at a specific time each day.

- Once set. Auto Power Off remains active until canceled.
- Auto Power Off is Off by default.

Index Menu ► Functions → Clock → Auto Power Off

- Choose  $\square On$  and press  $(\bullet)$ 
  - To cancel Auto Power Off, choose **□Off** → Press (•) (Omit the next step.)
- Enter time and press (•) Apply 24-hour clock format.

#### At Auto Power Off Time

Handset power turns off.

- When handset is in use, a confirmation appears (after operation if the time arrives during a call).
- Handset power turns off after a minute of inactivity. Alternatively, choose Yes and press ●. Unsaved data will be deleted.
- Choose **E**No and press to cancel Auto Power Off.
- Even if there are messages saved as Auto Send, handset power turns off without confirmation.

## **Schedule**

Enter upcoming events with dates and times. Save general plans as Action Items. Save up to 150 Schedule entries (up to 20 entries per day) and 50 Action Items.

## **Saving Entries**

#### **Saving Schedule Entries**

Briefcase 

◆ Schedule

- Press [자汉]
  - Press (Calendar to select date from Calendar.
- Enter date and time and press
  - Enter 4 digits for year, 2 digits for month and day each, and apply 24-hour clock format for time.
  - Date and time are mandatory.
- Select **Stamp Selection** and press •
- Select a stamp and press
- Select **Schedule** and press
- Enter text and press (•)
  - Enter up to 120 single-byte characters.
  - Set Alarm (see P.12-14) and Option Settings (see P.12-16).
- Press Q Set when finished
  - Repeat Steps 1 7 to enter more entries.
  - The scheduled date is underlined. Stamp appears if set.



Schedule Window

15:05 Schedule [2005/09/20 18:30 Complete ■Enter Date & Time ■Stamp Selection **Schedule** ■ **⊡**Set Alarm ■Option Settings

Schedule Settings

#### On Scheduled Day

[3] (Alarm is set) or [3] (Alarm is not set) appears. (They will disappear after Schedule

#### **Saving Action Items**

Index Menu ► Briefcase ► Schedule

- Press 🕦
- Enter text and press
  - Enter up to 120 single-byte characters.
- Select EStamp Selection and press
- Select a stamp and press
  - Set Option Settings (see P.12-16).
- - Repeat Steps 1 5 to enter more entries.



Action Item Settings

## **Setting Alarm**

Alarm

Set Alarm to sound at Schedule Time

In Schedule settings window (see Step 6 on P.12-13), select Set Alarm

- Press Choose On Press ●
- Set Alarm window opens. For more, see P.12-15 "Alarm Options."

- Follow these steps after opening Set Alarm window for Schedule.
- After each setting, Set Alarm window returns.

		Set a tone to sound at Alarm Time
	_	Select <b>■</b> Sound <b>→</b> Press <b>● →</b> Select <b>■</b> Alarm Tones <b>→</b> Press <b>●</b>
Ala	arm Tones	Select a type → Press ● → Select a tone → Press ● → Press ② ■ Back
		• To select a tone, see procedures for Ring Tone (see <b>P.8-3</b> ).
		Set volume for Alarm Tone
Tone Volume		Select <b>■Sound</b> → Press • Select <b>■Tone Volume</b> → Press •
		Select a level with ◊ → Press ● Press ♀ Back
		No tone sounds when <i>Silent</i> is selected.
		Set ring time
Ri	ng Time	Select <b>■</b> Sound <b>→</b> Press <b>● →</b> Select <b>■</b> Ring Time <b>→</b> Press <b>● →</b>
		Enter time (02 - 99 seconds) → Press ● Press ● Back
		Set Alarm to activate at set intervals after initial Alarm Time
Sn	ooze	Select <b>□</b> Snooze → Press <b>①</b> → Choose <b>□</b> On → Press <b>①</b> → Enter
٠	0020	interval (02 - 20 minutes) ▶ Press ●
		To cancel, select <b>□</b> Snooze  Press  Choose <b>□</b> Off  Press      To cancel, select □Snooze  Press
		Set handset to vibrate at Alarm Time
Vik	oration	Select <b>■</b> Option Settings → Press • Select <b>■</b> Vibration → Press •
		Choose ■On or ■Off → Press ● Press ● Back
		Vibration Pattern is the same as that for incoming calls.
LE	D Indicator	Customize blink patterns
		Select <b>■Option Settings</b> → Press • Select <b>■LED Indicator</b> →
	Mobile Light	Press ● Select <b>Mobile Light</b> → Press ● Select a blink
		pattern → Press ⊙ → Press ⊙ Back
	Small Light	Select <b>□Option Settings</b> → Press ⊙ → Select <b>□LED Indicator</b> →
		Press ● → Select <b>2</b> Small Light → Press ● → Select a blink pattern
		→ Press ⊙ → Press ⊙ Back
	Cancel	Select <b>■Option Settings</b> → Press • → Select <b>■LED Indicator</b> →
		Press   Press
Schedule Alert		Set an Alert to announce upcoming Alarm Time beforehand
		Select <b>■Option Settings</b> → Press • → Select <b>■Schedule Alert</b> →
		Press Select from Minutes to Months Press Free Press P
		amount of time (5 minutes, 1 week, etc.) → Press ⊙ → Press ⊘ Back • To cancel, select <b>② Option Settings</b> → Press ⊙ → Select <b>② Schedule</b>
		Alert → Press ⊙ → Choose ■Off → Press ⊙ → Press ⊙ ■ Back
		Alert 4 Tiess & 4 Choose Don 4 Tiess & 4 Tiess & Dack

#### At Schedule Alarm Time

When Alarm is set, Alarm is activated, sounding/vibrating, etc. according to related settings.

- Image appears if Display Images is set. However, SMAF file images take priority over
- For stopping Alarm Tone, dialing numbers, sending Advance Mail and canceling Snooze, see P.12-8.



If Alarm Time arrives during a call, no tone will sound. Press after the call to reactivate Alarm.



While **ALARM** appears on Sub Display, press S to show the saved message, number, etc. Press S again for 1+ seconds to return to Standby (except when Snooze is active).

## **Schedule & Action Item Options**

- Follow these steps after Step 6 on P.12-13 (Schedule) or Step 4 on P.12-14 (Action Item).
- After each setting, Schedule settings window or Action Item settings window returns. Complete other settings.

Attach Image (Schedule only)	Set an image to appear at Schedule Time
	Select <b>⑤</b> Option Settings → Press ⑥ → Select <b>⑤</b> Attach Image → Press ⑥ → Select <b>⑤</b> Data Folder → Press ⑥ → Select a folder → Press ⑥ → Select an image → Press ⑥ → Press ⑥ → Back • To cancel, select <b>⑤</b> Option Settings → Press ⑥ → Select <b>⑥</b> Attach Image or record video.
Phone Number (Schedule only)	Saved phone number appears at Schedule Time  Select □ Option Settings → Press ○ → Select □ Phone Number → Press ○ → Enter a phone number → Press ○ → Press ○ → Press ○ → Back  • Dial the number after Alarm stops.  • Phone Number and Advance Mail cannot be set at the same time.  • To copy from Phone Book, press ○ (FEI) before entering a phone number.
Advance Mail (Schedule only)	Saved outgoing mail appears at Schedule Time  Select ■ Option Settings → Press ● Select ■ Advance Mail → Press ● Select a message → Press ● Press ● Press ● Back  • To cancel, select a message and press ● Cancel → Press ● Back  • Advance Mail and Phone Number cannot be set at the same time.

Date Color (Schedule only)	Set Calendar date color
	Select <b>□Option Settings</b> → Press <b>○</b> → Select <b>□Date Color</b> → Press <b>○</b> → Select a color → Press <b>○</b> → Press <b>○</b> ■ Back • Colors do not appear in 1-Week view (see below).
	<ul> <li>When multiple entries are saved for the date, setting for the earliest applies.</li> </ul>
	Protect entries from Auto Delete
Auto Protect	Select <i>Option Settings</i> → Press ● → Select <i>Auto Protect</i> → Press ● → Choose ■ <i>On</i> (protect) or ■ <i>Off</i> (cancel) → Press ● → Press ④ ■ Back • When Auto Delete is <i>Off</i> , entries are protected automatically regardless of this setting.
	Show or hide entries in Standby
	Select <i>Option Settings</i> → Press ● Select <i>Standby Display</i> →
Standby Display	Press ● → Choose <b>■</b> On or <b>■</b> Off → Press ● → Press <b>②</b> Back
	<ul> <li>The setting is effective when Clock Display is set to Calendar (see P.7-3). For Action Item, set Calendar type to Schedule &amp; Stamps.</li> </ul>

## **Opening Entries**

Index Menu ► Briefcase ► Schedule

#### Schedule Entries

1 Select a date and press 2 Select an entry and press •

#### Action Items

Press Q View until Action Item window opens

2 Select an entry and press •

To delete an entry, select one ▶ Press 🔊 Menu ▶ Select **■ Delete Item** → Press • Choose **■ Yes** → Press •

Press (2) Back to end



- Press → Select Briefcase → Press → Select Schedule → Press → Press Q View
  - Press Q View to toggle between Action Item, 1-Week, 1-Month, All and Day Detail/Stamps.
- To select the types of view that toggle, follow these steps.

Press ● Select Briefcase Press ● Select 

Schedule Press ● Press ● Press <a>Press <a Press ● Select a type\* → Press ② Check → (Select another type → Press (②) **▶** Press (●) \*Select ☐ to check and select ☑ to uncheck.

Bring a gift!

2005/09/26(Mon)

# Additional Functions

## Delete All Delete all past Schedule entries or all entries Index Menu ► Briefcase ► Schedule ► Menu (🔊) ► Delete All Select ■ Past Schedules. ■ Schedules or ■ Action Items → Press • Select ■ Select All or ■ Unprotected > Press ● Enter Security Code **→** Choose **■** Yes **→** Press **⊙ Other Schedule Settings** Delete the oldest unprotected Schedule or Action Item entries **Auto Delete** automatically when memory is full Default Off ndex Menu ► Briefcase ► Schedule ► Menu (🖎) ► Auto Delete Select ■Schedule or ■Action Item > Press • > Select ■Auto Delete On or ■Auto Delete Off → Press • Security Code must be entered to save and check Secret Mode Schedule/Action Item entries Index Menu ► Briefcase ► Schedule **Activating** Press Security Code → Choose **□**On → Press **⊙** Cancelina Enter Security Code → Press 🔊 Menu → Select 🗉 Secret Mode → Press ● Description Press Pre **Set Color** Change color for days of the week Index Menu ► Briefcase ► Schedule ► Menu (►) ► Set Color Select a day → Press (•) → Select a color → Press (•) Change view View Index Menu ► Briefcase → Schedule → Menu (🕒) Select from **□** Day Detail/Stamps to **□** All **→** Press **○ Event List** Check the number of saved entries

Index Menu ► Briefcase ► Schedule ► Menu (►)

Select **Event List** → Press (•)

## **Schedule Display for Standby**

- To view Schedule entries in Standby, set Standby Display (see **P.12-17**) in Option Settings to *On*.
- Show or hide Schedule/Action Item details as follows:

## **Editing Entries**

Index Menu ► Briefcase ► Schedule

1 Schedule Entries

■ Select a date and press 
●

**Action Items** 

1 Press View until Action Item window opens

- Select an entry and press Menu
- 3 Select Edit and press
- 4 Select an item and press
  - For details, see procedures for saving Schedule/Action Item.
- 5 When finished editing, press 9 Set
- 6 Select ■New Entry or ■Overwrite and press ●

Menu (♠) → Delete Item

## **Deleting Entries**

Delete Item

Delete one entry

▶ Briefcase ▶ Schedule ▶ Select a date ▶ Select an entry ▶

Choose **■** Yes **●** Press **●** 

• For Action Items, see Step 1 on P.12-17.

One Day
Schedules

Delete the day's Schedule entries

Index Menu

Briefcase 
Schedule 
Select a date 
Menu

Menu

Delete All

Select **②**One Day Schedules → Press **③** → Select **③**Select All or **②**Unprotected → Press **④** → Enter Security Code → Choose **③**Yes → Press **⑥** 

12-18

# **Useful Diary**

Keep a diary with photos or video.

- Save up to 400 entries (500 single-byte characters each).
- When memory is full, delete entries to make room for new ones (see P.12-22).

## **Saving Entries**

ndex Menu ► Functions → Clock → Useful Diary

Select **New Diary** and press (•)

Useful Diary window for the day opens.

- To specify other dates, select **□** Date → Press Finter date → Press •
- When saving a still image or video only, skip ahead to Step 4.
- Select 

  Message and press
- Enter text and press
  - When saving text only, skip ahead to Step 6.
  - To use Fixed Text, press ② Text → Select a type → Press ⊙ twice
  - Fixed Text cannot be entered after entering characters.
- Select Elmage Setting and press (•)
- Capturing Still Image/Recording Video
  - 1 Select Camera and press
  - 2 Select a mode and press (•)
  - 3 Capture an image or record video and save it

#### Selecting from Data Folder

- Select Data Folder and press ●
- 2 Select a still image or video and press ●
- Some files cannot be selected.

#### Cancelina

Additional Functions

- Select Cancel and press ●
- Press Q Set
  - To create more entries, press <a> Menu</a> <a> Select</a> <a> Create</a> <a> Press</a> <a> Enter date</a> Press ● Repeat Steps 2 - 6

#### **Editing/Deleting Fixed Text**

- To edit Fixed Text, press (2) Text in Step 3 on P.12-20 and follow these steps. Select Fixed Text → Press Press ● Description Press ● Press
  - Fixed Text is overwritten.
- To delete single Fixed Text, press Q Text in Step 3 on P.12-20 and follow these

Select Fixed Text → Press 🔊 Menu → Select 🗉 Delete Item → Press • → Choose ■ Yes → Press •

- Default Fixed Text returns when edited Fixed Text is deleted.
- To delete all Fixed Text, press (2) Text in Step 3 on P.12-20 and follow these

Press P Menu Select Delete All Press Pres Choose **■** Yes **→** Press **⊙** 

■ Default Fixed Text returns when edited Fixed Text is deleted.

#### Secret Mode (Restrict Access to Useful Diary)

■ To activate Secret Mode, follow these steps in Step 1 on P.12-20.

Select ■ Secret Mode → Press • Finter Security Code → Choose ■ On →

- From the next time, Security Code must be entered to use Useful Diary.
- To cancel Secret Mode, enter Security Code in Step 1 on **P.12-20** and follow these

Select ■ Secret Mode → Press • Finter Security Code → Choose ■ Off → Press (•)

## **Opening Entries**

Index Menu ► Functions → Clock → Useful Diarv

Select **□***Diary List* and press (•) Entries appear most recent first.

- Select an entry and press (•)
  - To open saved still image, press 🔾 Show
  - Press ② Back to return.
  - To play saved video, press 
    Play
    - Press Stop to return.

Index Menu ► Functions → Clock → Useful Diary → Diary List

Select an entry and press Q Mail

• For entries without still image, skip ahead to Step 3.

Choose **T** Yes and press •

• Some images may not be attached.

• Skip ahead to Step 4.

To send text only, choose **□No** → Press • Proceed to Step 3

If the image is too large, select **■** Attach 1/4 Size or **■** Attach Original **→** Press **● →** Skip ahead to Step 4

Select **\Pi**Long Mail or **\Pi**Sky Mail and press **(a)** • For **ESky Mail**, text exceeding the character limit is lost.

Complete other fields and send mail (see OP.3-3)

**Editing Entries** 

► Functions → Clock → Useful Diary → Diary List → Open an entry → Menu (P)

Select Edit and press

Select an item and press (•)

• For details, see procedures for saving Useful Diary.

When finished editing, press Set

**Deleting Entries** 

**Delete Item** Delete one entry

Functions → Clock → Useful Diary → Diary List → Select an entry Menu (♠) → Delete Item

Choose **■** Yes **→** Press **⊙** 

Delete All

Delete all past entries or all entries

Index Menu ► Functions → Clock → Useful Diary → Diary List → Menu (🔊)

Select ■ Delete All or ■ Delete All Past → Press • → Enter Security Code **→** Choose **■** Yes **→** Press **⊙** 

# **Stopwatch**

Record elapsed time for up to 24 hours (23 hours 59 minutes 59.9 seconds) in 0.1-second increments. Use lap time feature to segment elapsed time.

• Save times (including the last five lap times) to Text Memo.

Stopwatch ends when battery level is low.

Index Menu ► Functions → Clock → Stopwatch

Press (•)

Stopwatch starts.

To record Lap times, press 🔊 Lap

Press (•) to stop

The last five Lap times are recorded. The records are deleted when Stopwatch is canceled.

To save the records to Text Memo, press 🔊 Menu 🖈 Select 🗖 Save Text Memo 🖈 Press ● Select a number → Press ●

■ To overwrite saved record/entry, choose **T** Yes **P** Press **O** 

To check saved records, press <a> ■ ■ Select</a> <a> ■ Select</a> <a> ■ Select</a> <a> ■ Esee Text Memo</a> <a> ■ Press</a> <a> ■ Select a number → Press •

Press (•) to resume Stopwatch.

Press Q Reset to clear the record.

Press 😭 or 🦭 to exit

When Stopwatch is running or paused, choose **■ Yes** Press •



Records are deleted when Stopwatch is canceled. Save records to Text Memo.

• Stopwatch is not affected by incoming calls. Press after the call to return to Stopwatch.

• Alarm (see P.12-8) is disabled while Stopwatch window is open, and starts when handset returns to Standby.

Count continues even if handset is closed. (TIME!) flashes on Sub Display.)

Additional Functions

12-22

## **Kitchen Timer**

Set Kitchen Timer up to 60 minutes in 1-second increments. Tone sounds when set time elapses.

Index Menu ► Functions → Clock → Kitchen Timer

Enter time (00:01 - 60:00)

• Use • to move cursor and correct the number.

Press (•)

• When times over 60 minutes (60:00) are entered, the last set time returns.

To change time, press ♠ Edit → Enter time → Press •

Press (•)

Countdown starts.

Press (•) to stop

Press 

to resume.

Press Q Reset to return to the set time.

Press 🖨 or 🦭 to exit

When Kitchen Timer is running or paused, choose **■ Yes →** Press **●** 

#### Kitchen Timer End

**Timer End** appears, Tone sounds and LED Indicator flashes, (Tone is fixed to Pattern 1. Volume and LED Indicator depend on the settings for Sound Volume and Set LED to Sound respectively. Vibration is Off.)

• Tone stops automatically after 60 seconds. Press • to stop manually.

• In Manner Mode, handset vibrates. (Vibration Pattern is Vibration 1. Volume and LED Indicator depend on Manner Settings.)

• Tone and Vibration Pattern cannot be changed.

When the set timer time has elapsed during a call, *Timer End* appears after a is pressed to end the call.



• Countdown is not affected by incoming calls. Press (a) after the call to return to Kitchen Timer window.

• Press 🕏 for 1+ seconds to activate or cancel Manner Mode.

• Alarm (see P.12-8) is disabled while Kitchen Timer window is open, and starts when handset returns to Standby.

• Count continues even if handset is closed. (TIMER ) flashes on Sub Display.)

## **Barcode**

Scan barcodes created on handset or downloaded via Web or Long Mail.

- Scan UPC (JAN) or QR Codes. Handset automatically detects code type and reads code data.
- Barcodes cannot be scanned with mobile camera.



• UPC (Universal Product Code) or JAN (Japanese Article Number) is a series of varying width vertical lines (called bars) and spaces. Bars and spaces together are elements, combinations of which represent different numbers. Handset cannot read other one-dimensional barcodes (ITF Code, Code39, Codabar/NW-7, etc.).

• QR (Quick Response) Code is a matrix symbology consisting of an array of nominally square cells. It allows omni-directional reading of up to 7,366 characters-numeric, alphanumeric, byte data as well as kanji and kana.

QR Code is a registered trademark of DENSO WAVE INCORPORATED.

Index Menu ► My Files ► Data Folder

Select *Images* and press (•)

To open files in sub folders, select a folder ▶ Press •

Select a barcode image and press 🔊 Menu

Select Barcode Reader and press

Select **I**Scan Code and press •

Scan results appear.

Using Scan Results: see P.12-26

#### Split Data

■ Split Data Scan next Symbol? appears.

To continue, choose **1** Yes **→** Press **(•) →** Select next code **→** Press **(•)** To cancel, choose **■***No* **→** Press **● →** Choose **■** *Yes* **→** Press **●** 

Data will not be saved until all split data is scanned.

The scanning status appears on the first line of Display. For example, M indicates that 1 of 4 codes has been scanned.

#### Font & Image Size

While scan results appear, press ♠ Menu ♦ Select Display Size ♦ Press • Select a size ⇒ Press ⊙

• Medium Font/100% is set by default.

• Alternatively, press to toggle between *Medium Font/200%*, *Small Font/100%*, Small Font/200%, Large Font/100%, Large Font/200% and Medium Font/100%. (**□** appears for 100% and **□** for 200%.)

■ The changes do not affect the settings for received/sent messages or Web.

Additional Functions

Additional Functions

- Resized QR Codes may be invalid.
- For invalid codes. *Error This data may be Incorrect* appears.

#### Using Scan Results

Place Calls <sup>1</sup>	Select a number starting with <i>TEL</i> . <sup>2</sup> → Press ⊙ → Select → <i>Call</i> → Press ⊙ → Press ⊙
Send Mail <sup>3</sup>	Select a mail address including @ → Press ● → Select → Send Mail → Press ● → Select ■ Send Long Mail or ■ Send Sky Mail → Press ● (See ○ P.3-3 for more.)
Quote & Send Mail	Press → Select Send Mail → Press → Select  Send Long Mail or □Send Sky Mail → Press → Scan results  appear → Press →  To use a part of text, press → Highlight the first character  of the text block to copy → Press → Highlight the text block →  Press → (See → P.3-3 for more.)
Save to Phone Book <sup>1, 3</sup>	Select a number starting with <i>TEL</i> . <sup>2</sup> or a mail address including @ ▶ Press ● ▶ Select → <i>Add to Phone Book</i> ▶ Press ● (See Step 4 on P.5-8 for more.)
Access Mobile Internet Sites <sup>4</sup>	Select a URL starting with <i>http://</i> → Press ● → Select → <i>Open Link</i> → Press ● → Perform Step ② in "URLs" on ③ P.4-8
Save to Data Folder (Images & Melodies)	Select an image or melody file → Press ● → Select <i>To Data Folder</i> → Press ● → Check file name → Press ●
Copy Text	Press → Select Copy → Press → Highlight the first character of the text block to copy → Press → Highlight the text block → Press → Paste the copied text into a text entry window.

<sup>&</sup>lt;sup>1</sup>Available when text is in *TEL:*# format.

#### **MEMORY:** or **MAILTO**:

- When **MEMORY**: or **MAILTO**: appears in scan results, press to save text underlined with a dotted line to Phone Book or send it via Sky/Long Mail.
  - All underlined items are entered. However, text after an invalid character is not underlined and is not copied.



## **Create QR Codes**

Create QR Codes from Owner Profile, Phone Book, Mail, Text Memo. Melodies or Images.

- Use saved contents or enter new contents for a QR Code.
- Save up to the equivalent of 469 digits or 120 kanii per QR Code.
- Large items up to 3.416 bytes are divided into maximum of 16 QR Codes.
- Created QR Codes are saved to Data Folder (Images). See P.9-3 for more about Data Folder.
- Open a file or entry and press ( Menu or )
  - For mail, select a message in Mail Box.
  - For image files in Data Folder, select a file Press 🔊 Menu Select ■Barcode Reader → Press ● Select ■Create QR Code → Press • Choose **1** Yes → Press • twice (Omit the next steps.)
    - Create OR Code Window (Phone Book)

**Bytes Used** 

Create QR Code Phone Book

♣:Ueda Mikio :Ueda Mikio

☎:03123XXXX3

**本**:<Unsaved> aaa@xxx.vvv

e :<Unsaved> :<Unsaved> □Cancel □ Select Create

Number of Codes

Code Limit

82/3416(

Total Bytes

- For melody files in Data Folder, select a file Press P Menu P Select Create QR **Code** → Press • Press • Press • Press • twice (Omit the next steps.)
  - Create QR Codes from E-Animation in the same manner as above.
- When *Format?* appears, select a format → Press → Choose **1** Yes → Press twice (Omit the next steps.)
- Select *Create QR Code* and press (•)

Create QR Code window for each item opens.

To add text or attachments, select a field → Press ● → Enter contents → Press ●

Press P Create

Press 

O

#### **Attaching to Long Mail**

■ Before pressing • to save in Step 4, press 🔊 Menu • Select ■ Attachment Press ● Perform from Step 2 on ● P.3-3

#### **Deleting Created QR Codes**

■ Before pressing • to save in Step 4, press 🔊 Menu • Select 🖻 Delete • Press ● Press

#### **Incoming Calls while Creating**

Contents are temporarily saved. To return, end the call and follow these steps. Press ● Press ● Press ●

12-26

<sup>&</sup>lt;sup>2</sup>Text strings of 10 to 24 digits starting with 0 are also recognized as phone numbers.

<sup>&</sup>lt;sup>3</sup>Available when text is in *¥@¥* format.

<sup>&</sup>lt;sup>4</sup>Available when text is in *http://*\* format.

<sup>#</sup>represents one or more alphanumerics.

# **Battery Saving**

## **Power Saving**

Use Power Saving to reduce transmission signal strength.

- When Power Saving is active, other parties may not be able to hear you at the beginning of a call.
- Power Saving is active by default.

Index Menu ► Functions ► Settings 1 ► Battery Saving ► Power Saving

**1** Choose **■** On and press **●** 

To cancel Power Saving, choose **□Off** → Press •

## **Panel Saving**

Use Panel Saving to place handset in hibernation mode after a period of inactivity. This will extend Battery Time. Period of inactivity can be specified between 2 and 20 minutes.

Handset may not enter Panel Saving mode depending on its status, such as during calls or when using Vodafone live!.

#### **Setting Panel Saving**

Handset enters Panel Saving mode after five minutes of inactivity by default.

Index Menu ► Functions → Settings 1 → Battery Saving → Panel Saving → On/Off

**1** Choose **■** On and press **●** 

## 2 Enter time (02 - 20 minutes) and press

#### **Panel Saving Mode**

- After a period of inactivity, Display shuts down automatically.
- Pressing a key or receiving a call cancels Panel Saving mode (cancel Panel Saving mode first for Keypad operations).
- If handset is closed in Panel Saving mode, the sound for **Power On** in Sound Effects settings (see **P.8-5**) rings. Open handset to cancel Panel Saving mode.

Battery is consumed faster when Panel Saving is *Off*. More handset power is consumed with **B***Off* (*Light Low*).

Tip

Set shorter time to extend Battery Time.

#### Flash Small Light (Orange)

Small Light does not flash in Panel Saving mode by default.

Index Menu 

Functions 

Settings 1 

Battery Saving 

Panel Saving 

LED Indicator

## **1** Select **■***LED Indicator On* and press **●**

To cancel, select **□LED Indicator Off** → Press •

Tip

In Off-Line Mode, Small Light flashes regardless of this setting.

## **Calculator**

Use Calculator for basic arithmetic, percentage, and tax calculation.

• Key Assignments:

, ,			
+ (Add)	•	RM (Recall Memory)	攻す
- (Subtract)	<u>•</u>	M+ (Add Memory)	
x (Multiply)	8	. (Decimal)	******
÷ (Divide)	<b>②</b>	+/- (Switch)	#129
= (Equal)	•	% (Percent)	9
C•CE (Clear)	DIJP	TAX (Tax)	Ð
CM (Clear Memory)	スケジュール		



Tax rate is 5% by default.

Index Menu ► Functions → Settings 2

## ¶ Select ■ Calculator and press ●

- Use Keypad to enter digits, and the above keys for calculation.
- Alternatively, in Standby, enter any number, then press 

  to open Calculator.
- To change tax rate, enter rate (01 99%) → Press (1) (Long Press)

## Press 🗟 to end

12

Additional Functions

ditional Function

#### **Saved Information**

Copy calculation results or numbers saved in Memory to text entry windows.

In a text entry window, press ♠ Menu ♦ Press ♠ Saved Info ♦ Press ♠

- Select ■Calculator → Press Select an entry → Press Move cursor to target location → Press •
- The last 10 calculation results are saved.



- Incoming calls clear entered numbers and results. However, numbers saved in Memory are not affected.
- Press to clear Memory before starting Memory calculations.
- Numbers saved in Memory remain even if Calculator is closed, but are cleared when handset power is turned off.

# **Spending Memo**

Use Spending Memo to add expenses, such as travel expenses.

- Enter up to 31 entries (up to 30,999,969 yen in total, 999,999 yen per entry).
- Spending Memo cannot be opened during a call.

Entry

Enter monetary figure

Enter amount → Press 🍑 → Select a category → Press •

- The entry date and time is automatically saved.
- If Clock is unset (see P.1-20), entry date and time will be saved as --/-- --:--.

Totals

Check entries

Index Menu ► Functions ► Settings 2 ► Spending Memo

Select **■** Totals **→** Press **●** 

Use (\$\tilde{\circ}\) to scroll through entries.

**Delete** 

Delete entries

Index Menu ► Functions ► Settings 2 ► Spending Memo ► Totals

Press ● Press Press ● Choose **1** Yes **Press** ●

**New Item** 

Rename categories

Index Menu ► Functions ► Settings 2 ► Spending Memo ► New Item

Select a category → Press • → Edit → Press •

- Enter up to 6 single-byte characters.
- Clear the name and press (a). Default name returns.

# **Pen Liaht**

Use handset as a flashlight.

Illuminate

Illuminate Pen Light

In Standby, double-press S

To turn off, press S, @ or .

en Light Settings Change Lighting Time

Default Lighting Time: 1 Minute

Index Menu ► Briefcase → Pen Light

Select **□***Lighting Time* **→** Press **● →** Select time **→** Press **●** 



- Do not point Pen Light at people or look at it directly.
- Pen light cannot be used when:
- Mobile camera is active
- During calls
- Calling/sending
- Receiving calls/info
- Key Guard is set
- Receiving mail
- Stopwatch is active
- Playing melodies
- Keypad Lock is set
- SMAF file is active
- Kitchen Timer is active
- Playing Action Snap files



- Pen Light goes off and Display Backlight illuminates for incoming calls, messages,
- Pen Light goes off and Display Backlight illuminates for incoming calls, messages,
- Backlight illuminates after Lighting Time when a V-Application is active and Backlight in V-Appli Settings (see OP.12-2) is Always Active.
- When handset is closed, opening handset turns off Pen Light.
- Select shorter Lighting Time to extend Battery Time.

## **Initiating Calls**

Use Call Button on headphones (optional accessory) to call the number saved in Memory Number 000 (see P.5-5).

- Connect headphones to handset
- Press Call Button for 1+ seconds until a double beep sounds The number is dialed.
- Press Call Button for 1+ seconds until a beep sounds Call ends. Alternatively, press (a) to disconnect call.
  - Closing handset does not end the call.



- If Memory Number 000 is a Secret Mode entry, activate Secret Mode to call it (see
- Cancel Keypad Lock and Phone Book Lock to place calls (see P.11-2 11-3).
- Do not wrap cord around handset or Antenna. This may cause malfunction. Noise interference occurs if cord is close to Internal Antenna.
- Plug in headphones firmly. If not, sounds may not be heard.

## **Answering Calls**

Connect headphones to handset Ring Tone sounds from headphones only or from both headphones and handset speaker depending on the setting (see P.12-33).

- Press Call Button for 1+ seconds to answer a call
- Press Call Button for 1+ seconds until a beep sounds Call ends. Alternatively, press (a) to disconnect call.
  - Closing handset does not end the call.

## **Ringer Out**

When headphones are connected to handset, Ring Tone sounds from headphones and handset speaker.

To disable speaker, follow these steps.

Earphone/Speaker is set by default.

Index Menu ► Functions → Sounds → Ringer Out

## Select **Earphone** and press •

To use headphones and speaker, select **□ Earphone/Speaker** → Press •



Even if *Earphone* is selected, Ring Tone sounds from speaker when headphones are not connected.

## **Fax & PC Transmissions**

**Transmissions** 

Use handset for fax transmissions via data/fax card

#### Connect a data/fax card

• FAX COM. appears during G3 FAX transmissions.

C Transmissions Use handset for PC transmissions via data/fax card

#### Connect a data/fax card


• MODEM COM. appears during PC transmissions.



Use handset for fax or PC transmissions only when signal conditions are stable.



- Sign-in window may differ by data/fax card.
- Handset supports 9,600 bps high-speed data transmissions.
- To connect data/fax cards to fax machines or PCs, see the manuals for the device.

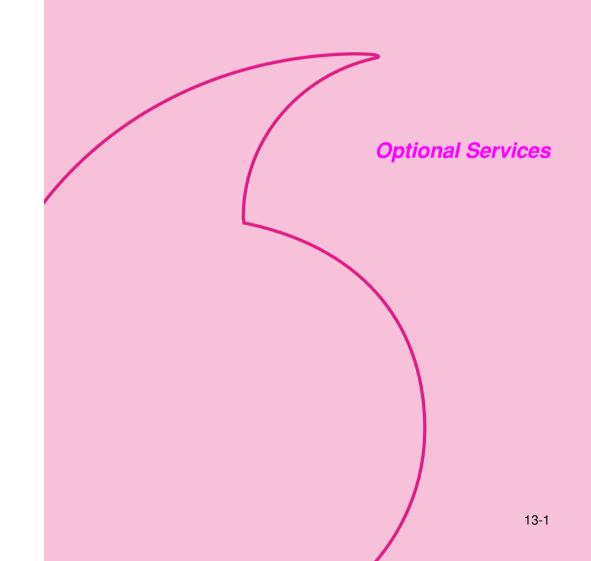

# **Optional Services Overview**

- When handset is out-of-range or outside your subscription area, access Optional Services from a touch-tone landline.
- For details, contact Vodafone Customer Center, General Information (see P.14-20).

Call Forwarding	When you know you will be unable to receive calls to your handset, use Call Forwarding to automatically transfer calls to another phone number (see <b>P.13-3</b> )
Voice Mail*	Unanswered calls are forwarded to Voice Mail. Retrieve caller messages from handset or any touch-tone phone, anytime. Voice Mail indicator appears on handset after message is recorded (see <b>P.13-4</b> ).
Call Waiting*	Call Waiting alerts you to incoming calls when the line is already engaged.  After the tone, place the current call on hold and answer the second, or alternate between calls (see <b>P.13-6</b> ).
3 Way Calling*	Open a second line while the first is engaged. Switch back and forth between two lines or talk on both simultaneously. Create a conference call by adding another party to an existing conversation (see <b>P.13-7</b> ).
Caller ID*	Use Caller ID to identify callers before answering. Show or hide your own phone number when placing calls. When no Caller ID is sent, the reason appears.

<sup>\*</sup>An additional contract is required.

## **Call Forwarding**

- Call Forwarding and Voice Mail cannot be used at the same time.
- Activating Call Forwarding cancels Voice Mail.

Set Fwd Number

Save a forwarding number

Functions → Services → Call Forwarding → Set Fwd Number

#### Enter a phone number ▶ Press ●

Saved number appears following Connecting to Network....

• Include the area code for landline phone numbers.



#### Phone Numbers Beginning with the Following Numbers Cannot be Saved:

- 1 (Public Service Numbers: 110, 119, 118, etc.)
- 0120 (Toll-free numbers)
- 0990 (Fee-based services: Dial Q2, etc.)

Start Fwd

Initiate Call Forwarding

Save a forwarding number beforehand.

Index Menu ► Functions ► Services ► Call Forwarding ► Start Fwd

#### Select **Call** (handset rings/vibrates before forwarding calls) or **□**No Call (calls are forwarded immediately) **→** Press **(•)**

テンソウサービス ON (Call Forwarding On) appears following Connecting to Network....

• ENo Call is currently available only for subscribers in Kanto. Koshin. Tokai and Kansai areas.

Cancel Secretary

Cancel Call Forwarding

Index Menu ► Functions → Services → Cancel Secretary

Choose **■** Yes **→** Press **(•)** 

ヒショサービス OFF (Secretary Service Off) appears following Connecting to Network....

**Check Secretary** 

Check Call Forwarding status

Index Menu ► Functions → Services → Check Secretary

Choose **■** Yes **→** Press **⊙** 

Service status appears.

#### Incoming Calls while Call Forwarding is Active

- To answer calls, press while handset is ringing/vibrating.
- Calls are forwarded immediately when No Call is set. (Available only for subscribers in Kanto, Koshin, Tokai and Kansai areas.)

Optional Services

## **Voice Mail**

- For details, contact Vodafone Customer Center, General Information (see P.14-20).
- Voice Mail and Call Forwarding cannot be used at the same time.
- Activating Voice Mail cancels Call Forwarding.

Voice Mail

Initiate Voice Mail

Index Menu ► Functions → Services → Voice Mail

Select **Call** (handset rings/vibrates before forwarding calls) or **□**No Call (calls are forwarded immediately) → Press •

ルスパンサービス ON (Voice Mail On) appears following Connecting to Network....

• ENo Call is currently available only for subscribers in Kanto, Koshin, Tokai and Kansai

#### Incoming Calls while Voice Mail is Active

- To answer calls, press y while handset is ringing/vibrating.
- Calls are forwarded immediately when No Call is set. (Available only for subscribers in Kanto, Koshin, Tokai and Kansai areas, and when used in those areas.)
- appears on handset after message is recorded.

#### When Voice Mail is Canceled (Kanto Koshin, Tokai and Kansai)

- While handset is ringing/vibrating, press left to forward the call. (This function is for one time only. Voice Mail remains canceled.)
- When the call is not successfully forwarded, *Unavailable* appears and Incoming Call Notice returns.
- When Side Key Settings (see P.12-3) is set to **□ Forward Voice Mail**, calls can be forwarded by pressing S for 1+ seconds while handset is ringing/vibrating.

**Cancel Secretary** 

Cancel Voice Mail

Index Menu ► Functions → Services → Cancel Secretary

Choose **■** Yes **→** Press **⊙** 

ヒショサービス **0FF** (Secretary Service Off) appears following **Connecting to Network....** 

Check Secretary

Check Voice Mail status

Index Menu ► Functions ► Services ► Check Secretary

Choose **■** Yes **→** Press **⊙** 

Service status appears.

**Play Voice Mail** 

Check Voice Mail messages

Index Menu ► Functions → Services → Play Voice Mail

Choose **■** Yes **→** Press **⊙** 

• Follow the guidance for further operations after handset connects to Voice Mail Center. Press (2) when finished.



disappears after messages are checked, unless they are checked from a touch-tone landline.

# **Ring Time**

Choose Call for Call Forwarding or Voice Mail and select Ring Time from 5 to 30 seconds (by 5 seconds).

- This function cannot be set from landlines or while handset is out-of-range or outside your subscription area.
- This function is disabled when No Call is set. (No Call is available only for subscribers in Kanto, Koshin, Tokai and Kansai areas.)

Ring Time

Set Ring Time for Call Forwarding or Voice Mail

Default 20 Seconds

Index Menu ► Functions ► Services ► Ring Time

Select Ring Time **▶** Press **●**)

トウロク (Saved) appears following Connecting to Network....

Adjust Ring Time to set the response priority when using Call Forwarding or Voice Mail together with Message Recorder (see P.12-4).

Example: Ring time for Call Forwarding or Voice Mail: 10 seconds Ring time for Message Recorder: 9 seconds

In this example. Message Recorder responds first, (Priority may change depending on signal conditions.) If Message Recorder memory is full. Voice Mail will activate.

Optional Services

On/Off

Activate or cancel Call Waiting

Subscribers in Hokkaido, Hokuriku, Kyushu, Okinawa, Tohoku, Niigata, Chuqoku and Shikoku areas cannot set this service from handsets (service itself is available).

Index Menu ► Functions → Services → Call Waiting

Choose **□***On* or **□***Off* **→** Press **⊙** 

フリコミコール ON (Call Waiting On) or フリコミコール OFF (Call Waiting Off) appears following Connecting to Network....

Confirm Service Check Call Waiting status

Subscribers in Hokkaido, Hokuriku, Kyushu, Okinawa, Tohoku, Niigata, Chugoku and Shikoku areas cannot set this service from handsets (service itself is available).

Index Menu ► Functions → Services → Confirm Service

Choose **■** Yes Press (•)

フリコミコール ON (Call Waiting On) or フリコミコール OFF (Call Waiting Off) appears following Connecting to Network....

**Incoming Calls** 

Put Line 1 on hold to answer Line 2

When a tone sounds during a call, press

Press 1 to switch between two lines.

Handset does not ring or vibrate for incoming calls while a line is engaged. A tone sounds from Earpiece and *Incoming Call* appears.

#### Kanto, Koshin, Tokai and Kansai Areas

When Voice Mail or Call Forwarding is active, unanswered incoming calls are transferred to Voice Mail or the forwarding number. Call Waiting is disabled if No Call is selected, then all calls are transferred directly.

#### Ending a Call while Someone is on Hold

When sis pressed, a beep sounds and *Caller on Hold* appears. Press or to talk with the party on hold.

#### Line 1 Ends while Line 2 is on Hold

A beep sounds and *Caller on Hold* appears. Press or to talk with the party on hold.

3 Way Calling

Open Another Line Open another line during a call

Enter a phone number during a call → Press ?

Line 2 is open. Line 1 is put on hold.

• Phone Book, Redial, Call History and Notepad Memory are available.

Switch Line

Switch between two open lines

During a call, press ● ▶ Select **Switch Line** ▶ Press ●

The line switches. The other line is put on hold.

• Press (•)(4) to toggle between two lines.

Ending a Call while Someone is on Hold

A beep sounds and **Caller on Hold** appears. Press or so to talk with the party on hold.

Line 1 Ends while Line 2 is on Hold

A beep sounds and **Caller on Hold** appears. Press or for talk with the party on hold.

reak Away (while Switching Lines)

Original call ends Line 1 and Line 2 remain connected

Available for subscribers in Kanto, Koshin, Tokai and Kansai areas.

While switching between two lines, press ● Select ■ Break Away Press ● Press ● Press ●

Break Away... appears. You are disconnected, but Line 1 and 2 remain connected. (If you made the call, you are charged for the remaining call.)

Press to return to Standby.

3 Way Calling

Use two lines simultaneously

Press ● while switching between two lines ▶ Select ■3 Way Calling

▶ Press (●)

• You cannot switch lines (see above) once shifted to 3 Way Calling.

Optional Services

13-6

Optional Services

Original call ends Line 1 and Line 2 remain connected

Available for subscribers in Kanto, Koshin, Tokai and Kansai areas.

Press ● during 3 Way Calls → Select ■ Break Away → Press ● → Choose ■ Yes → Press ●

**Break Away...** appears. You are disconnected, but Line 1 and 2 remain connected. (If you made the call, you are charged for the remaining call.)


• Press (a) to return to Standby.

#### Ending a Call during 3 Way Calls

Both lines are disconnected.

## Line 1 Ends during 3 Way Calls

Line 2 remains connected.

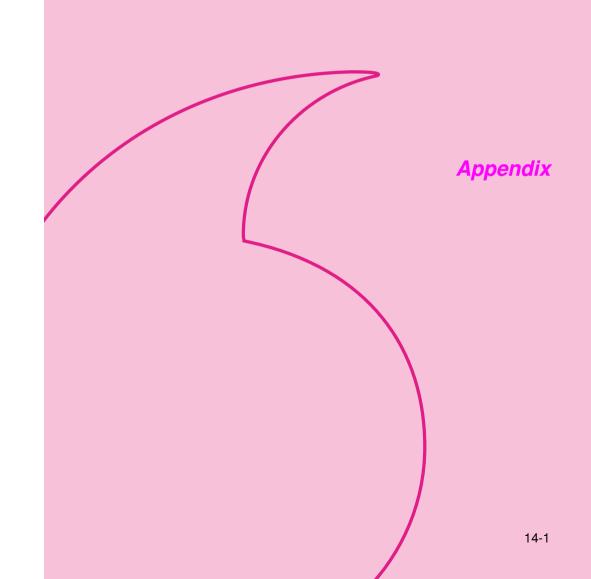

<sup>&</sup>lt;sup>4</sup>Available only when switching between two open lines. *Break Away* is currently not available in Hokkaido, Tohoku, Niigata, Hokuriku, Chugoku, Shikoku, Kyushu and Okinawa areas.

Functions Menu	Description
0. My Number <sup>1</sup>	Open handset phone number
1. Sounds	Call Functions, Volume, Sound Effects, etc.
2. Privacy	Manage handset security with Keypad Lock, Auto Key Lock, etc.
3. Settings 1	Display settings such as Light Settings, Group Settings and Side Key Settings
4. Settings 2	Display settings including User Dictionary and Manner Settings
5. Clock	Alarm, Clock Display, etc.
6. Charges	Call Charge, Total Talk Time, etc.
7. Services	Activate Optional Services such as Voice Mail and Call Forwarding
8. Vodafone live!	Access Mail, Web, Station and V-Applications

#### ■ 1. Sounds

Function	Default	Refer to
0. Call Functions	Delayed Ringer: Off, Close to End Call: On	P.8-2, P.2-10, P.2-3
1. Volume <sup>1</sup>	Level 5	P.2-11
3. Sound Effects	Refer to the table in "Sound Effects"	P.8-5
5. Ringer Out	Earphone/Speaker	P.12-33
6. Speaker <sup>1</sup>	Off	P.8-21
7. Original Tones	-	P.8-8
8. Instrument Effects	-	P.8-16
9. Tone Octave	-	P.8-21

## 2. Privacy

Function	Default	Refer to
0. Keypad Lock	Off	P.11-2
1. Auto Key Lock	Off	P.11-3
2. Secret Mode <sup>1</sup>	Off	P.11-6
3. Phone Book Lock	Off	P.11-3
4. Restrict Dial	Off	P.11-4
5. Accept Call	Off	P.11-5
6. Reject Call	All Off	P.11-5
7. Reset All	-	P.11-7
8. Change Code	-	P.11-2
9. Reset Defaults	-	P.11-7

## ■ 3. Settings 1

Function	Default	Refer to
0. Guide <sup>1</sup>	-	P.1-25
1. Memory	-	P.5-8
2. Off-Line Mode	Off	P.3-6
3. Battery Saving	Power Saving: On, Panel Saving On/Off: On (5 minutes), LED Indicator: Off	P.12-28
4. Light Settings	Backlight: On (15 seconds), Keypad Light: On (15 seconds), In-Car Backlight: Off, Brightness: Level 4	P.7-7
5. <b>言語選択</b> (Language)	日本語 (Japanese)	P.7-9
6. Sub Display	Sub Display On/Off: On, Backlight Settings: On (15 seconds), Adjust Contrast: Contrast 5, Recipient Display: On	P.7-8
7. Group Settings	-	P.5-16
8. Signal Alert	Off	P.12-2
9. Side Key Settings	Incoming Calls: Message Recorder, Standby: Details	P.12-3

<sup>&</sup>lt;sup>1</sup>Also available during calls.

<sup>&</sup>lt;sup>2</sup>Currently not available in Hokkaido, Hokuriku, Kyushu and Okinawa areas. <sup>3</sup>Currently not available in Tohoku, Niigata, Chugoku and Shikoku areas.

Function	Default	Refer to
0. Display Settings	Wallpaper: Off, Display Images: All Off, Fonts: Font 3, Large Font: Off, Show Indicators: On, Power On Message: Off	P.7-2, P.7-5, P.7-6, P.7-2, P.7-9
1. Display Patterns	Battery Level: Icon 1, Signal Strength: Icon 1, Title Bars: Color 1, Menu Design: Menu Design 1, Guide Keys: Pattern 1, Indicator Bar: Background 1	P.7-6
2. Spending Memo <sup>1</sup>	-	P.12-30
3. User Dictionary	-	P.4-15
4. Message Recorder	Recorder Settings, Play, Outgoing Message, Volume Level, In-Car Recorder, Answer Time	P.12-4
5. Disney Style	Off	P.7-10
6. Manner Settings	Message Recorder: On, Ring Tone Level: All Silent, Vibration: All On, LED Indicator: Small Light, Whisper Mode: On, Sound Volume: Silent, V-Appli Volume: Silent, V-Appli Vibration: On	P.3-4
7. Incoming Light	All Off	P.7-10
8. Animation	Screen Animation: Off, Vodafone live!: All On, Mail Background: On	P.7-10, P.7-9

## 5. Clock

9. Calculator

Function	Default	Refer to
0. Alarm	-	P.12-7
1. Auto Power On	Off	P.12-11
2. Auto Power Off	Off	P.12-12
3. Clock Display	Large	P.7-3
4. Useful Diary	-	P.12-20
5. Stopwatch	-	P.12-23
6. Kitchen Timer	-	P.12-24
9. Clock Settings <sup>1</sup>	-	P.1-20

P.12-29

## ■ 6. Charges

Function	Default	Refer to
0. Total Charges	0 Yen	P.2-20
1. Call Charge	0 Yen	P.2-20
2. Total Talk Time	0 hours 0 minutes	P.2-19
3. Call Time	0 minutes 0 seconds	P.2-19
4. Instant Display	Off	P.2-19, P.2-20

## 7. Services

Function	Default	Refer to
0. Ring Time <sup>3</sup>	20 Seconds	P.13-5
1. Call Forwarding	-	P.13-3
2. Voice Mail	Call	P.13-4
3. Cancel Secretary	-	P.13-3, P.13-4
4. Check Secretary	-	P.13-3, P.13-5
5. Call Waiting <sup>2, 3</sup>	-	P.13-6
6. Confirm Service <sup>2, 3</sup>	-	P.13-6
7. Play Voice Mail	-	P.13-5
8. 3 Way Calling <sup>4</sup>	-	P.13-7
9. Setup Preset	International Call: 0046010	P.2-5

## 8. Vodafone live!

Function	Default	Refer to
1. Mail	-	Vodafone live!
2. Web	-	Vodafone live!
3. Station	-	Vodafone live!
4. V-Appli	-	Vodafone live!

## ■ Other Settings Affected by Reset

Function	Default	Refer to
Manner Mode	Canceled	P.3-3
Message Recorder	Canceled	P.12-4
Phone Book Search Method	Memory No. Search	P.5-12
Pen Light	Lighting Time: 1 Minute	P.12-31
Schedule View	Day Detail/Stamps	P.12-17
Scan Code Display Size	Medium Font/100%	P.12-25

All camera settings also return to their defaults.

,

Append

# Troubleshooting

Problem	Possible Cause	Solution
Handset does not turn on	<ul> <li>Is pressed for 1+ seconds?</li> <li>Is battery low or dead?</li> <li>Is battery installed?</li> </ul>	Press for 1+ seconds. Charge battery or install a charged battery. Install battery properly.
□ appears and cannot make calls from handset	Is handset out-of-range?	Move to a place where signal is strong and retry.
Keypad does not respond	Is Key Guard active?     (¹ appears)     Is Keypad Lock active?     (⅓ appears)	Cancel Key Guard (see P.1-19).      Cancel Keypad Lock (see P.11-2).
Cannot enter numbers from handset Keypad	Is Key Guard active?     (□ appears)     Is Keypad Lock active?     (□ appears)     Is Restrict Dial active?	<ul> <li>Cancel Key Guard (see P.1-19).</li> <li>Cancel Keypad Lock (see P.11-2).</li> <li>Cancel Restrict Dial (see P.11-4).</li> </ul>
Cannot place calls from Phone Book	<ul><li>Is the number saved as Secret Mode entry?</li><li>Is Phone Book Lock active?</li></ul>	Activate Secret Mode     (see P.11-6).     Cancel Phone Book Lock     (see P.11-3).
Beep continues after dialing and call cannot be connected	Did you dial the number including the area code or first 0? Is handset out-of-range?  appears) Is handset off-line? (▼ appears)	<ul> <li>Dial the number including the area code or 0.</li> <li>Move to a place where signal is strong and retry.</li> <li>Cancel Off-Line Mode (see P.3-6).</li> </ul>
Calls are interrupted or cut	<ul><li>Is signal weak?</li><li>Is battery low or dead?</li></ul>	<ul> <li>Move to a place where signal is strong and retry.</li> <li>Charge battery or install a charged battery.</li> </ul>
Hear noise while talking on the phone	This may happen when signal is weak or unstable.	-
Display flickers	Display may flicker under fluorescent lights.	-
Display is dark when Backlight is off	Panel construction characteristic; not a malfunction.	-

Problem	Possible Cause	Solution
	<ul> <li>Is Rapid Charger connected correctly to handset?</li> </ul>	Plug in again.
	<ul> <li>Is Rapid Charger plugged in firmly?</li> </ul>	Plug in again.
	Is battery installed?	<ul> <li>Install battery properly.</li> </ul>
Cannot charge	Are handset, battery, Charger	Clean with a cotton swab.
battery	Terminals & Connection	
	Terminal and External Device	
	Connector clean?	
	Battery may not be charged if	Handle within ambient
	temperature is not within 5°C - 35°C.	temperature of 5°C - 35°C.
	Battery has run out or is defective.	Replace battery with a new one.
Charging time is	Charging time shortens when	_
shorter	battery is not empty.	
	Rapid Charger may heat up while	
Handset or	charging. Handset may also heat	
accessories are hot	up if used for long periods. This	-
40000001100 410 1101	is normal if they are not	
	extremely hot.	
	Battery runs out faster depending	Refer to "Estimated Hours of Use
Battery runs out	on the environment	(fully charged battery)," "Battery
quickly	(temperatures, charging/signal	Time" and "Extend Battery Time"
	conditions), usage or settings.	(see <b>P.1-11</b> - <b>1-12</b> ).



For repairs and after-sales services, contact Vodafone Customer Center, Customer Assistance (see **P.14-20**).

#### Indicators & Recharge Warning

## ■ <sup>out</sup> appears

Handset is out-of-range. Move for a better signal.

## ■ 3 appears

Handset is in Off-Line Mode (see **P.3-6**). Cancel the setting.

#### Recharge Battery appears and short beeps sound

Battery is low (see P.1-12 - 1-13).

Charge or replace battery immediately.

## **■** • appears

Key Guard is active (see P.1-19).

Cancel to use Keypad. Incoming calls suspend Key Guard. Press keys for Anykey Answer (see **P.2-6**) to answer calls.

## ■ appears

Keypad Lock is active (see P.11-2).

Cancel to place calls, etc. Press keys for Anykey Answer (see P.2-6) to answer calls.

# **Character Code List**

First Three				L	ast	Dig	it				First Three				L	ast	Dig	it				First Three				Li	ast I	Digit	t			
Digits	0	1	2					7	8	9	Digits	0	1	2		4			7	8	9	Digits	0	1	2			5		7	8	9
010		(Space	٠,	ò	į	:	•	:	;	?	078	ю	Я									207	贋	雁	碩	顏						
011 012 013 014 015 016	> 1 :	`/, } -	~~	″~ ) ≫×\$	全―〔「÷♀	J	 ] [	0]		` } } ¥	080 081 082 083		_ + + +	  -  +	- [ -	¬ <b>-</b> -	•	_ _ 	<u> </u>	F	<b>→                                    </b>	207 208 209 210 211	旗紀	徽:	期帰規	棋毅記	棄気貴	企希 汽起	畿	祈輝	季飢	稀騎
017 018 019 020 021 022 023	<b>→</b>	0 ↑ ♦ O & 8	£ ↑	% ◎ ↓	#	&	* ~	<b>@</b> ▼	C § ≪	☆ 〒	160 161 162 163 164	鮎	茜圧	穐斡	悪扱	- 阿握宛安 し	哀渥姐	旭虻	葦飴	芦絢	鯵綾	212 213 214 215 216 217 218	鬼犠吉客宮究巨	亀疑吃脚弓窮拒	祇喫虐急	義桔逆救	蟻橘丘朽	宜誼詰久求給虚	議砧仇汲	掬杵休泣	菊黍及灸	鞠却吸球
024 026 027 028 029	_	_ ⊥ ~	^ 	۷ ع		=			>>	√ ¶	164 165 166 167 168 169	井稲	多茨飲	惟緯域芋淫	意胃育鰯胤	位慰萎郁允	依易衣磯印	椅謂一	為違壱	溢	異医逸	219 220 221 222 223 224 225	禦  卿挟蕎業	魚供叫教郷局	亨侠喬橋鏡曲	享僑境況響極	京兇峡狂饗玉	競強狭驚桐	共彊矯仰粁	凶怯胸凝僅	協恐脅尭勤	匡恭興曉均
031 032 033 034 035 036	4 H R	5 I S	6 J T	7 A K U	8 B L V	M W a	N X b	1 E O Y c	F P Z d	3 G Q e	170 171 172 173	<b>唄</b> 云	雨欝運	卯蔚雲	鵜鰻	親姥	丑厩	碓浦	Щ	渦	嘘	226 226 227 228 229		錦菌 句具櫛	区愚釧	狗虞屑	玖喰屈	矩空	苦偶	躯!	駆遇	九駈隅
037 038 039 040 041 042 043	fpz おごぞ	かさ	ざ	is いきしち	jt いぎじぢ	くす	ぉ	mw えけせづ	x えげぜ	oy おこそで	173 174 175 176 177 178	衛閲掩	詠榎援	鋭厭沿	液円演	餌洩疫園炎鉛 ‡	益堰焔鴛	駅奄煙塩	悦宴燕	延猿	越怨縁	230 231 232 232 233 234	栗郡 珪携繋	刑:	袈辺	祁形	係径		刑	兄慧系	啓憩経	圭掲継
044 045 046 047 048	とひぼゆる	どびぽょゑ	まよを	みらん	むり	める	もれ	やろ	ペやゎ	ゅわ	178 179 180 181 182		押	旺	往横沖卸	応欧荻恩	億温	王	於 翁憶音	襖臆	鴬桶	235 236 237 238 239 240	鶏傑倹建	云欠倦憲検	迎決健懸権	<b>郻潔兼拳</b> 產	<b>劇穴券捲犬</b>	<b>戟結剣</b> 献	学血喧 研	決圏!	隙月堅 絹	桁件嫌 県
050 051 052 053 054 055 056 057 058	オゴゾトヒボユヰ	アカサタドビポョヱ	ザダー	ナ	ぎ	2	ッ	ッ	エゲゼテバペヤワ	ヹ	182 183 184 185 186 187 188 189	家禍蝦我	寡禾課牙会懐	科稼嘩画解戒	暇箇貨臥回拐	佳果花迦芽塊改海	架苛過蛾壊	歌茄霞賀廻	河荷蚊雅快	既	嫁珂菓峨駕悔	241 242 243 243 244 245 246 247	姑	舷	言	諺庫	限二二	乎:	個地	古は	呼湖	固狐
060 061 062 063 064 065			B M X	Γ Ν Ψ	Δ <b>Ξ</b>	Ε Ο γ	Z Π	Η P	Θ	I Τ η	191 192 193 194 195 196 197 198	恰	開概蛙撹較	階涯垣格郭笠	貝碍柿核閣樫	<b>汽凱蓋蛎殼隔橿滑株</b>	劾街鈎獲革梶	外該劃確学鰍	咳鎧嚇穫岳潟轄	害骸各覚楽	崖浬廓角額喝鰹	248 249 250 251 252 253 254 255	乞効 巧拘江紅	鯉勾后巷控洪	父厚喉幸攻浩絞	佼口坑広昂港	医向垢庚晃溝	候 好康更甲	锌 孔弘杭皇	光。孝恒校硬	公 宏慌梗稿	功 工抗
070 071 072 073 074	ИТЬ	Й У Э	К Ф Ю	Л Х Я	Ц	Ч	Ш	Щ	Ъ	С Ы а	199 200 201 202 203	- 噛 勘幹款竿	鴨粥勧患	柏刈巻感	茅苅喚	萱瓦堪憾	乾姦換潅	侃完敢環	冠官柑甘	寒寛桓監	刊干棺看	256 257 258 259 260	砿号告忽	鋼合国惚此	閣壕穀骨	降拷酷狛	項濠鵠込	香豪黒	高轟獄	鴻麹漉	剛克腰	甑
075 076 077	б ф	В Л Х	Г М Ц	Д Н Ч	е О Ш	ё п щ	ж р ъ	С Ы	И Т Ь	Й У Э	204 205 206	諌	貫	還	鑑	缶間巌	閑	関	陥	韓		261 261	甘	比	収	他	派 さ	很 i	7日.	戊	-	些

14

pendix

irst Three	Last Digit	Firet Three	Last Digit	Firet Throc	Last Digit
Digits	0 1 2 3 4 5 6 7 8 9	First Three Digits	0 1 2 3 4 5 6 7 8 9	First Three Digits	0 1 2 3 4 5 6 7 8 9
262	佐叉唆嵯左差杏沙瑳砂	327	雌仙华千上宫寅尘川殿		
263	計鎖裟坐座挫債催再最 裁塞妻宰彩才採栽歲済	328	扇撰栓栴泉浅洗染潜煎煽旋穿箭線	386	奈 那 内 乍 凪 薙
264	哉塞妻宰彩才採栽歳済	329	煽旋穿箭線	387	謎灘捺鍋楢馴縄畷南楠
265	災 采 犀 砕 砦 祭 斎 細 菜 裁 載 際 剤 在 材 罪 財 冴 坂 阪	330		388	軟難汝
266	載際副在材罪財冴坂阪	331	選遷銭銑閃鮮前善漸然		(E —
267	堺榊肴咲崎埼碕鷺作削	332	全禅繕膳糎	388	二尼弐迩匂賑肉
268	咋搾昨朔柵窄策索錯桜	332	₹ ——	389	虹廿日乳入
269	<b>鮭笹匙冊刷</b>	332		390	如尿韮任妊忍認
270	察拶撮擦札殺薩雑皐	333		330	<del></del>
	<b>杂炒烟烧礼权</b> 摊 # #		曾楚狙疏疎礎祖租粗素	200	
271	鯖捌錆鮫皿晒三傘参山	334	組蘇訴阻遡鼠僧創双叢	390	温神
272	惨撒散栈燦珊産算纂蚕	335	倉喪壮奏爽宋層匝惣想	391	祢寧葱猫熱年念捻撚燃
273	讃賛酸餐斬暫残	336	捜 掃 挿 掻 操 早 曹 巣 槍 槽	392	粘乃廼之埜嚢悩濃納能 脳膿農覗蚤
	t	337	捜掃挿掻操早曹巣槍槽 漕燥争痩相窓糟総綜聡	393	脳 膿 農 覗 蚤
273	L	338	草荘葬蒼藻装走送遭鎗		は
274	使刺司史嗣四士始姉姿	339	霜騷像増憎	393	巴把播覇杷
275	子屍市師志思指支孜斯	340	臓蔵贈造促側則即息	394	波派琶破婆罵芭馬俳磨
276	施旨枝止死氏獅祉私糸	341	捉束測足速俗属賊族続	395	拝 排 敗 杯 盃 牌 背 肺 輩 配
277	纸嵌咕贴至组词替替士	342		396	在 性 棋 梅 柑 相 智 丰 畦
	紙紫肢脂至視詞詩試誌 諮資賜雌飼歯事似侍児	J42	+	307	倍培媒梅楳煤狽買売賠 陪這蝿秤矧萩伯剥博拍 柏泊白箔粕舶薄迫曝漠
278		242	—————————————————————————————————————	397	后 這 蝿 什 劝 秋 旧 <b>羽</b> 博 指
279	字寺慈持時	343	他多太太記壁堕妥惰打 化多大法記壁堕妥惰打 校記 校 校 校 校 校 校 校 校 成 成 成 成 成 成 成 成 成 成	398	11 7 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
280	次滋治爾璽痔磁示而 耳自蒔辞汐鹿式識鴨竺	344	化	399	場
281	耳目蒔辞汐鹿式識鴨竺	345	び 帯 待 怠 態 戴 替 泰 滞 胎	400	函箱俗署肇筈櫨幡肌
282	軸 宍 雫 七 叱 執 失 嫉 室 悉	346	17 開 里 物 東 弘 首 安 台 州	401	畑畠八鉢溌発醗髪伐罰
283	湿漆疾質実蔀篠偲姕芝	347	台大第醍題鷹滝瀧卓啄	402	抜 筏 閥 鳩 噺 塙 蛤 隼 伴 判 半 反 叛 帆 搬 斑 板 氾 汎 版
284	屡 苾 編 舎 写 射 拴 劫 科 者	348	字 托 択 拓 沢 澤 稼 託 鐸 濁	403	半反叛帆搬费精范羽艇
285	本語	349	台大策配置應海流電學區等人等配置應海流電學區與混選逐級。	404	犯班畔繁般藩販範釆煩
286	尺杓灼爵酌釈錫若寂弱	350	品 耳 机 玥 穴 叩 但 達 辰 奪 脱 巽 竪 辿	404	頒飯挽晚番盤磐蕃蛮
	大丁以		叩但達 辰 奪 脱 巽 竪 辿 棚 谷 狸 鱈 樽 誰 丹 単 嘆 坦	400	
287	惹主取守手朱殊狩珠種 腫趣酒首儒受呪寿授樹	351		405	v
288	腫趣酒首儒受呪寿授樹	352	担探旦歎淡湛炭短端筆	405	
289	綬需囚収周	353	綻 牝 胆 蛋 誕 鍛 団 壇 弾 断	406	卑 凸 妃 庇 彼 悲 扉 批 披 斐
290	l 宗 就 州 修 愁 拾 洲 秀 秋	354	綻耽胆蛋誕鍛団壇弾断 暖檀段男談	407	卑否妃庇彼悲扉批披斐 比泌疲皮碑秘緋罷肥被
291	終繍習阜舟東衆襲讐殿			408	誹 費 避 非 飛 樋 簸 備 尾 微
292	輯週酋酬集醜什住充統十 報表計 一一 一一 一一 一一 一一 一一 一一 一一 一一 一一 一一 一一 一一	354	值 知 地 弛 恥	409	枇毘琵眉美 鼻柊稗匹疋髭彦膝菱
293	從戎柔汁渋獸縱重銃叔	355	智池痴稚置致蜘遅馳築	410	鼻柊稗匹疋髭彦膝菱
294	周 宿 淑 祝 縮 盡 孰 孰 此 術	356	畜竹筑蓄逐秩窒茶嫡着	411	肘弼必畢筆逼桧姫媛紐
295	试 俊 檢 去 暖 施 舜 睦 妆 恁	357	由他由中地区社社中中	412	百謬俵彪標氷漂瓢票表
	述俊峻春瞬竣舜駿准循 旬楯殉淳準潤盾純巡遵		中仲宙忠抽昼柱注虫衷 註酎鋳駐樗瀦猪苧著貯		豆 多 あ 世 左 孙 本 世 45 #
296	可怕对好华相相视巡递	358	正 川 琳 胜 传 难 拍 亍 首 灯	413	評豹廟描病秒苗錨鋲蒜
297	醇順処初所暑曙渚庶緒	359	丁兆凋喋寵		蛭鰭品彬斌浜瀕貧賓頻
298	署書薯藷諸助叙女序徐	360	帖帳庁弔張彫徵懲挑	415	敏瓶
299	恕 鋤 除 傷 償	361	暢朝潮牒町眺聴脹腸蝶		
300	恕鋤除傷價 勝匠升召哨商唱當獎	362	暢朝潮牒町眺聴脹腸蝶 調諜超跳銚長頂鳥勅捗	415	不付埠夫婦富冨布
301	妾 娼 肖 祒 小 少 尚 圧 床 敝	363	直朕沈珍賃鎮陳	416	不付埠夫婦富冨布 府怖扶敷斧普浮父符腐
302	彰承抄招掌捷昇昌昭晶	l	7	417	膚芙譜負賦赴阜附侮撫
303	彰承抄招掌捷昇昌昭晶 松梢樟樵沼消渉湘焼焦	363	津墜椎	418	武 舞 葡 蕪 部 封 楓 周 暮 蕗
304	照症省硝礁祥称章笑粧	364	槌追鎚痛通塚栂掴槻佃	419	伏副復幅服
305	20 当 昔 恭 甚 卷 卷 弘 註 30	365	连左趾用四分时归次四	420	万 市 友 市 ル 声 川 声 儿 声 儿
	紹肖菖蒋蕉衝裳訟証詔 詳象賞醤鉦鍾鐘障鞘上		漬柘辻蔦綴鍔椿潰坪壷 嬬紬爪吊釣鶴		福腹複覆淵弗払沸仏 物鮒分吻噴墳憤扮焚奮
306	计 豕 貝 酋 並 趕 理 陧 閈 扎 上	366		421	物制分物填填值物效集
307	丈丞乗冗剰城場壌嬢常			422	粉糞紛雰文聞
308	情擾条杖浄状畳穣蒸譲 醸錠嘱埴飾	366			
309	<b></b>	367	剃貞呈堤定帝底庭廷弟	422	
310	│ 拭植殖燭織職色触食	368	愣 玭 玭 提 梯 기 旋 孢 枵 締	423	幣平弊柄並蔽閉陛米頁
311	蝕辱尻伸信侵唇娠寝審 中信侵唇療浸深等 等真神秦神臣芯薪 (審事)	369	艇訂諦蹄逓 郵鄭釘鼎泥摘擢敵滴	424	僻壁癖碧別瞥蔑箆偏変 片篇編辺返遍便勉娩弁
312	心慎振新晋森榛渟深串	370	取鄭釘鼎泥摘擢 敵 滴	425	片篇編辺返漏便勉始弁
313	<b>疹直神秦紬</b> 臣	371	的笛適鏑溺哲徹撤轍迭	426	鞭
314	<b>身至谁針雲人仁 訂應工</b>	372	<b>幹曲埴下展亡沃練</b>	120	#x — ほ — —
315	身辛進針震人仁刃塵壬 尋甚尽腎訊迅陣靭	373	鉄典填天展店添纏甜貼 転顛点伝殿澱田電	426	保舗鋪圃捕歩甫補輔
313	マロベ目が心性物	3/3	TA 录 示 IA 改 版 口 电		
215	—— † —— <u> </u>	272	—— と——	427	穂募墓慕戊暮母簿菩倣
315	(	373	鬼吐 堵塗妬屠徒斗杜渡登菟	428	俸包呆報奉宝峰峯崩庖
316	須酢図厨逗吹垂帥推水	374	'	429	抱捧放方朋
317	炊睡粋翠衰遂酔錐錘随		賭 途 都 鍍 砥 砺 努 度 土 奴	430	法 泡 烹 砲 縫 胞 芳 萌 蓬
318	瑞髓崇嵩数枢趨雛据杉	376	怒倒党冬凍刀唐塔塘套 宕島嶋悼投搭東桃梼棟	431	蜂褒訪豊邦鋒飽鳳鵬乏
319	相 曹 頗 雀 裾	377	宕島嶋悼投搭東林梼榑	432	亡傍剖坊妨帽忘忙房暴
320	澄潛寸	378	盗淘湯涛灯燈当痘祷等	433	望某棒冒紡肪膨謀貌貿
320			型	427	生 不 评 目 炒 奶 嘭 味 犹 貝
220	世	379	答筒糖統到 董蕩藤討謄豆踏逃透	434	鉾防吠頬北僕卜墨撲朴 牧睦穆釦勃没殆堀幌奔
320	世瀬畝是凄制	380	重湯膝引鷹豆蹈逃透		拟胜惨型初发殆驰幌奔
321	勢姓征性成政整星晴棲	381	鐙陶頭騰闘働動同堂導	436	本翻凡盆
322	栖正清牲生盛精聖声製	382	憧撞洞瞳童胴萄道銅峠		ŧ
323	栖正清牲生盛精聖声製 西誠誓請逝醒青静斉税	383	憧撞洞瞳童胴萄道銅峠 鴇匿得徳涜特督禿篤毒	436	摩磨魔麻埋妹
324	脆隻席惜戚斥昔析石積	384	独 読 振 橡 凸 空 椴 届 菅 苦	437	昧枚毎哩槙幕膜枕鮪柾
325	籍結沓青赤跡時稲切地	385	寅酉瀞噸屯惇敦沌豚遁	438	<b> </b>
326	籍 績 脊 責 赤 跡 蹟 碩 切 拙 接 摂 折 設 窃 節 説 雪 絶 舌	386	頓吞曇鈍	439	鱒桝亦俣又抹末沫迄伋 繭麿万慢満
525		550	* L H * D	.55	ma 10 17 17 119

First Three				ı	Last	Diç	git				First Three				L	ast	Dig	it				First Three				ı	Last	Dig	it				1
Digits	٥	1	2	3	4	5	6	7	8	9	Digits	0	1	2	3	4	5	6	7	8	9	Digits	0	1	2	3	4	5	6	7	8	9	
440		漫	蔓		Ι,	7.					488	偃曲	假做	會は	偕师	修出	偈	做	偖	偬	偸	559	悁		惧		悚		YZII	*4	굔	4-4	]
440				味		み財	E	箕	岬	密	489 490	傀	放会	伊伊	傳	做樓	僖	僞	僥	僣	僣	560 561	惠	悄惓		性性	: 恨	悒惆	帳	悄	恐慍	慢慢	
441	蜜	湊	蓑		脈	妙	耗			_	491	僮	價	僵	儉	儁	儂	儖	儕	儔	儚	562	愆	惶	惷	愀	惴	惺	愃	惚	惻	慢慢	i
441		-			<b>—</b> 7	<u>:</u> `			-	砅	492 493	儡兢	儺	儷	儼	儻	儿冀	匹	昂	盆	兔	563	愍愴	愎				愧慷	慊松	愿斬	愼極	逆後	
441	夢	無	牟	矛	霧	誠	椋	婚	娘	務	494	冏	曹	蕫	畧	_	冤	冦	冢	寫	冪	564 565	熠		危		「慟		修標				
	,	-	_	-,		Ø.	11-3	7113			495	7	决	冱	冲	冰	况	冽	凅	凉	凛	566	憇	憬	憔	憚	憊	憑	憫	憮	懌	慡	į
442 443	4	_	06	田田	1 144	46	响	极	ᄮ	冥	496	几		風	凭	凰	끾	凾	烈	刋		567	應	懷	懈	熟	燥	憺懽	懋	罹傷	懍	懦	j
443 444					面		鳴	夝	化	冰、	497 498	刎剞	刻剔	前並	削	刺剩	刹剳	脳	到劃	旭劍	制觎	568 569	燃戊	林	成戊	職業	夏	催	惟	珥耳	787	. ×	1
	-	1117	471	, tl-hm		ŧ~		_	_		499	劒	剱	劈	劑	辨						570		曼	戡	截	. 数	戦	戲	戳	扁		,
444 445	고	ェ	X-Z	_	- 4PA	   ##	摸	模	茂士	妄	500	ᆂ扎	辧	劬	劭	劼	劵勵	勁	莂	勗	勞	571						扼					
445 446	晉	七本	烅	日餅	稍	村屋	蒙籾	福	小問	然思	501 502	則甸		節匐		割七			勹匯	沙唐	岡爾	572 573	抓扳	抖擔	拔拈	打拜	が	拗拊					
447	紋	菛	匆		,,,		. 1/3	~	1~	reg	503	Ľ	區	추	卅	丗	卉	卍	準	卞	口	574	挌	拮	拱	挧	推	挈	拯	拵	捐	挾	į
447		-		ı L	,	<b>ا</b>	40	777	<b></b>	٦٢.	504				卷		厖					575	捏					掀					
447 448	矢	厄	彸	也終	心薬	役訴	爺躍	ル語	野柳	弥薮	505 506	厰叭	섮	參叶			叟听					576 577	捏揉	<b>挺</b>	加椰	扣檢	坂摇	掾搴	指	採样	<b>挨</b>	抗搶	
449	鑓		۱۰	. 40 3		ш,	-	-13	15F	**	507	吩	吝	呎	咏	呵	咎	呟	呱	呷	呰	578	攝	搗	搨	搏	摧	摰	摶	摎	攪	換	Ì
440		_	_	. 11		φ.			-		508	咒	迧	먪	呶	맻	咐	咆	哇	뿍	咸	579	撓	撥	撩	撈	撼	1-ste	E±	<b>.</b>	188	ı ek	
449 450					癒		勇	声	宇	Rka	509 510	咥	<b>炒</b> 肥	供师	哈哈	谷呼	咼	好	可	毗	盛	580 581	餌	塚塚	摘掉	擅地	捧	撻擯	<b>擘</b>	擂熔	脳塘	魯	
450 451	悠	憂	揖	有	抽	逐	海	猶	計	由	511	唔	凒	哮	哭	中哺	陽	唹	喔	啪	空空	582	華擺	攀	擽	攘	推	損攢	操	攣	攫	支	
452	祐	裕	誘	遊	邑	, 對	雄	融	タ		512	售	啜	啅	啖	啗	唸	唳	啝	喙	喀	583	攵	攷	收	攸	一	效	敖	敕	敍	敘	
452					- (	ょ・			_	予	513 514	咯喩					喘嗟					584 585	敞	敝	敲旆	數	魰	斃	變物	斛梅	图	がエ	
452	余	与	誉	連	陌	傏	幼	妖	容		514						<b>佐嘛</b>			嚣	愕警	586	党	型旱	県	夏	一层	旌旻晞	<b>杰</b>	雌昵	遲	品	í
454	揚	揺	擁	曜	楊	様	洋	溶	熔	用	516	嘴	嘶	嘲	嘸	噫	噤	嘯	噬	噪	嚆	587	昜	晏	晄	晉	晁	晞	畫	晤	晧	晨	
455	窯	美	耀	葉	蓉	要	謡翠	踊	遥	陽	517				嚔	嚏	嚥	嚮	嚶	嚴	囂	588	晟	哲	晰	罪	軍	暎	暉	暄	暘	i 瞑	:
456	食	舩	扣	似		治ら	笠	異	涎		518 519	嚼魚			層	學	囎	燭	嚙	Ц	띠	589 590	堂	進曄	赔	嘐	警聽	曠	昿	謠	뮲	F	,
456					ı İ					羅	520	ш	圈	國	圍	圓	璽	몹	嗇	豊	圦	591	曵	葛	朏	朖	身	朦	朧	霸	朮	朿	į
457	螺	裸	来	莱	頼	雷	洛	絡	落	酪	521						坯					592	朶	杁	朸	朷	杆	杞	杠	杜	杣	板	į
458	乱	뱻	風	. 慷		監り	蘭	筧			522 523	邛埔	地松	攻抵	<b>圾</b>		垤埣					593 594	杜枷	杰	公坦	村南	砂扣	粉柩	朸构	砂扣	材料	材析	
458					Γ.				利	吏	524	堡	圬塢	举			一塒					595	拠	柮	枹	析	拉	狐	檜		框		
459	履				璃				_		525				壞	墻	墸	墮	壅	壓	壑	596		桍	栲	桎	梳	栫	桙	档			
460	本	痢 甘	表	裡	里	雕	陸琉	律	率	立	526 527	壗	獚	壘	堰	壜	壌	蠪	壯林			597						棚					
461 462							堀		売		527 528	壻夭	亞本	夸	文本	솖	复奕	夕鱼	タ奎	夥奚	夬奘	598 599	凡相	竹楼	松	位校	棍棍	桾	仔	来	彻	**	٤
463	両	凌	寮	料	梁	涼	猟	療	瞭	稜	529	奢	奠	奥	奬	奩						600		桰	棧	棕	楼	椒	椄	楽	棣	枚	1
464 465	糧	良#	諒	遼州	量	陵	領輪	力	緑	倫	530	¥	妊	妁	妝	佞	侫娟	妣	媞	姆坤	姨畑	601	棹	常	棯	椨	植	椚楾	椣	椡	棆	極	1
465	浬	11	711	· 754	るっ	~ 1	i 平冊 つ. <del>-</del>	解	黔牛	展件	531 532	安烱	奶烃	姑嫁	姚顺	敗取	姆婢	女埜	姗	妈妈		602 603	怕椒	柳柳	松	饵摆	保棒	体控	怕 棋	他料	一学	10 棋	į
466	瑠	塁	涙				伶隷	例	冷	励	533			媽	嫣	嫗	嫦嬪	嫩	嫖			604	榿	槁	槓	榾	槎	寨榕	槊	槝	禄	槃	4
467	嶺	恰	垚	礼	茶	鈴	隷	零	霊	麗	534	嬌	嬋	嬖	嬲	嫐	嬪	嬶	嬾	孃	孅	605	榧	樮	榑	榠	榜	榕	榴	槞	槨	樂	
468 469					野聯		裂	康	忩	海	535 536	孀學	孑辛	学 孺	子中	字中		核定	挑宏	学虫	卵定	606 607	樛緇	1 1 1	惟粉	<b>悸</b>	伽婉	槧	<b>似</b>	<b>核</b>	恒擂	版标	į.
470	//生	準	連	錬	i i	'					537	主	寐	寤	實	寢	宦寞	寥	鬼寫	寇寰	賨	608	襊	福	橇	樇	橙	樣橦	橈	樸	楊	檐	
		_			_ ;	3	14	-	-		538	寳	尅	將	專	對	尓	尠	尤	尨	P	609	檍	檠	檄	檢	檣						
470 471	霏	坐	患	首の	皇	唇的	櫓楼	炉椒	船 油	路泥	539 540	ヂ	胵	層	屎	順屬	屮	ılıl	岩	峠	岩	610 611	櫑	<b>架</b>	檗鄉	艦網	櫃椰	櫂櫻	<b>一段</b>	預藤	橡棒	椭綱	į.
472	幹	狼	筝	老	龍	蝉	郎	光	<b>松麓</b>	掃禄	541	岑	岱				帕					612	欖	鬱	欟	欸	、欷	盗	欹	飮	歇	面	3
473		録					ľ				542	峇	峙	螆	本	俥	峭	嶌	峪	崋	崕	613	歉					歟殕					
473				ほ		b I≣∓	歪	B±	肋力	卍	543 544		嵜品	金岬	~~~	昆出	崔嵳			崙		614		珍	殃	好九	矮肌	殕殼	頒	%	殪	ダン	!
473 474	枠	瞽	ব				正藁				544 545						差隆				哻巍	615 616	/項	/取亭	趣香	又	放摩	双郵	殿は	一	斯	毛無	į.
475	碗	鷲腕	_	_	- m·J	"	*	173/	176	~	546	巓	巒	巖	<b>(((</b>	巫	己	巵	帋	帚	帙	617	氣	汞	汕	汪	汪	氈沂	菹	沚	沁	沂	í
476											547	帑	帛	帶	帷	幄	幃	幀	幎	幗		618						泄	泱	泓	沽	泗	1
477 478											548 549	幟庫			幇廐		开	X	墜	J	庠	619 620	泅	<b>冰</b>	进	1	海	泪	溏	衍	流	i Sufr	ıl
479											550		廖	廣	廝	廚	廛	廢	廡	廨	廩	621	洽	:#	<b>*</b>	泊	1 35⊓	洒	汤	湟	:吕	÷.	3
480	_	类	丐	平	<b>介</b>	<u></u>	舒	井	ļ	쏬	551	廬	廱	廳	廰	廴	廸弭	壯	弃	弉	彝	622	浚	浹	浙	涎	涕	海淬	涅	淹	渕	謎	1
481 482	乖	乘士	副	ļ	豚	手向	舒从	式你	十	꺞	552 553	彜纞	て変	弑 b	드	<b>弩</b>	弭彙	姗彡	份衫	弾	彌壮	623 624	汹步	<b>洪</b>	<b>淦</b>	心	清	淬淪	松光	消	净油	凄	
482 483	份	仗	何	切	毛任	价	位	供	估	佛	554	徃	祖	ユ佛	※ 個	很	老徑	を	弘從	徙	徘	625	渙	浅湲	<b>冰</b>	が渾	渣	洲湫	/ 漢	/月浪	活	卢湾	5
484	佝	佗	佇	佶	侈	侏	(住	佻	佩	佰	555	徠	徨	徭	徼	忖	徑忻:	性	忸	忱	忝	626	湃	渺	湎	渤	滿	湫渝	游	溂	溪	洼	i
485	侑	佯	來	侖	ì儘	倪	人俟	俎	俘	俛	556 557	悳	忿	怡	恠	怙	怐	怩	怎	怱	怛	627	滉	溷	滓	溽	溯	倉	溲	滔	滕	溏	Ī
486 487	一件	1 4	化化	保得	1 信	向伯	<b>据</b>	加俯	們們	促備	557 558	悩盤	师恆	州州	大次	が特	恚恤	福	居	心恫	哨羔	628 629		污漱	<b>冯</b>	想	八八八八八八八八八八八八八八八八八八八八八八八八八八八八八八八八八八八八八八八	灌	浥	計	冺	. 宋	1
.5,	1.5	11	N	-	)	-		1/13	n J	1111	550	(AN)	124	170	,,,	14	lant	179	111	11/3	•ن•		, 5	-12/	,113	132	· ///				-	_	J

14-10 14-11

First Three			Las	t Dig	it			First Three				La	st D	igit				First Three				Las	st Di	igit			
First Three Digits	0 1	2	3 4	5	6	7 8	9	Digits	0	1	2	3	4	5 6	7	8	9	Digits	0	1	2	3 4	1 5	6	7	8	9
630						澁 溜		701	罟					<b>莳蘿</b>				772	躊		躑						
631	潜潜	潭	敦潼	潘	澎	酒源	潦	702	羇	羌	恙	羞	抵美	令羣	羯	羲	羹	773			軅						
632 633	澳澣濔濘	深沙	幸脂	頂油	冷油	齊濕	溶	703 704	羹翦	羶	照殴	語類	翅き	2 球	弱老	翔主	新虾	774 775	軾輌		輅轉						輛轉
634	溜濾			極		戏游游		704 705	親耙					正聊				776	轆		轗						特辣
635	激灑	灣	炙炒	加	烱	炬炸	炳	706	聚	智	聢	聯	<b>從</b>	學聪	聶	聹	聽	777			亡	中认	何 记	直通	뇴	濔	迎
636	炮烟	烋 :	烝 烷	清	烽!	焜焙	燥	707	聿	肄	肆	肅	Ιī	育 肚	: 肭	冐	肬	778	逅	迹	迺i	述 ぇ	坚适	建進	逞	逖	逋
637	熙熙	煦	<b></b>	煖	煬	熏燻	熄	708						丕 胖	脉	胯	胱	779	逧	逶	逵	達記	<u>#</u> ,,			ų.	
638	熕熨	烈	阴景	熾	焼!	燉煤	燎	709	脛	脩	唇	脯	<b>浟</b>	広 日光	RZ±	ЯΒ	110	780 701	油		遐	星点	西 追	里追			
639 640	燠燬				璺	争爬	全	710 711	腦	阴脚	<b>腆</b>	<b>膵</b>	折り	府 胼 旁 膂	腱膠	版眼	胜睡	781 782	逃邊		遯涎	蹇 阴 甘	退火	星遊	遽以		邀扈
641	爲爻	俎:	第 捐	牆	凝	賣物	牾	712	膣	腔	膓	膩	番用	革膾	膸	膽	層	783	郭	鄂	鄒言	乳点	18 类	B 面	一酰	設	副
642	犂犁	犇	搞單	犢	犠	犹初	' 狃	713	臂	膺	臉	臍	臑服	燕鵩	臈	臚	臟	784	稇	酩	醋	轻音	哲	桶卒	醯	醫	醯
643	独 独	狎	佛祭	狠	狡	狹犯	倏	714	臠	臧	臺	臻!	貝	早春	男	與	舊曲	785	醪	醵	醴	1 1	要り	和	釋	釐仙	釰
644 645	猗 猊 獎 獏			孫獨		<b>娃 张</b> 獸 獲		715 716	舍婦	加藤	翻線	が対象	切り	可船	が	娼師	<b>쌙</b>	786 787	釟纽	金	釛釒鉞釒	砂量	又到	巴動	<b>動</b>	砂锤	釟
646						<b>飘</b> 珞		717	層	艸	华		望点	蒙提	温	紫	数	788	鞝	鉐	斷	铁金	그 소	五野	談	絲	銷
647	琅瑯							718	苣	芍	<b>幢</b> 艾苒	苴	茎花	事毎	范	符	苯	789		錏	鋺翁	諒 釒	固				
648	瑁 瑜				瑶:	瑾璋	璞	719	苞	亚	首	茉:	苙					790		錙	錢翁	錚釒	發金	苦銷	錻	鍜	鍠
649	璧瓊				西市	50 TI	ᄧ	720 721	<del>/  </del> -	茵	茴	茖:	经工	平 石	如		荅	791		鍮	銀金	经金	局量	具鋒	鎹	鏧	鏗一
650 651	领 瓷 甄		正凡遲圓			瓰 甕 甓		721 722	[[古	茫莎	茗苗	新 1 井 2	立 差 差	连载	含劳	莢苯	坐前	792 793			鏘鐇鐇						
652	甦講	里				電影配	备	723	莫莨	卷	置	莊蓋	が記れ	<b>豆</b> 豆 豆 荬	菘	萋	書	794	鑒	鑄	鑛釒	樂翁	慮鉛	紅鎚	鈩	鑰	
653	畩畤	畧 3	畫 鸱	ミ畸	當	疆畼	畴	724	菷	萇	菠	菲	萍 氵	包郁	莽	萸	蔆	795	鑷	鑽	鑚釒	羅翁	<b>赴</b>	星鑿	門	閇	閊
654	疊罍	叠	宁疫	- 迎	<u>乔</u>	疣痂	疳	725	菻蒂	葭	萪	萼 :	夢見	<b>芭蕾</b>	葫	蒭	葮	796	閔		闡	制		耳			閻
655 656	泫 疵 痣 痞					<b>產痒</b>		726 727	帯蒿		保蓙	禺 蓍	約方	色唇唇			棄	797 798	閹關		闊澤	間開降	<b>到限</b>	冒険	闕	闔	闖
657	远癌							727	高蒡	蜘薮		育 蓴		多群葵蔬			篦蔔	799			陷陷			e pi	- PIL	収	РП
658	瘰 瘻	癇	喪 搒	癝	癘	癡癢	癨	729	蓼	蕀	蕣		蕈 '	D. 11/11	, ,,,	.113	ш	800	FIS		陟			瓦隆	隘	隕	隗
659	癩癪	癧	蘚瘤	Ĭ.				730		蕁				蓝 薤			薊	801		隧	隱	隲 [	暴隋	龍隶	隸	隹	雎
660	癲		癸發			飯皋		731	薨	蕭		軽!	數 7	<b>酸 蔚</b>	預	璽	薐	802		雑	雍	集業	生習	『雕	電	霄	
661 662	皖皓盍盖	盒	逗风	数量	軟点	皹鄒盪	盎	732 733	藉茲	齊茲	藏蘋			萬藝				803 804	霈霹	霓霽	霎霜	<b>落り</b>	軍事	英語	雷	霪蘚	霰隻
663	酰酚							734	温虍	焦	虎	想	断	虱蚓	いい	當	料	805		顫	靨	勒革					
664	眸睇	睚	倪閱	睛	睥	睿 睾	睹	735	蚋	蚌	蚶	蚯蚓	蛄虫	姐蚰	蛉	蠣	蚫	806	靺	鞆	鞋	军革	卡勒	<b>占鞋</b>	鞦	鞣	鞳
665	瞎瞋	瞑	崖崩	瞰	瞶	愛瞿	瞼	736						朱 蛯			蜈	807	鞴		韆						竟
666 667	瞽瞻	職 !	隻 龌	腾	<b></b>	矣 矮	仙	737 738	蜀雌	蜃蛙	蚁	蛋児	野 非 n	余蛹	駲	畅	颗帽	808 809		韶	頑 紅	頂頭		語	額	頽	. 粗
668	砌砒碚碌	破 福	山脈	福	温	阳岩	硼碎	739			乳蝨			田本	" " " " " " " " " " " " " " " " " " "	3111	知	810	织		朝朝			可同	圃	酮	飅
669	碾碼	磅	品型	- MI		-10 -02		740	2773		蝣		蠅鱼	~ 螟	螂	螯	蟋	811	飆	純	飫	较能	向館	妥館	餘	餡	餝
670		磚	曉硁	礇		礑礙		741		蟀	蟐	雖	螫	蛰 螳	墓	蟆	螻	812	餞	餤	餠飠	湖名	全自	电解	饂	饉	饅
671	礫祀							742	蟯					詹螺				813	饐		饑	<b>美</b> 自	共 强	を加	酸	馥	
672 673	禊禝秕秧			禮		禹禺租租		743 744			蠕衒	蠢酒	雞 智	<b>鹽 劉</b> 斯衫	臺	竈金	蠻袞	814 815	馮駲		駟駸	駛舞	比斯甘斯	無難	縣	取寒	駱騷
674	稟禀							745	袖	衽	袵	衲	狭衫	<b>学</b> 社	袮	袙	袢	816	驅	驂	驀	票馬	累馬	香騯	驛	驗	驟
675	穢穩	龝	襄穹	穽竅	窈	窗窕	窘	746	袍裝	袤	袰	桂	袱衫	卡裄	裔	裘	裙	817	驢	驥	驤	獾点	馬騆	量骨	骰	骼	髀
676	窖窩	電	至 窶	薂	竄	隆邃	寶	747	裝	褁	褂	裼:	装衫	卑袖	褄	葎	褊	818	髏		髓帽	體育	県 長	纟髢	髣	髦	髯
677 678	竊針竦竭	班!	分別なな	监监	好	<b>蚁</b> 华	<b>埃</b>	748 749	休油	<b>蛟</b>	温禅	(将 )	悠 (2	虒襁	表	豛	慆	819 820	髫	髮髮	第 4	<b>電影</b>	医毛	2 E2	鬛	EE	鬧
679		笨	え グ	1	_	笳笘	至	749 750	佞			福福		親裸	襷	襾	覃	821	鬨	薗	鬆調	受利	貨幣	高明	慰魃	魏	魍魍
680	筺	笄	笛 笋	<b>荃</b>	筅	筵筥	筴	751		覊	覓	覘	現者	現 戫	覬	覯	覲	822	魎	魑	魘怠	紡魚	作魚	平触	鮖	鮗	鮟
681	<b>筧</b> 筰	筱	笺 筮	E 箝	箘	箟 箍	箜	752	覺		覿	觀	狐岩	当觛	鮮	觴	觸	823			鮴魚						鯒
682 683	箚 箋 歳 篆	<b>等</b>	爭爭等	箙簑	医管		篏簣	753 754	戜	訖詆	탈	計	北	牙訊后詢	割	盟	탩	824 825	鯣鰔		鯤鯛	鯔魚	非無	がいません	:鯱	彩紅	鰕鰮
684	<b>感 家</b> 簇 簓	華	17 多	装簍	<b>能</b>	<b>栗 龍</b> 簣 簣	簪	754 755	器	融	靠	<b>松</b>	北直	卢 武	旅諄	がいい	<b>杯</b> 韵	825 826			鰤鰤	留館	神師	本影	※	鄭	
685	簟簷	簫	簽籌	籃	籔	籏籀	籐	756	諚	諫	諳	譜	谔	章謔	證	譁	諷	827	鱠	鱧	鱶魚	廬 星	見り	. · · · · · · · · · · · · · · · · · · ·	鴉	鴈	鳫
686	籘籟	籤	簽議	籬	* :	料 籽	幽	757	諞	諛	謌	謇		章 謔 蓋	謐	謗	謡	828	鴃	鳩	鴪	農油	警古	島氏	鵄	鴕	鴒
687	<b>給料網</b>	和	阿籽	粳	粲	粱 糕	粹	758 750	謳	鞫	警	調	曼	莫譯	譌	譏	謪	829	鸡	鴿	鴾征	斯耳	馬車	함 유수	# # #	台台	由自
688 689	/ 旅	採 :	性材料	K 利用 F	深	候 譚	檽	759 760	豆	音	譛譬	譯	谱	學讀	莎	餅	諍	830 831	鶇	鵝蝗	鷲鵺	% 胃	与型	可與	<b></b> 弱	<b>新</b>	鶇體
690	新	統	計 🕉	三細	紡	紮 絣	給	761	讓	讖	讙	讚	谺訁	谷谿	豈	豌	豎	832	鶸	鶺	鷆	鷌系	馬竇	き顔	鶺	鷦	鷭
691	<b>紵經絡</b>	絳	光新	7絲	絨	絮絲	絣	762	豐	豕	豢	豬	3	分別	貉	貅	貊	833	鷾	鷽	鸚麒	鵠剣		國朝	鹽	麁	麈
692	經綉	係	後 独 神	級	綺	緊維	綵	763 764	2	親	羅	豼!	渠 見	<b>戊</b> 盾	貪夾	貽	貨暖	834	麋	慶麻	麒	雪野	きょう	多多	麩	麸	麪
693 694	湘 紀 紀	終維	配納紹	加納	林!	補給	相	764 765	頂埔	具、	赵	貝!	貝貝	<b>支</b> 賣	貨牌	養恋	無減	835 836	翅畔	離	譽二	<b>於</b> 3	白彩	<b>有 馬克里</b>		新	黝淵
695	緘緝縡縒	縱	唇紅	育組	縢	繆紹	麼	766	鮮	晶	語	報	猪	(龍之)	彩	翔	證	837	睸	<b>松</b>	(黨體	波	は対け	"鼬	鼾	齊	嚴
696	縵 縹	繃	樓絲	<b>某縺</b>	繧	繝繝	〔繞	767	趾	跌	跏	跚	拓鼠	失跛	跋	跪	跫	838	齔	齣	齟	韶麗	帘 薗	鐇男	醅	齪	齷
697	繙繚辮繿	繹	會網	1 機	繻	續級	繽	768	뫲	浒.	缿	踈 i	银证	走 踑	踞	踐	踟	839	齲	鳄	龕損	龍 育	朝	5 Kr	,		
698 699	辮繿	編	質粒缸缸	櫏	級:	桜機	組成	769 770	踩	理事	踰	<b>娚</b>	送	舀蹙	. ISW	品中	贮	840		芫	惧;	鱼步	击力	ま !!!	1		
700	小以縣。	型 型	量量	罐	网:	罕民	果	770 771	蹣	定理	蹶	蹲	選品	日定	~~~	<b>聯</b>	小陸										
. 00	7	т 1	MS	- ME		, ,-,	-11		⊭Ω	-	#/A	- J I	~ 4	-r re		Æ	-11		L		_						

# **Specifications**

#### ■ V302SH

Weight	Approximately 90 g (with battery)
Continuous Call Time	Approximately 140 minutes
Continuous Standby Time	Approximately 450 hours (with handset closed)
Charging Time (Power off)	Rapid Charger: Approximately 115 minutes In-Car Charger: Approximately 115 minutes
Dimensions (W x H x D)	Approximately 46 x 24 x 92 mm (with handset closed)
Maximum Output	0.8 W

- Continuous Call Time is an average measured with a new, fully charged battery, with both Power Saving and Panel Saving off, with stable signals. Continuous Call Time may be less than half this value if handset is out-of-range or signal is weak. Continuous Standby Time is an average measured with a new, fully charged battery, with handset closed without calls or operations, in Standby with stable signals. Standby Time may be less than half this value if handset is out-of-range or signal is weak. Standby Time may vary by environment (battery status, temperature, etc.).
- Call Time and Standby Time decrease with frequent use of Display/Keypad Backlights.
- Call Time and Standby Time may decrease when a V-Application is active.
- Station service may consume more power through automatic updates.
- Call Time and Standby Time decrease with handset use in poor signal conditions (see **P.1-11** "Battery Time").
- Display employs precision technology. However, some pixels may appear brighter or darker.

penc

14-12 14-13

(without protruding parts)

# Index

Numbers	Call Functions8-2
3 Way Calling13-7	Call History2-14 Call in Progress2-15
90° turn (Picture Effect)9-18	Call Time2-19
Δ	Call Waiting 13-6
Accept Call	Caller ID (sending/blocking)       2-2         calls (ending)       2-2         calls (placing)       2-2, 2-7         Camera mode       6-5, 6-7         Cancel Secretary       13-3, 13-4         Center Access Code       1-26         Character Code (entering)       4-9         Check Secretary       13-3, 13-5         Clock Display       7-3         Clock Settings       1-20         Close to End Call       2-3         Combine Split Mail       9-22         Composite       9-20         Confirm Service (Call Waiting)       13-6         Copy (text)       4-17         Create QR Code       12-27         cursor       1-20         Cut (images)       9-14         Cut (text)       4-17
Backlight7-7	D
battery	Data Folder       9-3         Delayed Ringer       2-10         Delete Posterior/Previous       4-17         Disney Style       7-10         Display       1-7         Display Images       7-5         Display Patterns       7-6
С	E-Animation9-6
Calculator       12-29         Calendar       7-3         Calendar (creating)       6-26         Call Charge       2-20	Earpiece Volume       2-11         Emoticons       4-8         English       7-9

Call Forwarding ......13-3

Call Functions8-2
Call History 2-14
Call in Progress2-15
Call Time 2-19
Call Waiting13-6
Caller ID (sending/blocking)2-2
calls (ending)2-2
calls (placing)2-2, 2-7
Camera mode6-5, 6-7
Cancel Secretary 13-3, 13-4
Center Access Code 1-26
Character Code (entering)4-9
Character Code (list)14-9
Check Secretary13-3, 13-5
Clock Display7-3
Clock Settings1-20
Close to End Call2-3
Combine Split Mail9-22
Composite 9-20
Confirm Service (Call Waiting) 13-6
Copy (text) 4-17
Create QR Code12-27
cursor1-20
Cut (images) 9-14
Cut (text) 4-17
D
Data Folder 9-3
Delayed Ringer2-10
Delete Posterior/Previous 4-17
Disney Style7-10
Display 1-7
Display Images7-5
Display Patterns7-6
E
F-Animation 9-6

**Appendix** 

F	Incoming Tone9-23	N	Push Tones12-2
	Index Menu1-21		Q
ace Arrange	Indicator Bar (Display Patterns)7-6	Notepad Memory2-13	
AX transmissions 12-33	Infrared10-2	0	Quick Conversion 4-13
ile Cabinet9-2	Input Method4-10	Off-Line Mode3-6	Quick Operations1-24
onts	Instrument Effects8-16	One Hiragana Predictive Entry4-14	Quick Silent2-6
forward Voice Mail 2-9, 13-4	International Call2-5	One Hiragana Word Call4-14	R
rame (saved image)9-18	K	One-Hiragana Conversion4-12	Rapid Charger 1-16
rame (Sha-mail mode) 6-10	Katakana Search (Phone Book)5-13	Original Size (Camera mode image)6-21	Redial2-4, 2-14
unction List 14-2	· · · · · · · · · · · · · · · · · · ·	Original Tones8-8	Reject Call11-5
unctions Menu1-22	key assignments (text entry)4-3	Original Voice8-7	Reset All11-7
G	Key Guard1-19	out-of-range14-8	Reset Defaults11-7
Group Ring Tone (Phone Book) 5-16	Key Ops Guide (mobile camera) 6-20	Owner Profile2-21	Reset Learning4-14
Group Search (Phone Book)5-12	Keypad Lock11-2		Restrict Dial11-4
Group Settings (Phone Book) 5-16	Kitchen Timer12-24	P	Ring Time8-5
Guide 1-25	L	Pager Code (entering)4-10	Ring Time
Guide Keys (Display Patterns) 7-6	Language7-9	Pager Code (list)4-11	(Call Forwarding & Voice Mail)13-5
duide Keys (Display Fatterns) 1-0	LED Indicator (for sounds)8-4	Panel Saving12-28	Ringer Out12-33
Н	Lens Effects6-11	Paste4-17	Rotate Thumb (Camera mode image) 6-7
andset codes 1-26		PC transmissions12-33	notate Thumb (Camera mode image) 6-7
andset phone number	Light Settings7-7	Pen Light12-31	S
(opening My Number) 2-21	List (Data Folder files)9-3, 9-5	Personal Data5-4	Save As Thumb
landy Features1-22	List File Names9-4	Personal Ring Tone5-10	(Camera mode image)6-7
eadphones12-32	M	Phone Book (deleting entries)5-15	Save Dictionary4-16
liragana to Katakana/	mail address (Phone Book)5-3	Phone Book (editing)5-15	Save to
Alphanumerics Conversion 4-13	Mail Folder (Phone Book)5-10	Phone Book (saving)5-3	Scan Code12-25
old (incoming calls)2-8	Manner Mode3-3	Phone Book (searching)5-12	Schedule 12-13
	Memory No5-5	Phone Book5-2	Screen Animation7-10
l l	Memory No. Search5-13	Phone Book Entry List5-11, 5-14	Search by Reading (Phone Book)5-13
mage Quality 6-18	Memory Status (File Cabinet)6-22, 9-2	Phone Book Entry List with images5-14	Secret Mode (Data Folder)9-24
mage Size (mobile camera) 6-18	Memory Status (Phone Book)5-8	Phone Book Lock11-3	Secret Mode (Phone Book) 11-6
mages (changing file format)6-19, 9-19	menu1-21	Phonetic Conversion4-12	Security Code 1-26
mages (editing) 9-12	Menu Design (Display Patterns)7-6	Photo (Phone Book)5-6	Select Mode (mobile camera) 6-20
mage Decoration9-15	Merge Panorama9-21	Pictographs4-7	Self Timer 6-9
nbox Auto Sort5-10	Message Recorder2-9, 12-4	Picture Call/Mail5-6	Send All Push Tones12-2
n-Car Backlight 7-7	Mic Settings (mobile camera)6-19	Play Voice Mail13-5	Send With Code2-5
n-Car Charger 1-17	Missed Calls2-15	Postcard6-25	Sent Auto Sort5-10
n-Car Recorder 12-4	mobile camera6-2	Power On Message7-9	Set IR Password10-3
ncoming calls2-6	Mobile Light6-17	power on/off1-18	Set LED to Sound 8-6
ncoming calls (answering) 2-6	Moving Photo Frame9-19	Power On/Off (Sound Effects)8-5	Sha-mail mode6-5, 6-7
ncoming calls (Call Waiting) 13-6	Multi Selectori	Power Saving12-28	Show Indicators7-2
ncoming calls (rejecting) 2-8	My Voice Memo12-6	Predictive (conversion)4-5	Show Thumbnails
ncoming Light 7-10	•	Previous Usage (conversion)4-5	(Camera mode image)6-21
ncoming Notice5-10		Property 9-8	Shutter Click 6-16

Side Key	i
Side Key Settings12	2-3
Signal Alert12	2-2
Signal Strength (Display Patterns) 7	7-6
signal strength indicator1	1-7
Simple Animation	<del>)</del> -8
Simple Mode 2-	16
Slide Show 9-	12
Small Light1	1-6
Snooze 12	2-8
Soft Focus6-	
Soft Key 1-	
Sound Effects 8	
Sound Volume	3-6
Speaker 8-	
Speaker Phone8-	
Speed Dial 5-	
Spending Memo12-	
Split Image9-	19
Standby1-	
Stopwatch12-	
Sub Display1-9, 7	
Switch Line (3 Way Calling) 13	
Symbols4	1-7
T	
text (deleting) 4-	16
text (editing) 4-	16
text (entering)	1-4
text (entry modes)	1-2
Text Memo 4-	18
Title Bars (Display Patterns)	7-6
Toggle Preview6-	
Tone Octave8-	
Total Charges2-	
Total Talk Time2-	19
U	
Useful Diary12-	20
User Dictionary4-	
V	
V-Appli Vibration	) F
V-Annli Vihration	

Vibration Pattern...... 8-4

Vodafone live! Animation         7-9           Voice Mail         13-4           Voice Memo         12-6
W
Wallpaper7-2
Wallpaper mode6-5, 6-7
Wallpaper Size6-23
Whisper Mode3-5
Z
zoom6-5

# **Warranty & After-Sales Services**

#### ■ Warranty

Warranty is provided when you purchase V302SH.

- Check the name of distributor and date of purchase.
- Read through contents and keep in a safe place.
- The warranty term is described in the warranty.

#### After-Sales Services

See **P.14-6** "Troubleshooting" before contacting us for repair. If you cannot find solutions or solve problems, contact Vodafone Customer Center, Customer Assistance (see **P.14-20**) of your subscription area and provide detailed description.

- During the warranty term, the repair is performed under the terms and conditions described in the warranty.
- After the warranty term, repairs are performed if possible upon your request at your expense.

For other services, contact the distributor, the nearest **Vodafone shop** or **Vodafone Customer Center, General Information** (see **P.14-20**). Replacement parts are available for 6 years after termination of production.



- Vodafone is not liable for any damages resulting from use of this product.
- Vodafone is not liable for any damages resulting from accidental loss/alteration of handset data. Please keep a separate record of Phone Book entries, etc.
- Disassembling or modifying handset may violate the Radio Law. Modified handset will not be repaired.

>

# **Customer Service**

If you have questions about Vodafone handsets or services, please call General Information. For repairs, please call Customer Assistance.

#### **Vodafone Customer Centers**

From a Vodafone handset, dial toll free at 157 for General Information or 113 for Customer Assistance

#### ■ Call these numbers toll free from landlines

Subscription Area	Service Center	Phone Number		
Hokkaido, Aomori, Akita, Iwate, Yamagata, Miyagi, Fukushima, Niigata, Tokyo, Kanagawa, Chiba,	General Information	<b>(</b> a) 0088-240-157		
Saitama, Ibaraki, Tochigi, Gunma, Yamanashi, Nagano, Toyama, Ishikawa, Fukui	Customer Assistance	<b>(</b> a) 0088-240-113		
Ajobi Cifu Mio Shizueko	General Information	<b>6</b> 0088-241-157		
Aichi, Gifu, Mie, Shizuoka	Customer Assistance	<b>6</b> 0088-241-113		
	General Information	<b>6</b> 0088-242-157		
Osaka, Hyogo, Kyoto, Nara, Shiga, Wakayama	Customer Assistance	<b>6</b> 0088-242-113		
	General Information	<b>6</b> 0088-259-157		
Hiroshima, Okayama, Yamaguchi, Tottori, Shimane	Customer Assistance	© 0088-259-113		
F	General Information	<b>6</b> 0088-247-157		
Tokushima, Kagawa, Ehime, Kochi	Customer Assistance	<b>6</b> 0088-247-113		
Fukuoka, Saga, Nagasaki, Oita, Kumamoto, Miyazaki,	General Information	© 0088-250-157		
Kagoshima, Okinawa	Customer Assistance	<b>6</b> 0088-250-113		

2

# V302SH Instruction Manual Basic Operations

October 2005, First Edition Vodafone K.K.

For additional information, please visit a Vodafone shop.

Model: V302SH

**Manufacturer: SHARP Corporation** 



Please help the mobile industry maintain high environmental standards. Recycle your old handsets, batteries and charger units (all manufacturers and brands). Before you recycle, please remember these important points:

- Handset, batteries and chargers submitted for recycling cannot be returned.
- Always be sure to erase all data recorded on old handsets (Phone Book entries, call records, mail, etc.) before recycling.

#### Introduction

Thank you for purchasing the V302SH.

- For proper handset use, read this manual beforehand.
- This manual has been produced for V302SH Vodafone live!
- Keep this manual in a convenient place for reference.
- Accessible Vodafone services may vary by service area, subscription, etc.

V302SH transmits at 1.5 GHz and is compatible with the Vodafone K.K. network.

This product is exclusively for use in Japan.

#### Note

- Copying this manual in whole or part without authorization is prohibited.
- Manual content is subject to change without prior notice.
- Efforts have been made to ensure the accuracy and clarity of this manual. Please contact Customer Service, General Information (see P.16-15) concerning unclear or missing information.

# **Symbols**


#### **Multi Selector**

Use Multi Selector to select menu items, move cursor, scroll, etc.

In this manual, Multi Selector operations are indicated as shown to the right.


Basic Multi Selector Operations

- ③: Press ⑤ or ۞
- • Press or •
- . Press ., ., . or ..

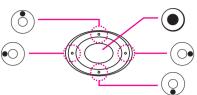

#### Side Key

Use Side Key to activate specified functions with handset closed or to release shutter. In this manual, Side Key is indicated as shown to the right. "S" is not inscribed on the actual Side Key.

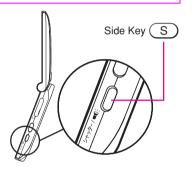



- In this manual, most operations are described with handset open.
- Sample screen shots, etc. are provided for reference only. Actual handset windows, menus, etc. may differ in appearance.


i

#### Page References

When Basic appears next to a page reference, indicated pages are in Basic Operations Manual. When only a page reference appears, indicated pages are in Vodafone live! Manual.

#### **Abbreviated Steps**

Handset operations starting from Index Menu are abbreviated as follows:

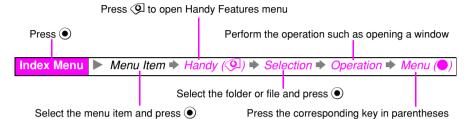

MEMC

ii iii

# **Contents**

Symbolsiv			
	Vodafone live! Overview		
Vodafone live! Overview	Vodafone live! Basics		
	Mail		
2 New Mail	Opening New Messages         2-4           ■ Inbox         2-5           ■ Retrieving Long Mail         2-7           Sky Melody         2-7           ■ Requesting Melody Files         2-7           ■ Saving to Data Folder         2-8		
3 Sending Text Messages	Creating Text Messages       3-2         ■ Procedure       3-2         ■ Creating & Sending a Message       3-3         ■ Attaching Images & Sounds       3-7         ■ Saving to Outbox       3-10         Option Settings       3-10         ● PIN       3-10         ● Privacy Level       3-11         ● Set Priority       3-11         ● Polling       3-11         ● Recipient Type       3-11         Save as Auto Send       3-12         ■ Add Address       3-12         ■ Creating & Sending       3-13         Mail Templates       3-14         ■ Saving Mail Templates       3-14         ■ Using Mail Templates       3-15         One-Shot Mail       3-16         ■ Saving One-Shot Mail with Handset Closed       3-16         Greeting       3-17		

Mail Box	Checking Messages4-2
4	Using Received Messages4-6
_	Replying to Messages4-6
	Forwarding Messages4-6
	Resending Messages4-7
	Linked Info4-7
	Protecting Messages4-9
	Deleting Messages4-10
	Chat Mail Log4-12
	Saving Members4-12
	Opening Chat Mail Log4-13
	Mail Folders4-14
	■ Mail Box Layout4-14
	Folder Name4-14
	Secret Mode4-15
	■ Moving Messages4-16
	Sorting to Folders Automatically4-17
	Confirm Delivery & Cancel Delivery4-18
	Sending from Outbox4-19
	Sending a Message4-19
	Send Continuously4-19
	Attachments4-20
	Saving Attachments to Data Folder4-20
	■ Wallpaper & Display Images4-21
	Other Function4-22
	Sound Auto Play4-22
	Mail Box/Message Menu4-22
	Combining Split Mail Images4-22
	■ Mail Box Menu4-23
	Show/Display Address4-23
	<ul><li>List4-23</li></ul>
	■ Message Menu4-23
	Opy4-23
	Display Size4-23
Server Mail	Unretrieved List5-2
Server Mail	Acquire Mail List5-2
	Retrieving Selected Messages5-3
	Deleting Unretrieved List Messages5-3
	Server Mail5-4
	Deleting Server Mail5-4

C Mail	Basic Settings 6-2
Settings	Mail Notice6-2
Settings	Onfirm Delivery 6-2
	<ul><li>Auto Send 6-2</li></ul>
	<ul><li>Custom Fixed Text (Japanese Only) 6-2</li></ul>
	Long Mail Settings6-3
	Additional Settings 6-3
	<ul><li>Save &amp; Send Image 6-3</li></ul>
	<ul><li>Auto Retrieve6-3</li></ul>
	Sky Mail Settings 6-3
	PIN Filter6-3
	Address Filter6-4
	Additional Settings 6-5
	Set Priority6-5
	• Sender 6-5
	BBS6-5
	• BBS 6-6
	Saving Messages6-6
	Resetting Mail & Access Points6-7
	• Reset
	• Delete All
	Access Points 6-7
	Web
Web Basics	Getting Started7-4
	Web Content7-4
	■ Information Types7-5
	Using Web7-6
	Using Web
	Using Web
	Using Web
	Using Web       7-6         ■ Opening Vodafone Web Menu       7-6         ■ Entering URLs Directly       7-7         Basic Operations       7-8         Auto Delivery Service       7-10
	Using Web
Advanced	Using Web       7-6         ■ Opening Vodafone Web Menu       7-6         ■ Entering URLs Directly       7-7         Basic Operations       7-8         Auto Delivery Service       7-10         ■ Received Information       7-10         Favorites, Storage Type & Bookmarks       8-2
	Using Web       7-6         ■ Opening Vodafone Web Menu       7-6         ■ Entering URLs Directly       7-7         Basic Operations       7-8         Auto Delivery Service       7-10         ■ Received Information       7-10         Favorites, Storage Type & Bookmarks       8-2         ■ Saving Information & URLs       8-2
8 Advanced Features	Using Web       7-6         ■ Opening Vodafone Web Menu       7-6         ■ Entering URLs Directly       7-7         Basic Operations       7-8         Auto Delivery Service       7-10         ■ Received Information       7-10         Favorites, Storage Type & Bookmarks       8-2         ■ Saving Information & URLs       8-2         ■ Opening Saved Info & Links       8-3
	Using Web       7-6         ■ Opening Vodafone Web Menu       7-6         ■ Entering URLs Directly       7-7         Basic Operations       7-8         Auto Delivery Service       7-10         ■ Received Information       7-10         Favorites, Storage Type & Bookmarks       8-2         ■ Saving Information & URLs       8-2         ■ Opening Saved Info & Links       8-3         ■ Editing & Deleting       8-4
	Using Web       7-6         ■ Opening Vodafone Web Menu       7-6         ■ Entering URLs Directly       7-7         Basic Operations       7-8         Auto Delivery Service       7-10         ■ Received Information       7-10         Favorites, Storage Type & Bookmarks       8-2         ■ Saving Information & URLs       8-2         ■ Opening Saved Info & Links       8-3         ■ Editing & Deleting       8-4         Using Linked Info       8-5
	Using Web       7-6         ■ Opening Vodafone Web Menu       7-6         ■ Entering URLs Directly       7-7         Basic Operations       7-8         Auto Delivery Service       7-10         ■ Received Information       7-10         Favorites, Storage Type & Bookmarks       8-2         ■ Saving Information & URLs       8-2         ■ Opening Saved Info & Links       8-3         ■ Editing & Deleting       8-4         Using Linked Info       8-5         Images       8-5
	Using Web       7-6         ■ Opening Vodafone Web Menu       7-6         ■ Entering URLs Directly       7-7         Basic Operations       7-8         Auto Delivery Service       7-10         ■ Received Information       7-10         Favorites, Storage Type & Bookmarks       8-2         ■ Saving Information & URLs       8-2         ■ Opening Saved Info & Links       8-3         ■ Editing & Deleting       8-4         Using Linked Info       8-5         ■ Saving to Data Folder       8-5
	Using Web       7-6         ■ Opening Vodafone Web Menu       7-6         ■ Entering URLs Directly       7-7         Basic Operations       7-8         Auto Delivery Service       7-10         ■ Received Information       7-10         Favorites, Storage Type & Bookmarks       8-2         ■ Saving Information & URLs       8-2         ■ Opening Saved Info & Links       8-3         ■ Editing & Deleting       8-4         Using Linked Info       8-5         Images       8-5

	Melody Files
	■ Title & Version
∩ Web	Sub Menu Settings9-2
<u> </u>	Set Display Size9-2
Settings	Screen Scroll9-2
	Opy9-2
	Reacquire9-2
	Save to Text Memo9-2
	Property9-3
	Basic Settings9-3
	Screen Savers9-3
	<ul><li>Text Only9-3</li></ul>
	Auto Retrieve9-3
	Image Link9-4
	Location Info9-4
	Link Limiter9-4
	Resetting Web & Center Address9-5
	Web Reset9-5
	Clear Memory9-5
	Server Address9-5
	V-Applications
<b>4</b> ↑ V-Application	Getting Started10-4
Basics	Downloading V-Applications10-4
Duoloo	Starting V-Applications10-5
	Exit, Pause & Resume10-6
	Exiting or Pausing V-Applications10-6
	Resuming V-Applications10-6
44 Using	Managing V-Applications11-2
V-Applications	■ Opening V-Application Properties11-2
- V-Applications	■ Deleting V-Applications11-2
	Standby V-Application11-3
	Network Connection Confirmation 11-4

vii νi

12 V-Application Settings	General Settings       12-2         Incoming Settings       12-2         Playback Volume       12-2         Vibration       12-2         Backlight       12-2         Set to Flash       12-3         Resetting V-Appli & Center Address       12-3         Reset       12-3         Clear Memory       12-3         Center Address       12-3
	Station (Japanese Only)
13 Station Basics	Getting Started       13-4         ■ Station Content       13-4         ■ Subscription Status       13-4         Opening Main List       13-5         My List       13-6         ■ Saving to My List       13-6         ■ Editing My List       13-7         ■ Received Information       13-7
14 Advanced Features	Saving Information       14-2         ■ Saved Information       14-2         ■ Checking Information       14-2         ■ Deleting Selected Information       14-2         Using Linked Info       14-3         Files within Information       14-4         ● To Data Folder       14-4         ● Wallpaper & Display Images       14-4         Weather Indicator       14-4         ■ Activating Weather Indicator       14-4         ■ Weather Forecast       14-5         Location Info       14-5         ■ Checking Location Info       14-5         ■ Protecting Location Info       14-6

15 Station Settings	Sub Menu Settings       15-2         Set Display Size       15-2         Screen Scroll       15-2         Save to Text Memo       15-2         Copy       15-2         Property       15-2         Basic Settings       15-3         Screen Savers       15-3         Update Frequency       15-3         Save Info Number       15-3         Image Link       15-3         Resetting Station & Center Address       15-4         Reset Station       15-4         Clear Memory       15-4         Center Address       15-4
	Appendix
	• • • • • • • • • • • • • • • • • • • •
16 Appendix	Reset Settings       16-2         ■ Mail Settings       16-3         ■ V-Application Settings       16-3         ■ Station Settings       16-3         ■ Display Messages       16-4         ■ Mail       16-4         ■ Web       16-5         ■ V-Applications       16-6         ■ Station       16-7         Pictograph List       16-8         Memory List       16-11         Index       16-12         Customer Service       16-15

viii ix

# Vodafone live! Overview

Vodafone live! Overview

Use Vodafone live! services to exchange text and multimedia messages with compatible handsets, download sounds and images as well as V-Applications, browse the Mobile Internet or receive up-to-date area information via Station.

#### Mail

#### **Sky Mail**

Use this basic service to exchange short text messages (of up to 128 alphanumerics) with other Vodafone handsets, email-compatible mobiles. PCs and other similar devices.



#### Greeting

Designate the date/time for the timely delivery of special salutations, like birthday or holiday congratulations, etc. to friends or family with compatible Vodafone handsets.




#### Long Mail

Exchange long text messages (of up to 6,000 alphanumerics) with other Long Mail-compatible Vodafone handsets, email-compatible mobiles, PCs, and other similar devices. Attach images/sounds to messages for multimedia messaging.



#### Sky Melody

Request the latest hits from Sky Melody Center to use as handset Ring Tones/Alarm Tones.

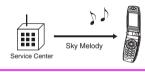

An additional contract is required to use Long Mail and receive e-mail from PCs, etc.

#### Web

Access the Mobile Internet. Browse for image or sound files as well as information.

# Web Information Access Vodafone livel-compatible Mobile Internet sites from Web menu to download files/info. (Mobile) Internet Enter Mobile Internet URLs to view specific sites/pages directly, or access Log List. Auto Delivery Service Where available, request automatic info updates from compatible Mobile Internet sites.

An additional contract is required to use Web service.

#### ■ V-Applications

Download V-Applications, including games and 3D graphics.



Download and use V302SH-compatible V-Applications.

#### Station

Access a variety of area-specific local information, periodically updated automatically.




- Receive current location info automatically.
- Receive urgent information, such as emergency/disaster warnings, automatically.
- Separate subscription is required for fee-based information.



- For more information concerning Vodafone live! services, contact Vodafone Customer Center, General Information (see P.16-15).
- To disable individual Vodafone live! services, see P.1-5.

# **Customizing Handset Address**

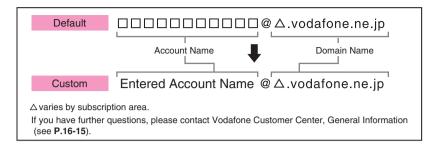

- Handset must connect to the Network to customize handset address.
- Customizing handset mail address helps reduce spam.
- Web must be activated before handset address can be customized (see P.1-5).
- 1 Press 🥯
- 2 Select Vodafone Web and press
- 3 Select My Vodafone and press
- - Follow onscreen instructions (Japanese only).
  - For Web basic operations, see P.7-8.
  - Center Access Code: see Basic P.1-26



Onscreen instructions are subject to change. For more information on customizing handset address, contact Vodafone Customer Center, General Information (see **P.16-15**).

# **Memory Status**

Save up to approximately 375 KB between Inbox (Mail), Storage Type (Web), and Saved Information (Station).

Open Memory Status window to confirm Mail, Web and Station memory.

Index Menu ► Functions ► Settings 1

1 Select ■ Memory and press ●

# **Disabling Vodafone live!**

Disable any or all Vodafone live! services. Use this function to restrict access to or prevent unauthorized use of Vodafone live! services on your handset.

All services are active by default.

- 1 Press ●\*\*\*\*\*
- **2** Enter Security Code
- 3 Select a service and press
- 4 Choose **□** Off and press **○**To activate, choose **□** On **>** Press


1-4

Vodafone live! Overview

# Mail

2-1

# **MEMO**

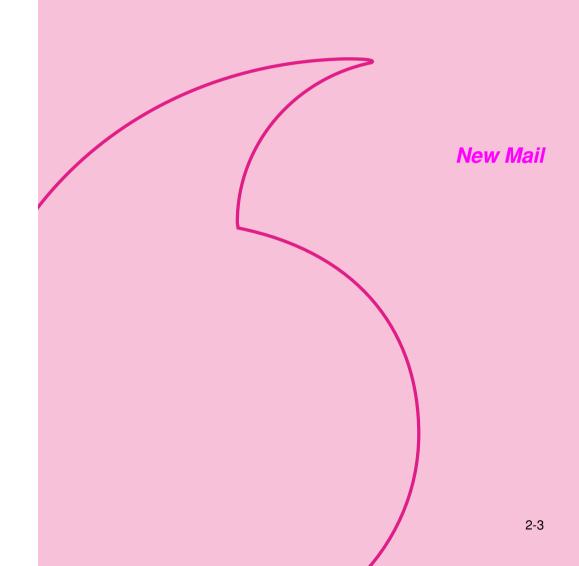

# **Opening New Messages**

When mail arrives, animation plays and Delivery Notice appears

(Long Mail) or (Sky Mail) appears according to message type.

**?** Press **●** 

Inbox opens (see P.2-5).




**Delivery Notice** 

3 Select a message and press

Message window opens (see P.2-6 "Message Contents").

• Press to see newer messages or for older ones.

**⊿** Press **®** to exit

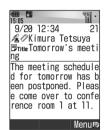

#### **Delivery Report**

■ When messages are sent with Confirm Delivery On (see P.3-5, P.6-2), handset receives a Delivery Report from the Center. Open Delivery Reports in the same manner as standard messages.

#### **Ring Tone Volume**

- While handset is ringing, press ( ) (up) or ( ) (down).
  - Ring Tone Level setting (see Basic P.8-2) changes accordingly.
  - Cancel Manner Mode (see Basic P.3-3) to adjust the level.

#### **Quick Silent**

 $\blacksquare$  Press  $\not\cong$  to instantly mute incoming information tone for that information only.



- See P.4-2 to open Inbox when Delivery Notice does not appear.
- See Basic P.7-9 "Vodafone live! Animation" to disable incoming mail animation.

#### **New Mail Notifications during Operations**

When mail arrives while using handset functions, a notification such as **New Mail from (Sender's name)** appears.

- See P.6-2 "Mail Notice" to hide or edit notification.
- New Mail appears for:
- Messages sorted to Secret Mode Mail Folders
- Messages from senders saved as Secret Mode Phone Book entries (when handset is not in Secret Mode)
- Messages with Privacy Level 3 or 4
- Names do not appear when Phone Book Lock (see Basic) P.11-3) is active
- To receive notification while V-Application is active, select Show Message in Incoming Settings (see P.12-2).
- Notification does not appear when:
- A Greeting message arrived before the designated date/time In Standby
- The current window does not support notifications

#### Inbox

#### **Inbox Contents**

To open Inbox while Delivery Notice for mail appears, press (•); otherwise, open Mail and press (•) twice. To select a different view for Mail Box, see "List" (**P.4-23** "Mail Box Menu").



#### Unread/Read

Long Mail: 🔏

Messages other than Long Mail: &

(If subscribed to Long Mail, / appears for e-mail messages.)

- Indicator color varies by message status:
- Unread: Red
- Protected: Yellow

Message Type (see P.2-6)

ijр

Incoming Mail... and received text appear for incoming linked me

New Mail from Kimura

have a business tr

29/128

New Message

ip today,

2-4


#### **■** Message Type

	Sky Mail (mail from Vodafone handsets)
₹	E-mail (messages received via the Internet)
D	Long Mail with attachments
7	Long Mail Notice (Server Mail, initial portion included)
湦	Unretrieved List (Long Mail)
₹.	BBS Notice
R	Polling (BBS accessed)
<b>₽</b>	Greeting
<b>.</b>	Unsaved Sky Melody

#### **Message Contents**

Select a message and press 

to open it.

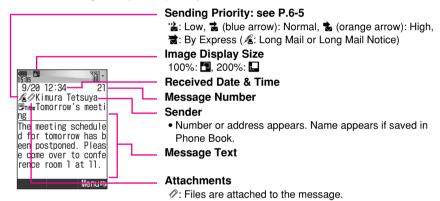

#### Privacy Level (see P.3-11)

• Lv2 appears for Sky Melodies.

#### **Retrieving Long Mail**

The Center sends the initial portion of Long Mail messages when:

- The message is over 385 single-byte characters
- The sender's address is over 56 single-byte characters
- The subject is over 41 single-byte characters
- The message was sent to multiple recipients
- Files are attached to the message

\( \text{(Long Mail Notice)} appears in Inbox when the remaining portion of Long Mail message is held at the Center.



- To retrieve complete Long Mail automatically, see P.6-3 "Auto Retrieve."
- Use Unretrieved List to retrieve multiple Long Mail messages at one time (see **P.5-3**).

#### Retrieving a Selected Long Mail Message

1 Open a message

More appears at the bottom of the message.

disappears and the message is saved.)

**2** Press More Download starts.

After the message is retrieved. Inbox opens. (Long Mail Notice



# **Sky Melody**

If Mail service is disabled, Sky Melody cannot be used. Activate Mail to use Sky Melody (see P.1-5).

#### **Requesting Melody Files**

- **1** Press ℙ, select ■Sky Melody and press ●
- 3 Follow voice prompts and select a melody
- 4 Press Sky Melody Center sends the melody.

2-6

#### **Changing Sky Melody Center Number**

■ Do not change this number unless instructed to do so. Otherwise, Sky Melody Center access will be disabled.

Press → Select → Sky Melody → Press →

• **#1790** is set by default.

# **Saving to Data Folder**

When Sky Melody arrives, animation plays and Delivery Notice appears

appears.


- When handset is closed, *MAIL* followed by **II** appears on Sub Display. Open handset to see Delivery Notice.
- **2** Press
  - & Sky Melody Center appears.
- **3** Select the message and press Title appears and melody plays as set in Sound Volume.
- 4 Press 🔊 Menu
- 5 Select *To Data Folder* and press 💿

Melody is saved to Data Folder and message is automatically deleted.

- When memory is full, delete files (see Basic P.9-24) and try again.
- To use as Ring Tone, see Basic P.8-3.


Tip

Sky Melody files cannot be modified or attached to Long Mail.

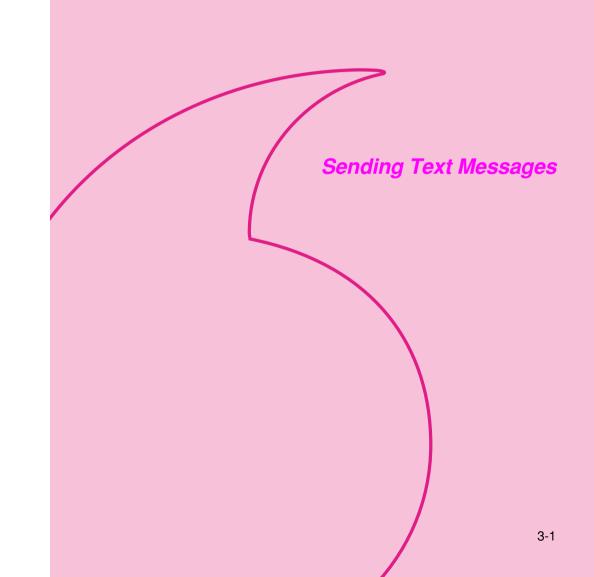

# **Creating Text Messages**

#### **Procedure**

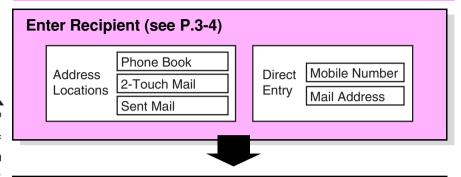

Enter Subject (Long Mail: see P.3-4)



Compose Message (see P.3-4)



Attach Files (Long Mail: see P.3-7 - 3-9)

Still Image

Animation

Melody



#### Send Message

#### **Incoming Calls during Message Creation**

Content is saved temporarily. To resume editing, follow these steps.
Press ● Choose ■ Yes ► Press ●



Undeliverable messages are stored at the Center for up to 72 hours, and delivered when recipient's handset connects to the Network.

#### **Character Entry Limits**

Character limits vary by Mail Type.

	Character Entry Limits	
Sky Mail	128 single-byte alphanumerics	
Long Mail	6,000 single-byte alphanumerics, up to 6 KB	
Greeting	112 single-byte alphanumerics	

Long Mail message text character limit differs by attachment size and recipient count.

#### **Entry Item Availability**

Character limits vary by Mail Type.

	Recipient	Sender	Subject	Message	Date & Time	Attachments
Sky Mail	Available	N/A	N/A	Available	N/A	N/A
Long Mail	Available	N/A	Available	Available	N/A	Available
Greeting	Available	Available	N/A	Available	Available	N/A

To send Long Mail messages, enter a recipient and either attach a file or enter a subject or message text.

#### **Creating & Sending a Message**

Save frequently used addresses to 2-Touch Mail.

1 Press ♠, select ■Long Mail, ■Sky Mail or ■Greeting and press ●

Mail Composition window opens.

Long Mail

Long Mail

Long Mail

Intel No Subject

Streed (No Body Text)

Ann (No Address

Streed (No Body Text)

Ann (No Address)

Streed (No Body Text)

Sending Text Messages

2 Select ⊠ т₀ and press ●

Mail Composition Window (Long Mail)

3-2

3-3

Sending Text Messages

#### Phone Book

■ Select ■ Phone Book and press ●

2 Open an entry

To search Phone Book, see Steps 2 - 3 on [Basic] P.5-11.

#### 2-Touch Mail List

1 Select **□**2-Touch Mail and press •

2-Touch Mail: see P.3-12

2 Select a recipient

#### Sent Mail

■ Select ■ Sent Mail and press •

Sent Mail: see P.3-5

2 Select a recipient

#### Direct Entry

■ Select ■ Mobile Number or ■ Mail Address and press ●

2 Enter recipient's Vodafone handset number or mail address

To select from Phone Book, see Steps 1 - 3 on Basic P.5-11.

Press (•)

• For Sky Mail, skip ahead to Step 7.

Select Fittle and press (•)

 Enter up to 256 single-byte alphanumerics (254 single-byte katakana or 125 double-byte characters).

Enter subject and press (•)

Select E<sub>Text</sub> and press (●) New Message window opens.

Enter a message

Using Mail Templates: see P.3-15

Using Fixed Text: see P.3-6

To copy from Phone Book, see [Basic] P.4-9.

To copy from Text Memo, press 🔊 Menu 🔷 Select **⊆ Call Text Memo** 🖈 Press 🔾 🗭 Select Text Memo 

◆ Press 

◆

Press (•)

Mail Composition window returns.

Attaching Images & Sounds: see P.3-7

Option Settings: see P.3-10

Saving to Outbox: see P.3-10

To set Confirm Delivery (see P.6-2), select Confirm Delivery

Press ● Press ● Press ●

Save as Auto Send: see P 3-12

#### Press 🔊 Send

• Messages are delivered even if handset is closed. Message delivery status and result appear on Sub Display.



Mail Composition Window (Long Mail)

Using both single and double-byte characters may reduce character entry limit.

#### When Mail Address is Entered

Mail addresses count toward the message text character limit.

Single-byte katakana and Pictographs are invalid in message text and subject. Entered single-byte katakana is changed to double-byte, and Pictograph is replaced with single-byte ?.

#### **Sending from Phone Book Entries**

■ To select a recipient from Phone Book, perform Steps 1 - 3 on Basic P.5-11 Press ● Select Send Mail (Phone) or Send Mail (E-mail) → Press ● → Select Mail Type ▶ Press •

#### Save Auto Send for Failed Messages

Save As Auto Send? appears when message delivery fails with Auto Send On (see P.6-2) and Save Auto Send Off.

To set Save Auto Send, choose **■** Yes **→** Press **●** 

#### Sent Mail

Last 9 sent mail records are saved.

Recipients' names appear if saved in Phone Book. Names for Secret Mode Phone Book entries appear only when handset is in Secret Mode.

■ Vodafone handset numbers appear with 📳 :. etc. Mail addresses appear with 🚱:.

Changes to Phone Book entries are not reflected in Sent Mail.

■ To delete records from Sent Mail, follow these steps.

After Step 3 (Sent Mail) on P.3-4, press № Menu > Select Delete or Delete All → Press • → Choose ■ Yes → Press •

# Sending Text Messages

#### **Entering Recipients (Long Mail)**

- Enter up to five recipients. To add recipients, follow these steps.

  After Step 3 on P.3-4, select ⊠τ₀ ▶ Press ▶ Select a number ▶ Press ▶ Enter a recipient (see Step 3 on P.3-4)
  - To enter additional recipients, repeat the above steps from "Select a number."
  - Press ② Set to return to Mail Composition window.
- In Address list, <sup>1</sup> appears before recipient's name, number or address. Change the status to Cc (carbon copy) as follows:

Select a recipient → Press → Select *Cc* → Press •



Address List

- To edit, open Address list and follow these steps.
  - Select a recipient → Press → Press → Edit address → Press → Edit
- To delete, open Address list and follow these steps.
  - Select a recipient → Press → Select Delete → Press •

#### Sending to Server (Sky Mail)

■ Intranet integration is required to send messages to the Server.

After Step 2 on P.3-3, select **Server** Press ● ► Enter Server Address (within 20 digits) ► Press ● ► Enter Sub Address (within five digits) ► Press ●

#### **Using Fixed Text (Japanese Only)**

- Set 言語選択 (Language) to 日本語 (Japanese) (see Basic P.7-9) to use Preset Fixed Text, Editable Text or Custom Fixed Text (see P.6-2).
- Follow these steps after Step 7 on P.3-4. Mail Composition window returns after Fixed Text is entered.
- 1 Press ② 定型
  - Fixed Text cannot be inserted after entering characters.
- 2 Select 固定型文 and press ●
- 3 Select a type and press
- 4 Select a message and press
  - 📕 To select other Fixed Text, press 📀 Ϸ Select another message Ϸ Press 💿
  - To use Editable Fixed Text, select Editable Fixed Text → Press Press Press Press ●
  - Press 🖅 or 🗊 if any 🕨 Enter text 🗣 Press 💽
- **5** Press 💿



- Edit Preset Fixed Text after it is copied to Long Mail or e-mail messages.
- Character limit depends on message type and the number of parentheses.

#### **Converting Mail Type**

Change Mail Types while editing Sky Mail or Long Mail messages.

- The following are deleted when Long Mail is converted to Sky Mail:
- Subject Attachments Recipients other than the first one
- Message text exceeding Sky Mail character limit
- Follow these steps after Step 7 on P.3-4. After conversion, New Message window returns. Complete and send the message.
- Press 🔊 Menu
- 2 Select **#**To Long Mail or **#**Convert Sky Mail and press ●
- 3 Choose Yes and press
  - When converting Sky Mail to Long Mail, entered address appears in TO field.

#### When a Sky Mail Message Exceeds the Character Limit

- Mail Message Exceeds Limit Convert to Long Mail? appears.
  - To convert Sky Mail to Long Mail, choose Yes Press •
- The message above does not appear if you are using Fixed Text.

#### **Attaching Images & Sounds**

Attach images or sound files to Long Mail.

- Attach up to five files. (Only one animation file can be attached.)
- Split to four smaller images or reduce image size (see Basic P.6-23).
- For more information, contact Vodafone Customer Center, General Information (see **P.16-15**).

#### **Attaching Files from Data Folder**

Follow these steps after Step 9 on **P.3-5**. Mail Composition window returns after a file is attached.

- ¶ Select ØAH and press
  - If files are already attached, select a number ▶ Press ●
  - To change attached file, select a file ▶ Press ▶ Press ▶ Change
- 2 Select ■Data Folder and press ●

Sending Text Messages

#### 3 Select a folder and press

- Files cannot be attached if not selectable.
- To open images or play sounds, select a file ▶ Press 🥺 Show or Play
- To return, press ② Back or Stop

#### ■ Select a file and press ■

- For large JPEG images, select **■** Attach 1/4 Size or **■** Attach Original **>** Press **●** (Files may not be attached even if the file size is reduced.)
- For large animation files, choose **■** Yes → Press **(Files may not be attached even if the file size is reduced.)**
- To attach a Burst Shot image, use ⊙ to select an image ▶ Press ⊙
- When attaching a sound file, select a format ⇒ Press •

■Melody Format	Chords over 6 are deleted. Tone and loudness settings are ignored.
■SMAF (MA-2) Format	Chords over 17 are deleted, and tones of the following change to Piano:  Drum (FM) ■ Drum (WT) ■ Original (FM) ■ Original (WT)
■SMAF (MA-3) Format	Up to 32 chords can be sent

#### **Editing Images**

- To add stamps/text to attached images, follow these steps after Step 4.

  Select ⊘AH → Press ⊙ → Select an image → Press ▷ Menu → Select
  - Marker Stamp → Press → Edit image (see Steps 2 5 on Basic P.9-15) → Press ② Set
  - Stamps/text cannot be added if the attached Sha-mail image is unsaved.
  - While adding Marker Stamps, unsaved changes may be deleted by incoming calls.

#### **Adding & Deleting Attachments**

- To attach additional files, follow these steps.
  - Select ØAH → Press → Select a number → Press → Perform from Step 2 in "Attaching Files from Data Folder" on P.3-7
  - Press ② Set to return to Mail Composition window.
- To delete attachments, follow these steps.
  - Open Attachment list and select a file → Press → Menu → Select ⊟ Delete → Press → Choose Yes → Press →
  - Press ② Set to return to Mail Composition window.





- Some sound files cannot be converted.
- Tone and loudness of sound files may change after conversion. Some files may be too large to attach after conversion.

#### **Attaching Mail & Web Files**

# 1 Select an image or sound file in mail or Web info and press (2) Menu

- Selected image is outlined in blue.
- 2 Select ¶ Copy (image) or  **Copy** (sound) and press ●

Copied files are saved to Clipboard temporarily.

- Some images or sounds cannot be copied.
- **3** Press 🗟
- ☐ In Long Mail Composition window, select ②Att and press ●
- 5 Choose **□**Clipboard and press
- 6 Select ■Attach and press
  - Adding & Deleting Attachment: see P.3-8
  - To open images or play sounds, select **□Open File** Press •
  - To return, press ② Back (image) or ② Stop (sound).

#### 7 Create and send the message

Creating & Sending a Message: see P.3-3



Depending on the file size of images or sounds, *File Exceeds Limit Cannot Attach* may appear and file is not attached.

#### **Attaching Images Captured while Creating Message**

- Follow these steps after Step 9 on **P.3-5**. Mail Composition window returns after an image is attached.
- This function is not available when files are already attached.
- **1** Select ∅<sub>Att</sub> and press ●
- **2** Select **E**Sha-mail Shoot and press Camera is activated.
- **3** Capture image
  - For details, see Steps 2 3 in "Capturing Still Images" on Basic P.6-7.
- **4** Press

Image is attached.

 If Save & Send Image is On (see P.6-3), the captured image is automatically saved to Data Folder.

iul® ∠

9/21 12:30

A⊘Kimura Tetsuya

Isn't she cute?

≣πitteMy lovely Sakura

Sending Text Messages

Default Level 1

**Security Code** 

Not Required

Not Required

Required

Required

Available for Sky Mail.

Default Normal

Activate Polling to receive BBS messages (see P.6-5)

Available for Sky Mail. Default Off (not to receive BBS messages)

In Mail Composition window, select *Option Settings* → Press (•) →

Select ■ Polling → Press • Choose ■ On → Press • To return to Mail Composition window, press Q Back

To return to Mail Composition window, press Q Back

**Privacy Level** 

Low

Hiah

**Set Priority** 

▶ Press (●)

**Polling** 

**Recipient Type** 

**Privacy Level** 

2

3

4

Press (•)

Code to open it

To return to Mail Composition window, press Back

Select a recipient type

Under normal conditions, set Recipient Type to None

Restrict copying/forwarding the message, or require Security

In Mail Composition window, select Option Settings → Press • →

Copy/Forward

Allowed

Prohibited

Allowed

Prohibited

Set priority when sending mail

In Mail Composition window, select *Option Settings* → Press ● →

By Express messages are delivered faster for additional fees. Other levels

indicate the importance of the message and do not affect delivery speed.

Select □ Privacv → Press • → Select from ■ Level 1 to ■ Level 4 →

Available for Sky Mail.

In Mail Composition window, select *Option Settings* → Press (•) → Select ■ Recipient Type > Press (•) > Select from ■ None to **E**Computer **→** Press **→** 

To return to Mail Composition window, press Q Back

• Select Mobile Phone to send to a Vodafone handset, or Computer to send to a PC connected to a Vodafone handset.

#### Saving to Outbox

- Save up to 100 KB.
- When memory is full, delete messages (see P.4-10) before creating new ones.
- Follow these steps after Step 9 on P.3-5.
- Press Q Save
- Choose **1** Yes and press Outbox opens. Latest message comes first.
- Press 🗟 to exit



Sending Text Messages

The order in which addresses (To and Cc) or attachments appear may change when saving Long Mail.

# **Option Settings**

Confirm or change send options when sending Sky Mail or Greeting messages.

- Sky Mail options are available only when sending to Vodafone handsets.
- These settings are valid for one message when set during message composition.
- Option Settings are not available when resending messages.



Mail Composition Window (Sky Mail)

PIN

Set a matching PIN for recipients using PIN Filter (see P.6-3)

In Mail Composition window, select *Option Settings* → Press (•) → Select **□***PIN* → Press • Enter recipient's 4-digit PIN → Press •

To return to Mail Composition window, press 🥥 Back

3-10

# Save as Auto Send

When Save Auto Send is active, the message is saved to Outbox and is sent automatically when signal returns.

- Activate Auto Send beforehand (see P.6-2).
- Save up to 10 messages.
- 1 In Mail Composition window, select Save Auto Send and press
- **?** Choose **■**On and press

Auto appears in the right bottom corner.

- To cancel, choose **■**Off → Press (Omit the next step.)
- 3 Press 🔊 Auto



Sending Text Messages

- Auto Send initiates message send up to three times including initial attempt.
- Auto Send Long Mail takes priority over Sky Mail.
- Auto Send failed deliveries are saved to Sent and Outbox.

#### When Auto Send is Activated

- Approximately 10 seconds after signal returns, an Auto Send message is sent. When there is more than one, messages are sent in five second intervals.
- Consecutively saved Long Mail messages are sent in succession.
- **Sent** appears when Auto Send is complete.

For unsent messages, press • to open Outbox.

• % or > appears next to failed Auto Send messages.

#### 2-Touch Mail

#### **Add Address**

Save up to nine frequently used addresses to 2-Touch Mail to send mail from Standby (see **P.3-13**) or add addresses to mail from 2-Touch Mail List (see **P.3-4**).

- 1 Press ♠, select ■Mail Settings and press ●
- 2 Select **1**2-Touch Mail and press •

- 3 Select **■** Add Address and press
- 4 Select a number and press
  - To change addresses, select a number → Press → Edit address → Press ●
  - To delete an entry, select a number → Press ♠ Menu → Select *Delete* → Press ♠ Choose **1** Yes → Press ♠
  - To delete all entries, press ♠ Manu ♦ Select **Delete All** ♦ Press ♠ Choose **Tyes** ♦ Press ♠

#### 7 Phone Book

- Select Phone Book and press
  - Changing Phone Book entries does not affect 2-Touch Mail Addresses.
- 2 Open an entry
  - To search Phone Book, see Steps 2 3 on Basic P.5-11.

#### Direct Entry

- 1 Select **B**Mobile Number or **B**E-Mail and press
- 2 Enter recipient's Vodafone handset number or mail address
  - To select from Phone Book, see Steps 1 3 on Basic P.5-11.
- 6 Press ●

An icon corresponding to the address type appears.

- Repeat Steps 4 6 for other entries.
- 7 Press 🖹 to exit

#### Adding to 2-Touch Mail while Creating Message

■ When there is no entry in 2-Touch Mail, add an address from Mail Composition window

After Step 2 on P.3-3, select **2**-Touch Mail → Press **○** → Choose **1** Yes → Press **○** → Perform from Step 5 above

# **Creating & Sending**

Use 2-Touch Mail to create and send messages from Standby. Save addresses in 2-Touch Mail (Mail Settings) beforehand (see **P.3-12**).

1 In Standby, press the assigned number (■ - 国) with Keypad (ເພື່ອ - )

## 2 Sending Long Mail

1 Press (9 Long

The address is entered automatically.

#### Sending Sky Mail

1 Press 🔊 Sky

The address is entered automatically.

#### Create and send the message

Creating & Sending a Message: see P.3-3

# **Mail Templates**

Save frequently used messages to Mail Templates. Choose a template and fill in fields to easily create messages. Templates consist of fixed text and Items (free text fields). Fixed text is editable.

#### **Saving Mail Templates**

- Save up to 10 templates per category.
- 元データ (Japanese templates) and Preset Text (English templates) are saved by default. Edit default templates to make your own templates.
- **1** Press **●**, select *My Files* and press
- $oldsymbol{2}$  Select  $oldsymbol{oldsymbol{arphi}}$  Belect  $oldsymbol{oldsymbol{arphi}}$  Belect  $oldsymbol{oldsymbol{arphi}}$
- $oldsymbol{3}$  Select a category and press  $oldsymbol{\odot}$ 
  - To edit title, select a number → Press <a> Menu</a> → Select <a> Change Title → Press</a> Press</a> Edit title → Press</a>
    - Default template titles cannot be changed.
  - To delete templates, select a number → Press → Menu → Select → Delete → Press → Choose → Press → Pres
  - Default templates cannot be deleted.
- 4 Press 🔊 Menu, select 🛘 Create New and press 💿
  - To edit existing templates, select a number ⇒ Press twice
- 5 Enter title and press
  - Enter up to 24 single-byte characters.

- **5** Enter text
  - Enter up to 2,000 single-byte characters.
  - Use up to 10 Items (■ ■).
  - Press to delete Items.
  - To enter Items, press 🥥 **Item** → Select a number → Press 💿
    - Items in use cannot be selected.
- 7 Press •
- Select New Entry or Overwrite and press
- **9** Select a number and press •

#### **Creating Mail Directly from Mail Templates**

■ Follow these steps after Step 3 in "Saving Mail Templates" on P.3-14.

Select a number → Press ② ■ Mail → Select ■ Create Long Mail or

□ Create Sky Mail → Press ⊙ → Perform from Step 5 below

#### **Using Mail Templates**

Use saved Mail Templates to easily create text messages.

Follow these steps after opening New Message window in Step 7 on **P.3-4**. When finished, Mail Composition window returns. Complete and send the message.

- 1 Press 🥥 Text
  - Templates cannot be inserted after entering text.
- 2 Select Mail Templates and press ●
- $oldsymbol{3}$  Select a category and press  $oldsymbol{\odot}$
- ✓ Select a template and press
  - To keep the text unchanged, skip ahead to Step 9.
- 5 Press 🥥 Item
- 6 Select a number and press •
- 7 Enter text and press 

  O
  - Enter up to 100 single-byte characters per Item.
- Repeat Steps 5 7 for other Items
- **9** Press 💿
- 10 Check message and press
  - For Long Mail, template title will be the subject if not already entered.

3-14

# **One-Shot Mail**

Save a Sky Mail message as One-Shot Mail and send to a specific recipient with handset closed. Location Info can be pasted into the message text.

#### **Saving One-Shot Mail**

- Available only for Sky Mail. One-Shot Mail will not be saved to Outbox.
- Entered contents remain until changed.
- **1** Press ℙ, select **□** One-Shot Mail and press
- 2 Select Create and press •
- 3 Enter a recipient's number and message text
  - For details, see **P.3-3** "Creating & Sending a Message."
  - To paste Location Info, select *SendLocationInfo* → Press Choose **I**On → Press ●
- 4 Press Set when finished

#### **Location Info**

Latest Location Info is pasted. If no Location Info is obtained, nothing is pasted.
 Location Info counts toward the character limit.

#### **Sending One-Shot Mail with Handset Closed**

Save One-Shot Mail (above) and activate *One-Shot Mail* in Side Key Settings for Standby (see 

Basic P.12-3) before sending One-Shot Mail.

1 Close handset and press S for 1+ seconds

One-Shot Mail is sent (handset vibrates for 0.5 seconds).

 When delivery fails, Save Auto Send is set. (When Auto Send is Off or Outbox is full, handset vibrates for another second.)


#### Sending One-Shot Mail with Handset Open

# Greeting

Send messages to compatible Vodafone handsets anytime, to be opened at the designated date/time in the future; ideal for holidays, birthdays and other special occasions.

- **1** Press **ℙ**, select **□** *Greeting* and press
- **2** Select ⊠<sub>To</sub> and press
- **3** Enter a recipient's number and press To enter a recipient, see Step 3 on **P.3-4**.
- 4 Select △From and press
  - When Sender is set in Mail Settings (see P.6-5), entered name appears automatically.
  - Skip ahead to Step 6 if no entry is required.
- **5** Enter name and press
  - Enter up to 12 single-byte alphanumerics (10 single-byte katakana or 3 double-byte characters).
- 6 Select ≌rext and press ●
- 7 Enter message text and press
- 8 Select Date and press The current date and time appear.
- **9** Specify the date and time and press (Recipients cannot open Greeting messages until then.)
  - Apply 24-hour clock format.
- 10 Press 🔊 Send

Sending Text Messages

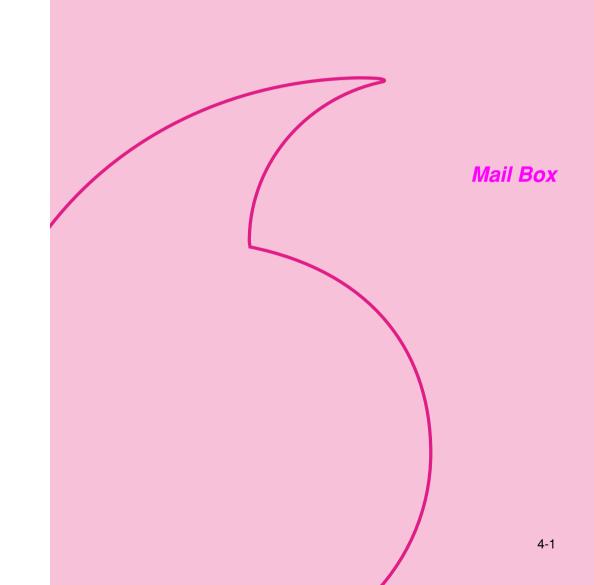

# **Checking Messages**

Received messages are saved to Inbox, sent ones to Sent and drafts to Outbox.

- Set Mail Box display layouts to *List* or *Folder* (see P.4-14).
- 1 Press 🔊, select 🗆 Mail Box and press 💿
  - To check the number of saved messages, select **□Inbox** or **□Outbox** Press 🔊 Menu
  - Press 🔊 Back to return.
  - To toggle layout, select **■**Inbox, **□**Sent or **□**Outbox → Press → Menu → Select **□**Mail Box Display → Press ⊙
  - Security Code is required when there is a Secret Mode Mail Folder.
- 2 Select ■Inbox, ■Sent or ■Outbox and press ●

Mail Box Contents: see P.4-4

- When Mail Box Layout is set to *Folder*, select appropriate folder ▶ Press ●
- 3 Select a message and press

Message window opens (see P.4-5 "Message Contents").

- Press to see newer messages or for older ones.
- For Outbox messages, Mail Composition window opens.
- To edit Outbox messages, select an item → Press → Edit the message
- To save edited messages, press ② Save ⇒ Select Save as or ☑ Overwrite ⇒ Press ③
- If attached image is too large, it may not appear.
- For Sky Melody messages, the title appears and melody plays.
- To edit Sent messages, press 
  ▶ Select Edit 
  ▶ Press 

  ▶ Select an item
  ▶ Press 

  ▶ Edit the message
- Use 🗘 to scroll.
- To open messages with Privacy Level 3 or 4, enter Security Code.
- 4 Press 🗟 to exit

#### **Save Auto Send for Outbox Messages**

- For one message, press ② → Select Mail Box → Press ③ → Select Outbox → Press ④ → Select a message → Press ② Nenu → Select Save Auto Send → Press ④
- For multiple messages, press ♥ → Select Mail Box → Press → Select Outbox → Press → Select a message and press ♥ □ Check (repeat for other messages) → Press ♥ □ Menu → Select Save Auto Send → Press
  - ■To uncheck, select a message with 🗹 🖈 Press 🥥 Check
  - To clear all check marks, press ♠ Manu → Select Reset Check(s) → Press Choose Yes → Press ●
- Save Auto Send is disabled for protected or incomplete messages.

#### **Enlarging Images and SMAF File Images**

- - Use to view the portion outside Display.
  - Images can only be enlarged when Fi Enlarge Display or El Enlarge Image appears.




- To activate Display Backlight, press . E.
- Greeting messages are saved in Inbox. Sender's name and message cannot be viewed until the specified date and time.

#### When Mail Box Layout is Set to Folder

Newly received/sent messages and drafts are saved to *Main Folder*. Messages are sorted to the specified Mail Folder if set in the sender or recipient's Phone Book Option Settings (see P.4-17 - 4-18).

- To select a different view for Mail Box, see "List" (P.4-23 "Mail Box Menu").
- Press P Menu to reply, forward, edit, etc.

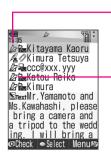

Unread/Read (Inbox), Mail Type (Sent/Outbox)

Long Mail: 🔏

Messages other than Long Mail: &

(If subscribed to Long Mail, & appears for e-mail messages.)

- Indicator color varies by message status:
- Unread: Red
- Protected: Yellow
- Unread Delivery Report: Green
- Saved as Auto Send: Light blue

Message Type (see below)

Tip

Incoming Mail... and received text appear for incoming linked messages.

#### ■ Message Type

	Sky Mail (mail to/from Vodafone handsets)
₽.	E-mail (messages sent/received via the Internet)
D	Long Mail with attachments
¥ <u>₹</u> 1	Long Mail Notice (Server Mail, initial portion included)
<b>Æ</b> 1	Unretrieved List (Long Mail)
<b>₽</b> 1	BBS Notice
R	Polling (BBS accessed)
<b>G</b>	Greeting
<u></u>	Unsaved Sky Melody
<b>□</b> <sup>2</sup>	PD Mail (messages sent via mail terminals <sup>3</sup> )

<sup>&</sup>lt;sup>1</sup>Appears only in Inbox.

#### Additional Indicators


<b>*</b>	Failed Auto Send Sky Mail	
× <u>/</u> &	Failed Auto Send Long Mail	

These indicators appear only in Outbox.

#### **Message Contents**

Select a message and press 

to open it.

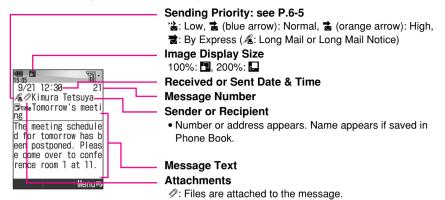

#### Privacy Level (see P.3-11)

• Lv2 appears for Sky Melodies.

#### Received, Sent, etc.: Delivery Status (Sent only)

Sent message delivery status (see below)

#### : Report (Sent only)

Delivery Report

#### **Delivery Status Indicators**

Received	Message delivered*		
Sent	Message delivered or sent to e-mail		
×	Delivery failed, or was canceled (not saved at the Center)		
?	Message status unknown		

\*Appears when confirming delivery from a message window (see **P.4-18**) or when sending messages with Confirm Delivery *On* (see **P.3-5**, **P.6-2**).

#### **Changing Scroll Unit**

<sup>&</sup>lt;sup>2</sup>Appears only in Sent.

<sup>&</sup>lt;sup>3</sup>Mail terminal (e.g. Sky e pad manufactured by SHARP) is a Vodafone accessory. Connect a Vodafone handset to exchange messages.

# **Using Received Messages**

#### **Replying to Messages**

- 1 Open a message
- 2 Press 🔊 Menu
- 3 Select Return Mail or Reply to All and press
  - Use Long Mail to send the same message to up to five recipients at one time.
  - Select *Reply to All* to send the same reply to all recipients (To/Cc). *Reply to All* may not appear for some messages.
- **4** Select Mail Type, original message quote option and press 

  Mail Composition window opens. Recipient is automatically entered.
  - For Long Mail, subject is entered prefaced with Re:.
- 5 Send the message
  To create and send a message, see Ste
  - To create and send a message, see Step 5 (Step 7 for Sky Mail) and onward on P.3-4.

## **Forwarding Messages**

- Messages with Privacy Level 2 or 4 cannot be forwarded.
- Long Mail is always forwarded as Long Mail.
- Open a message
- 2 Press 🔊 Menu
- 3 Select Forward and press

Mail Composition window opens.

- For Long Mail, subject is automatically entered prefaced with Fw:
- 4 Select ⊠ To and press ●
- 5 Enter recipients and press
  - Files attached to the original message are automatically attached to forwarded messages.
  - To enter recipients, see Step 3 on P.3-4.
  - When files cannot be attached, select **II** *Understood* and press to send the message without the attachment.
- 6 Press 🔊 Send

#### **Resending Messages**

- 1 Open a message
- 2 Press 🔊 Menu
- 3 Select Resend and press •
- **4** Choose Yes and press ●

#### **Linked Info**

#### Saving Linked Info to Phone Book

Linked Info is indicated by a dotted underline. Save a linked phone number, mail address or URL from within message text or sender's address to Phone Book; use Linked Info within a message as indicated below:

	Numbers, #, #, etc. between 10 and 24 digits, starting with 0.	
Phone Number	Numbers, #, ᡮ, etc. following <b>TEL:</b> (case insensitive).	
	Example: TEL:090392XXXX1 (X is any number)	
Mail Address	Single-byte alphanumerics and dots, etc., before and after @.	
Iviali Audiess	Example: <i>abc@</i> \square \square \cdots  co.jp (\square is any alphanumeric character)	

- 1 Open a message
- **9** Saving Sender Address
  - 1 Press 🔊 Menu
  - Select Add to Phone Book and press ●

#### Saving Linked Info

- 1 Select a phone number or mail address and press
- Select ⇒ Add to PhoneBook and press ●
- 3 Select New Entry and press

Number or address is entered in corresponding Phone Book field. Complete other fields and save (see Basic P.5-4 - 5-5).

- Edit number/address if necessary ▶ Press ⑥ ▶ Select an icon ▶ Press ⑥ ▶ Complete other fields and save (see Basic P.5-4 5-5)
- To save to an existing Phone Book entry, select **BNew Item** → Press → Open a Phone Book entry (perform Steps 1 3 on Basic **P.5-11**) → Select an icon → Press → Press → Choose **1 Yes** → Press ●

Select **I**Inbox or **E**Sent and press **●**When Mail Box Layout is set to Folder, select appropriate folder **▶** Press **●** 

3 Open a message containing a phone number, mail address or URL

4 Select a number, address or URL and press 🔊 Menu

5 Phone Numbers

Select ⇒ Call and press ●

Phone number appears.

2 Press 🗇

The number is dialed.

Mail Addresses

Select ⇒ Send Mail and press ●

2 Select Send Long Mail or Send Sky Mail and press

To create and send a message, see Step 5 (Step 7 for Sky Mail) and onward on P.3-4.

**URLs** 

1 Select ⇒ Open Link and press ●

URL appears.

Press ● again, select ■Send and press ●

Handset connects to the Network.

For more about accessing Mobile Internet sites, see P.7-7.

#### **Protecting Messages**

Protect important messages saved in Inbox, Sent or Outbox from unintentional deletion.

- Unretrieved List (Long Mail), unread Long Mail Notices and incoming linked messages are protected and will not be deleted automatically.
- Protect up to 40 messages in Sent. All messages in Inbox and Outbox can be protected.
- Protected messages are not deleted from Outbox even after they are sent.

**1** Press  $ot \otimes$ , select  $ot \mod Mail Box$  and press  $ot \otimes$ 

2 Select □Inbox, □Sent or □Outbox and press • When Mail Box Layout is set to Folder, select appropriate folder → Press •

3 Select a message and press @ Check

appears

 Auto Send (light blue indicator) and failed Auto Send (※ or ॐ) messages are not selectable.

To uncheck, select a message with 

Press 

Check

Check

■

4 Repeat Step 3 and select all the messages to protect

• Select up to 50 messages at one time.

To clear all check marks, press ♠ Menu ♦ Select *Reset Check(s)* ♦ Press ♠ Choose **1** Yes ♦ Press ♠

5 Press 🔊 Menu

6 Select *Protect Message* and press

7 Choose **I**On and press **O** 

Protected message indicators change to yellow.

To cancel protection, choose **②***Off* → Press **③** 

8 Press 🗟 to exit

#### **Deleting Messages**

**Selecting Messages to Delete** 

- 1 Press 🔊, select 🗆 Mail Box and press 💿
- 2 Select **□***Inbox*, **□***Sent* or **□***Outbox* and press **⊙**

When Mail Box Layout is set to *Folder*, select appropriate folder ▶ Press ●

3 Deleting a Message

1 Select a message and press 🔊 Menu

 Auto Send (light blue indicator) and failed Auto Send (※ or ※) messages are not selectable

Select Delete and press ●

**Deleting Selected Messages** 

☑ appears.

 Auto Send (light blue indicator) and failed Auto Send (% or %) messages are not selectable.

To uncheck, select a message with ☑ ▶ Press ② Check

2 Repeat Step 1 to select all messages to delete

• Select up to 50 messages at one time.

To clear all check marks, press ♠ Menu ♦ Select Reset Check(s) ♦ Press ♠ Choose ■ Yes ♦ Press ♠

3 Press 💫 Menu

4 Select *Delete* and press •

- 4 Choose Yes and press ●
- **5** Press 🗟 to exit

Tip

Advance Mail (see Basic P.12-10) messages must be deleted one by one.

Delete All

1 Press , select Mail Box and press

2 Select Inbox, Sent or Outbox and press Menu
• To delete all messages in a Mail Folder, select a folder and press Menu

To delete all messages in a Mail Tolder, select a loider and

3 Select Delete All and press ●

4 Select ■ Select All or ■ Read/Unprotected (■ Unprotected for Sent and Outbox) and press •

5 Enter Security Code

6 Choose I Yes and press

7 Press (a) to exit



When Outbox is set to **Eunprotected**, Advance Mail (see **Basic P.12-10**), Auto Send and failed Auto Send messages are not deleted. For **II** Select All, failed Auto Send messages are not deleted.

**Auto Delete** 

When memory is full, handset cannot receive new messages. Activate Auto Delete Old to automatically delete oldest received messages to make room for new ones. Auto Delete Old is *Off* by default.

Select 
 Mail Box Settings and press 
 ●

3 Select **S**Auto Delete Old and press •

**4** Choose **□** On and press **○**To cancel, choose **□** Off **>** Press **○** 

5 Press 🗟 to exit



When memory is full, oldest sent messages are automatically deleted to make room for new ones. To prevent unintentional deletion, protect important messages (see **P.4-9**).

# **Chat Mail Log**

Use Chat Mail Log folders to organize messages exchanged between your handset and up to five addresses per folder. Sent and received messages appear by date, designated by sender.

#### **Saving Members**

- Save up to five members per group (Group 1 Group 3).
- Same address can be entered in multiple groups.
- 1 Press , select Mail Box and press
- 2 Select **U**Chat Mail Log and press
  - Security Code is required when there is a Secret Mode Mail Folder.
  - When adding members to an existing group, select a group → Press → Menu → Select Save Member → Press → Skip ahead to Step 5
- 3 Select a group and press
  - To change members, select a group → Press ♥ Menu → Select Save Member → Press → Select a number → Press Deter number or address → Press ●
  - To delete a member, select a group → Press → Menu → Select Save Member → Press → Select a number → Press → Menu → Select Delete → Press → Pre
  - To delete all members, select a group → Press → Menu → Select Save Member → Press → P
- 4 Choose Yes and press ●
- 5 Select a number and press
- 6 Phone Book
  - Select Phone Book and press
    - Changes to Phone Book entries are not reflected in Chat Mail groups. Edit member addresses directly.
  - 2 Open an entry
    - To search Phone Book, see Steps 2 3 on Basic P.5-11.

#### **Direct Entry**

- Select 

  Mobile Number or 

  Mail Address and press
- Enter recipient's Vodafone handset number or mail address
  To open Phone Book, see Steps 1 3 on [Basic] P.5-11.
- 7 Press 

  O
  - Repeat Steps 5 7 to add more members.

## 8 Press 🗟 to exit



Changing members does not affect messages already saved in Chat Mail Log.

#### **Opening Chat Mail Log**

Received Sky Mail messages with Privacy Level 2 or higher, Long Mail messages in Unretrieved List and Greeting messages do not appear in group contents even if the address is saved.

- 1 Press , select Mail Box and press
- 2 Select **■**Chat Mail Log and press
  - Security Code is required when there is a Secret Mode Mail Folder.
  - To delete all messages, select a group → Press → Menu → Select *Delete All Mail* → Press → Choose **Tyes** → Press →
  - Messages in Mail Box are not deleted.
- 3 Select a group and press

Group opens and contents appear (see below).

#### **List Contents**



# Received or Sent Date & Time

Sender

- Number or address appears. Name appears if saved in Phone Book.
- Owner appears for mail sent from handset if Owner Profile is blank. Owner Profile name appears when set (see Basic)P.2-21).

Message Text

#### **Chat Mail Log Menu**

- While Chat Mail Log folder is open, press to reply, forward, etc.
- To open a message, select a message and press .



- Deleting a message from Inbox or Sent automatically deletes the same message in Chat Mail Log.
- Each group holds up to 100 messages. When full, oldest messages are automatically deleted to make room for new ones.

#### **Mail Box Layout**

From Mail Box Settings, set Layout to *Folder* or *List* for Inbox, Sent and Outbox. *List* is set by default (Mail Folders are hidden).

- **1** Press **②**, select **□***Mail Box* and press **⊙**
- 3 Select ■Layout and press Security Code is required when there is a Secret Mode Mail Folder.
- 4 Select ■Inbox, ■Sent or ■Outbox and press ●
- 5 Select **□**Folder and press 
  - Follow the same steps to change Layout for each Mail Box.
  - To hide folders, select **■List** Press •
- 6 Press 🗟 to exit

#### **Folder Name**

From Mail Box Settings, change Layout to *Folder* for Inbox, Sent or Outbox, then use Mail Folders to organize messages. Sort messages to one of nine Mail Folders in Inbox, Sent or Outbox.

- Change folder names to customize Mail Folders.
- Main Folder cannot be renamed.
- 1 Press , select Mail Box and press •
- 2 Select **Z**Mail Box Settings and press ●
- 3 Select ■Set Folders and press ●
- 4 Select ■Inbox, ■Sent or ■Outbox and press ●
- **5** Select **I** Folder Name and press **O** Mail Folders appear.

- $oldsymbol{6}$  Select a folder and press  $oldsymbol{\odot}$
- **7** Enter name
  - Enter up to 18 single-byte characters.
- 8 Press
  - Repeat Steps 6 8 to rename other folders.
- 9 Press 🖹 to exit

#### **Secret Mode**

Security Code is required to open a Secret Mode Mail Folder.

- Set Mail Box Layout to Folder to use Secret Mode.
- Main Folder cannot be set to Secret Mode.
- 1 Press 🔊, select 🗆 Mail Box and press 💿
- 3 Select ■Set Folders and press ●
- ✓ Select ■Inbox, ■Sent or ■Outbox and press ●
- 5 Select **□**Secret Mode and press ●
- 6 Enter Security Code
- **7** Select a folder and press •
- Choose ■On and press
  - Repeat Steps 7 8 for other folders.
  - To cancel, choose **■Off** → Press •
- **Q** Press **a** to exit

#### **Moving Messages**

- Set Mail Box Layout to Folder before attempting to move messages (see P.4-14).
- Unretrieved List (Long Mail) and incoming linked messages cannot be moved; these
  messages are saved in *Main Folder*.
- **1** Press **ℙ**, select **□***Mail Box* and press
- 2 Select **□***Inbox*, **□***Sent* or **□***Outbox* and press **⊙**
- 3 Select a folder and press
- **4** Select a message and press **②** Check 
  ☑ appears.
  - Auto Send (light blue indicator) and failed Auto Send (% or > ) messages are not selectable.
  - To uncheck, select a message with 

    Press 

    Check

    Check

    ■
- 5 Repeat Step 4
  - Select up to 50 messages at one time.
  - To clear all check marks, press <a> ▶</a> Select Reset Check(s) <a> ▶</a> Press <a> ▶</a> Choose <a> ₽</a> Press <a> ▶</a> Press <a> ▶</a>
- 6 Press 🔊 Menu
- 7 Select Move to Folder and press
- 8 Select a folder and press
  - Repeat Steps 4 8 to move other messages.
- 9 Press 🗟 to exit

#### **Sorting to Folders Automatically**

#### Sorting by Phone Book Entry

Sort messages automatically by phone number or mail address.

When a Phone Book entry contains multiple numbers/addresses, use **Set All** to apply settings to all entry items or **One Number/Address** to designate individual numbers/addresses.

- Open a Phone Book entry
- To search Phone Book, see Steps 1 3 on Basic P.5-11.
- **2** Press ●
- 3 Select *Edit* and press •
- 4 Select Option Settings and press
- 5 Select ■Mail Folder and press ●
- 6 Select ■Inbox Auto Sort or ■Sent Auto Sort and press ●
- 7 All Numbers/Addresses
  - 1 Select Set All and press

#### Individual Numbers/Addresses

- Select ☐ One Number/Address and press ●
- Select a Vodafone handset number or a mail address and press ●
- Choose **□**On and press

#### Canceling

- **■** Choose **■** Off and press
- 8 Select a folder and press
  - When setting for One Number/Address, press 🥥 Set ...
- 9 Press 🥯 Set twice
  - For more, see Step 6 and onward on Basic P.5-15.



- Sent messages are sorted by the first recipient address.
- Individual settings are replaced when Set All is selected and vice versa.

4-16

Ueda Mikio 1 Friends

**☎ ☎ €**₩

**☎**J:Pattern 1

☑MPattern 2

C≝Mail Folder 1

⊡™Mail Folder 2

Designate a folder to sort messages from numbers or addresses not saved in Phone Book. Use Designate Folder to filter unsolicited messages (spam).

Designate Folder is Off by default.

Press , select Mail Box and press

Select Mail Box Settings and press

Select Designate Folder and press

Choose **I** On and press **O** 

To cancel, choose  $\square Off \Rightarrow Press \bigcirc Omit the next steps.$ 

Select a folder and press (•)

Press 🖹 to exit



Non-delivery notifications are also sorted to a designated folder.



- Messages are not sorted when Phone Book Lock (see [Basic]P.11-3) is active.
- Messages from numbers and addresses in Secret Mode Phone Book entries are not sorted by this function, even if handset is in Secret Mode.

# **Confirm Delivery & Cancel Delivery**

Confirm delivery of Sky Mail and Greeting messages, or cancel Sky Mail delivery. Use Confirm Delivery or Cancel Delivery for messages sent to compatible Vodafone handsets.

- Open a message
  - Select a message with Sent or ?.
- Press 🔊 Menu
- Select Confirm Delivery or Cancel Delivery and press
- Choose **II** Yes and press When complete, the Center sends a Delivery Report.

# **Sending from Outbox**

#### Sending a Message

Press , select Mail Box and press

To check the number of saved messages, select **■ Outbox** → Press 🔊 Menu ■ Press 🔊 Back to return.

Select **D***Outbox* and press **O** 

- Light blue indicator appears for Auto Send messages, and % or % appears for failed Auto Send messages.
- Select a message and press (•)

Mail Composition window opens.

- For Auto Send (light blue indicator) messages. Cancel Auto Send? appears. Choose **■** Yes **●** Press **●**
- For Failed Auto Send (% or %) messages, *Re-save As Auto Send?* appears. Select ■ Save As Auto Send or ■ Cancel → Press •
- To edit Outbox messages, select an item → Press → Edit the message
- To save edited messages, press ② Save → Select Save as or Overwrite → Press (•)

Press 🔊 Send

• Sent messages are deleted from Outbox. To prevent unintentional deletion, protect important messages (see P.4-9).



When sent from Outbox, failed messages remain in both Outbox and Sent.

#### **Send Continuously**

Send Long Mail from Outbox continuously.

Up to three messages are sent at one time.

- Press , select Mail Box and press
- Select **E**Outbox and press •
- Select a Long Mail message and press () Check
  - Auto Send (light blue indicator) and failed Auto Send (% or %) messages are not selectable.
  - To uncheck, select a message with ☑ → Press ② Check

- Select up to 50 messages at one time.
- To clear all check marks, press <a> ▶</a> Select Reset Check(s) <a> ▶</a> Press <a> ▶</a> Choose <a> ▶</a> Press <a> ▶</a> Press <a> ▶</a>
- 5 Press 🔊 Menu
- 6 Select Send Continuously and press •

After messages are sent, handset returns to Standby.

- Sent messages are deleted from Outbox. To prevent unintentional deletion, protect important messages (see P.4-9).
- A confirmation appears for unsent messages. Choose  **Yes** Press **()** (Other messages are sent.)

# **Attachments**

## **Saving Attachments to Data Folder**

Save attachments (image and sound) to Data Folder.

- 1 Open a message with at least one attached file
- 2 Select a file and press 🔊 Menu
  - Select an image in the message.
  - Files can only be saved when To Data Folder appears.
  - To open properties, select Property → Press ●
  - Press ೨೦೦೨ to return.
  - To play sound, select <a>●</a> Press <a>●</a>
  - To adjust volume, press (up) or (down) during playback.
  - To change tone or loudness, select *Tone* or *Adjust Loudness* ⇒ Press **(See [Basic] P.8-12 8-13** for more.)
- 3 Select To Data Folder and press
- 4 Press
  - When memory is full, delete files (see [Basic] P.9-24) and try again.

#### **Wallpaper & Display Images**

Save images as Wallpaper or as Display Images to use them for Power On/Off, Alarm or incoming calls.

- 1 Open a message containing images
- 2 Select an image and press 🔊 Menu
  - Images can only be used when Save As Wallpaper or To Display Images appears.
  - To open properties, select **☐ Property** Press ●
  - Press 🎶 to return.
- 3 Wallpaper
  - **1** Select Save As Wallpaper and press
    - For E-Animation (NEVA files), omit the next step.
  - **2** Use **♦** to specify display area and press 
    - Depending on size or type, display area cannot be specified for some images.
    - Existing image is replaced.

#### Display Images

- Select To Display Images and press
  - E-Animation (NEVA files) cannot be used for **Incoming Call** and **Alarm**.
  - Maximum image size:

Power On	W 120 x H 130 dots	Incoming Call	W 120 x H 38 dots
Power Off	W 120 x H 130 dots	Alarm	W 120 x H 51 dots

■ Select an item and press 
●

Display Images appear 200% larger.

- For E-Animation (NEVA files), omit the next step.
- Use to specify display area and press
  - Depending on size or type, display area cannot be specified for some images.
  - Existing image is replaced.

Mail Box

Sound Auto Play Set handset to play attached sound files automatically

Default Off

Press ♠ Select • Mail Box ♦ Press • Select Mail Box Settings → Press ● → Select ■Sound Auto Play →

Press ● → Choose **□** On or **□** Off → Press ●



- When more than one sound file is attached, the first file plays.
- Press 
   to stop playback.
- Depending on file type, sound may not play automatically, or playback starts when an image is opened. E-Animation (NEVA file) sound may play automatically even if Sound Auto Play is Off.

# Mail Box/Message Menu

#### **Combining Split Mail Images**

Download images attached to Split Mail beforehand.

- Press R, select Mail Box and press
- Select Inbox and press
- Select a Split Mail message and press (2) Check
  - Subjects of Split Mail messages are Upper Left, Upper Right, Lower Left and Lower Right. Check all four messages.
- Press 🔊 Menu
- Select Combine Split Mail and press Combined Image appears.
- Press (•) Image is saved to Data Folder and Menu returns.



- Images may not be combined properly if file names of Split Mail images are changed, or the same file name exists.
- Combined image may be rough.
- Receiving Split Mail costs receiving four Long Mail.

#### **Mail Box Menu**

Show/Display **Address** 

Check sender's address

Open a Mail Box and select a message → Press 🔊 Menu → Select Show Address or Display Address Press (•)

• Show/Display Address is not available for Outbox.

List

Select a view for Mail Box

Default Pattern 1

Select a pattern 

Press 

O

• Setting applies to Inbox, Sent and Outbox.

#### Message Menu

Copy

Copy message text

Open a message and press <a> ▶</a> Select Copy <a> ▶</a> Press <a> ▶</a> Use (♦) to underline the first line of the text block ▶ Press ● ▶ Use ( to specify text → Press Perform from Step 5 on Basic P.4-17 To change the starting position, press .

• Text can only be saved when Copy appears.

**Display Size** 


Change font and image size

Default Medium Font/100%

Open a message and press ♠ Menu ♦ Select *Display Size* ♦ Press Select a size ⇒ Press ○



- Press rougle between Medium Font/200%. Small Font/100%. Small Font/200%, Large Font/100%, Large Font/200% and Medium Font/100%. (**□** appears for 100% and **□** for 200%.)
- The setting applies to both received and sent messages. It remains even after exiting Mail.

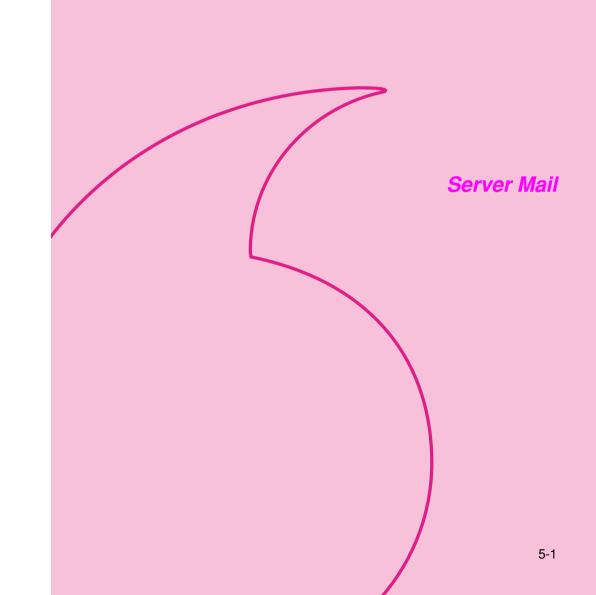

# **Unretrieved List**

### **Acquire Mail List**

Retrieve a list of messages stored at the Center (Server Mail), then retrieve selected messages.

- **1** Press **№**, select **■***Mail Box* and press
- - To retrieve all Server Mail, select Retrieve All → Press Choose Yes → Press ●
  - To delete all Server Mail, select **■Delete All Mail** → Press Enter Security Code
    Choose ■Yes → Press •
- 3 Select ■Acquire List and press ●
- **4** Choose Yes and press •

After Unretrieved List is retrieved, Inbox opens.

- When Unretrieved List has already been retrieved, it is refreshed.
- Fress O Unretrieved List (containing sender's name, handset number or address of each Server Mail) appears
  - For details, select a message ▶ Press ⊙
  - Press to return.



**Server Message** appears in the list when there is more Server Mail. (Select **Server Message** and press to see notice from the Server.) To see the rest, retrieve or delete messages on the list and refresh Unretrieved List.

### **Retrieving Selected Messages**

Retrieve up to three messages at one time.

- **1** Open Unretrieved List
  - To retrieve all messages, press <a> Menu</a> <a> Select Retrieve all Mail</a> <a> Press</a> <a> (Omit the next steps.)</a>
- 2 Select a message and press

The box is checked.

- To uncheck, select a message with ☑ → Press •
- 3 Repeat Step 2
- 4 Press 🔊 Menu
- 5 Select Next and press •

After messages are retrieved, Inbox opens.

• Downloaded messages are deleted from Unretrieved List.

### **Deleting Unretrieved List Messages**

Deleted messages cannot be recovered.

### **1** Open Unretrieved List

- **2** Deleting Selected Messages
  - Select a message and press ●

The box is checked.

- To uncheck, select a message with ☑ ▶ Press •
- 2 Repeat Step 1
- 3 Press 🔊 Menu
- 4 Select Delete Item and press

### Deleting All Messages

- 1 Press 🔊 Menu
- 2 Select Delete all Mail and press
- **3** Enter Security Code
- 3 Select Delete and press
  - Unretrieved List is deleted from Inbox.
  - To cancel, select **□Cancel** → Press •

# **Server Mail**

# **Deleting Server Mail**


Delete Server Mail directly without downloading it first.

- **1** Open a message (Long Mail Notice)
  - Select a Long Mail message with 🛬.
- Press Menu
- 3 Select Delete Mail and press



To delete Long Mail Notice only, select *Delete* and press .

**4** Choose **■** Yes and press **●** 

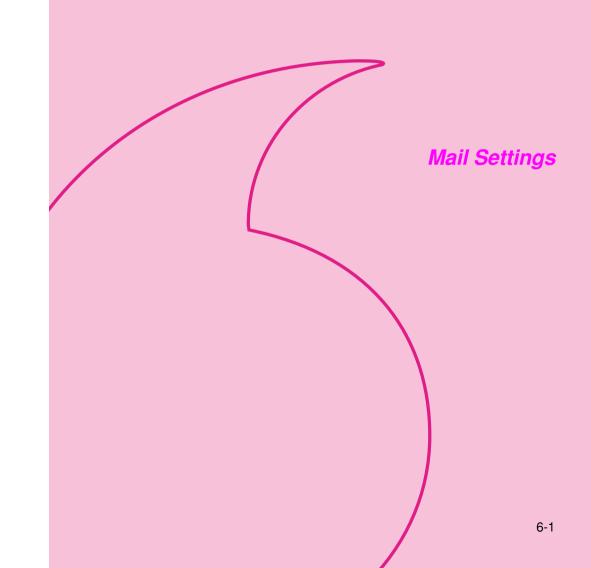

# **Basic Settings**

Mail Notice

Select contents or cancel notices for messages received during handset use

Press ♠ Select ■ Mail Settings → Press ● Select ■ Mail Notice Press ● Press ● Select from ■Name to ■Off Press ●

Request a Delivery Report (see P.2-4) to confirm message delivery

Default Off

Press ♠ Select ■ Mail Settings ♦ Press ● Select **□**Confirm Delivery → Press • → Choose **□**On or **□**Off → Press •



- Delivery Report is available for:
- Sky Mail messages sent to Vodafone handsets
- Greeting messages
- Long Mail messages sent to a single Vodafone handset
- To change settings for individual messages, see P.3-5.
- To check delivery status of Sky Mail or Greeting messages sent without Confirm Delivery, see P.4-18.

Auto Send

Outbox messages saved as Auto Send when handset is out-of-range are sent automatically when signal returns

Press ♠ Select ■ Mail Settings → Press ● Select ■ Auto Send Press ● Pr



Save Auto Send does not appear in Mail Composition window when Auto Send is Off.

(Japanese Only)

Save phrases to Custom Fixed Text (No.118 to 127)

Saving Text

Press 🔊 → Select 🗗 メール設定 → Press • → Select 🖃 ユーザー定型文 Press ● Press ● Press ● Enter text Press ●

• Enter up to 128 single-byte alphanumerics (126 single-byte katakana or 61 double-byte characters).

**Editing Text** 

Press 🔊 → Select 🗉 メール設定 → Press 🍥 → Select 🗉 ユーザー定型文 Press (●) → Select a number → Press (●) → Edit text → Press (●)

To delete text, open an entry and press (Long Press) ▶ Press •



When sending Sky Mail or Greeting messages using Custom Fixed Text to other Vodafone handsets, the recipient must have the same Custom Fixed Text saved under the same number to read the message.

# **Long Mail Settings**

### **Additional Settings**

Save & Send **Image** 

Automatically save new Sha-mail images to Data Folder before attaching them to messages (see Basic P.6-22)

Default On (save image)

Press P → Select Mail Settings Press Select 2-Touch Mail Press ● Press ● Press ● Press ● Press Press ● Pres **■**On or **■**Off **→** Press **●** 

Auto Retrieve

Retrieve complete Long Mail manually or automatically

Press ♠ Select ■ Mail Settings → Press ● Select ■ Auto Retrieve Press ● Select ■Auto or ■Manual ● Press ●



Even when Auto Retrieve is active. Long Mail Notices may appear when signal is weak, etc. When short, complete message may be delivered automatically even if Manual is set.

# **Sky Mail Settings**

### **PIN Filter**

Set PIN to reject incoming messages without the matching PIN. Sender must include the same PIN to send mail to your handset. PIN Setting is effective only when PIN Filter is active.

- PIN Filter cannot be used for Long Mail messages.
- Pin Filter is Off by default.
- Press , select Mail Settings and press
- Select **E**Security and press •
- Select **IPIN** Setting and press •
- Enter a 4-digit PIN and press
- Select PIN Filter and press

Standard Sky Mail messages*	
<b>□</b> Concatenation	Two or more linked messages
<b></b> ■Polling	Location Info/Polling requests
■E-Mail	E-mail messages

\*E-mail under 128 bytes is also rejected.

**7** Choose **□**On and press **●** 

• Repeat Steps 6 - 7 for other types.

To cancel PIN Filter, choose **□Off** → Press •

8 Press 🕏 to exit



Senders of rejected mail are not notified.

### **Address Filter**

Activate Address Filter to reject incoming mail from up to 10 numbers (digits only) or addresses saved in Reject List.

- Address Filter cannot be used for Long Mail messages.
- Reject List is effective only when Address Filter is active.

### Saving to Reject List

- 1 Press ♠, select ☐ Mail Settings and press ●
- Select 
   ■ Security and press 
   ●
- **?** Select **■***Reject List* and press
- 4 Select a number and press
  - Select ----- for new entry.
  - To edit entry, select an entry → Press → Edit → Press •
  - To delete entry, select an entry → Press Press I (Long Press) → Press •
- 5 Enter a phone number or mail address and press
  - Enter up to 60 single-byte alphanumerics for mail addresses.
  - Repeat Steps 4 5 to add more numbers/addresses.
- 6 Press 🗟 to exit

### **Activating Address Filter**

Address Filter is Off by default.

- **1** Press ℙ, select **⊡***Mail Settings* and press
- Select 
   ■ Security and press 
   ●
- 3 Select ■Address Filter and press ●
- **4** Choose **■** On and press **●**To cancel, choose **■** Off **→** Press

### **Additional Settings**

**Set Priority** 

Set priority when sending mail

fault Normal

Press Select Set Priority Press Select Set Priority Press Press Press Press Press Press Press Press Select from Low to Press 
• To change priority for individual messages, see P.3-11.



By Express messages are delivered faster for additional fees. Other levels indicate the importance of the message and do not affect delivery speed.

Sender

Save Sender name for Greeting

Press 

Select 

Mail Settings 

Press 

Select 

Sender 

Press 

Pr

- To delete Sender mid-entry, press 🧼 (Long Press) ▶ Press •
- Enter up to 12 single-byte alphanumerics (10 single-byte katakana or 3 double-byte characters).
- Using both single and double-byte characters may reduce character entry limit.

# **BBS**

Save and share BBS messages.

- Send Polling request (see P.3-11) to receive BBS messages (Sky Mail option setting).
- Save and share Location Info.

O

Mail Settings

### **Activating BBS**

Press ▶ Select ■ Mail Box → Press • Select ■ BBS → Press •

**⇒** Select ■ Settings ⇒ Press ⊙ ⇒ Choose ■ On ⇒ Press ⊙ ⇒ Select ■ Message or ■ Location Info Press •

Enter Code appears for Elocation Info. Enter Security Code → Choose I Yes → Press (

### Canceling BBS

Press ▶ Select ■Mail Box → Press • Select ■BBS → Press •

**→** Select ■ Settings → Press • Choose ■ Off → Press •

• Saved messages remain even after BBS is canceled. Reactivate BBS to use.

• Set PIN to restrict message access (see P.6-3).

Saving Messages Save messages & Location Info

### **Saving Messages**

Press ♠ Select ■ Mail Box → Press • Select ■ BBS → Press •

Select ■ New Message → Press • Enter message → Press •

To delete the message mid-entry, press (Long Press) → Press •

• Activate BBS to share the message.

• 掲示板データなし appears by default.

• Enter up to 128 single-byte alphanumerics (126 single-byte katakana or 61 double-byte characters).

Using both single and double-byte characters may reduce character entry limit.

### **Saving Location Info**

Press **⇒** Select **E**Location Info **⇒** Press **●**) **⇒** Enter Security Code **⇒** The

latest information appears → Press ② Back

To update opened Location Info, press 🔊 Update 🖈 Press 💽

• Activate BBS to share the message.

### Polling

■ When BBS is accessed, handset receives a Polling message.

To open Polling messages, press <a>P</a> → Select <a>D</a> Mail Box → Press <a>P</a> → Select **I**Inbox → Press • Select a message with **\*** → Press •

# **Resetting Mail & Access Points**

Reset Mail settings

Refer to **P.16-2** for the settings affected by Reset

Press P → Select Mail Settings → Press Select Preset → Press ● ▶ Enter Security Code ▶ Select ■ Reset ▶ Press ● ▶

Select **■** OK or **■** Cancel **→** Press **●** 

Delete All

Delete all sent/received mail messages at one time

Press ♠ Select ■ Mail Settings ♦ Press ● Select ■ Reset ♦ Press ● ▶ Enter Security Code ▶ Select ■ Delete All ▶ Press ● ▶ Select ■ Select All or ■ Read/Sent Only → Press • → Select ■ OK or **□**Cancel **→** Press **⊙** 

Messages are deleted as follows:

	■Select All	Delete all Inbox, Sent and Outbox messages, except for saved or failed
	Select All	Auto Send messages
ERead/Sent Only Delete all unprotected read Inbox and Sent messages		Delete all unprotected read Inbox and Sent messages

**Access Points** 

Set Mail Center Address or Server Address

Default Short Message: ¥7032, Data Access: ¥7132, Long Mail Line: ¥7042, Server Address: 5000

### **Center Address**

Press Press

**X**Access Points → Press • Finter Security Code → Select

**□**Center Address → Select from **□**Short Message to **□**Long Mail

Line 

Enter Center Address 

Press 

Press 

O

### Server Address

Press ♥ Select ■ Mail Settings Press • Select

**X**Access Points → Press • Finter Security Code → Select


■ Server Address → Press • Select ■ Server Address or ■ Sub

Address → Press • Finter Server Address or Sub Address →


Press



Do not change Center Address or Server Address unless instructed to do so. Otherwise, access to the service will be disabled.

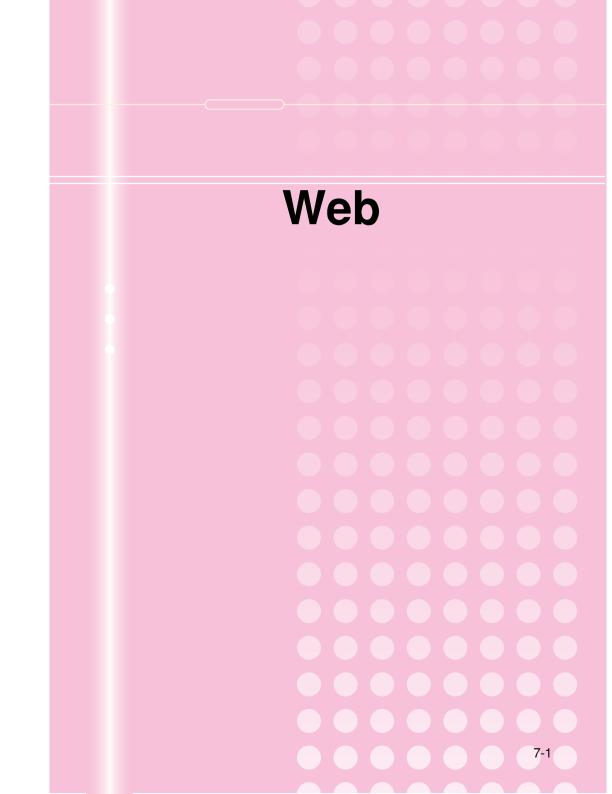

# **MEMO**

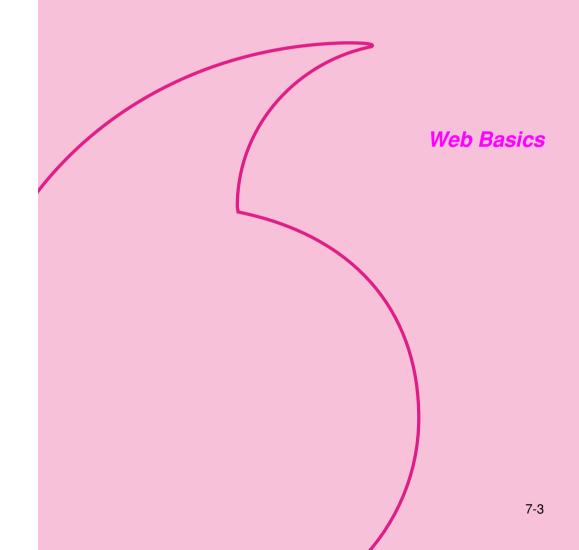

# **Getting Started**

Use Web (Vodafone Web) to access the Mobile Internet directly from handset. Browse for image or sound files as well as information.

- An additional contract is required to use Web service.
- Address questions about Vodafone Web to Vodafone Customer Center, General Information (see P.16-15).

### **Web Content**

### Web Info Content

Sample Web information page:

- Press ② Back to see the previous page. From that page, press ② Menu then ② Next to return to the initial page.
- For details, see P.7-8 "Basic Operations."
- When there is more than one item with the same title in Message Folder (Overwrite Type), the most recent item appears first. To see the next saved item, press
   Next, select Next and press .



### **Enlarging Images and SMAF File Images**

- Select an image (or a SMAF file with image) ⇒ Press ⇒ Select Enlarge Display (or Enlarge Image) ⇒ Press
  - Images can only be enlarged when *Enlarge Display* or *Enlarge Image* appears.
  - Use to view the portion outside Display.



Handset returns to Standby after 20 minutes of inactivity.

### **Information Types**


There are four types of Web information. They can be identified by the indicators below. Information is saved differently according to type.

<b></b>	Overwrite Type (temporarily saved information)
<b></b>	Storage Type (saved information)
-⊙+	Work Type (unsaved information)
No Indicator	Vodafone Web Menu

### **Overwrite Type**

Overwrite Type information is saved temporarily in Message Folder.

Up to five titles are saved, and up to three information items are saved under each title. When full, oldest items are deleted to make room for new ones.

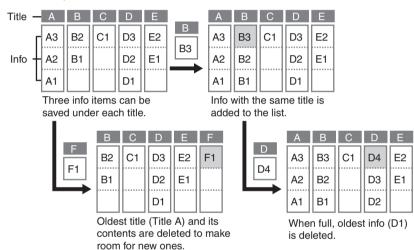

Overwrite Type information is similar to data saved in cache memory of a Web browser on a PC. Content remains even after handset power is turned off.

### **Storage Type**

Storage Type information is saved in Message Folder until it is deleted manually. Approximately 375 KB is shared between Inbox (Mail), Storage Type (Web) and Saved Information (Station). (Saving large files reduces the number of items that can be saved.)

- Overwrite Type and Work Type information can be changed to Storage Type (see P.8-2).
- Storage Type information is similar to files stored on a computer hard disk or floppy disk.
   Content remains even after handset power is turned off.
- Memory Status: see P.1-5

### **Work Type**

Work Type information is not saved in Message Folder. To change Work Type information to Storage Type, see **P.8-2**.

### Vodafone Web Menu

- Vodafone Web Menus are saved temporarily. New Menu replaces old. Temporarily saved Menus remain even after handset power is turned off.
- Vodafone Web Menus cannot be saved to Message Folder.

# **Using Web**

Use Web to access the Mobile Internet for information as well as image, sound and other files.

### **Opening Vodafone Web Menu**

Access Mobile Internet sites by selecting a topic from Vodafone Web Menu. Address questions about Vodafone Web to Vodafone Customer Center, General Information (see **P.16-15**).

1 Press , select Vodafone Web and press

Vodafone Web Menu opens.

- Vodafone Web Menu content is subject to change.
- Alternatively, press (Long Press) in Standby Select **■** Web Press Select **■** Vodafone Web Press ●
- 2 Highlight a menu item and press
  - Handset remains connected to the Network even if it is closed.
  - To disconnect, press 🔊.
- 3 Repeat Step 2 to open additional links
  - Basic Operations: see P.7-8
- 4 Press 🗟 to exit Web



- Temporarily saved Information and Vodafone Web Menus may open without connecting to the Network.
- While information appears, press for 1+ seconds to activate or cancel Manner Mode.

### **Entering URLs Directly**

Enter URLs directly to access Mobile Internet sites.

- 1 Press , select Internet and press •
- 2 Select Mew and press
- 3 Enter URL
  - To copy from Phone Book, press ♠ Menu ♦ Press ◑ Open a Phone Book entry (see Steps 2 3 on (Basic) P.5-11) ♦ Select an item ♦ Press twice
- 4 Press To edit URL, press Edit URL ▶ Press ●
- 5 Select **Send** and press Handset connects to the Network.
- 6 Press 🗟 to exit



Some sites may not be accessed. Images, layouts, etc. may not appear the same as on PCs.

### **Using URL Log**


Access Mobile Internet sites using previously entered URLs. Up to 30 URLs are saved. When log memory is full, oldest URLs are deleted to make room for new ones.

- 1 Press (9), select Internet and press (1)
- 2 Select a URL and press
  - Shortcut: Select a URL and press 🔊 Send
- **3** Press ●
- 4 Select ■Send and press
  - To edit URL, select **□ Edit** → Press ⊙ → Edit URL → Press ⊙
  - To delete log, select **□** Delete → Press Choose **□** Yes → Press •

# **Basic Operations**

### **Moving Cursor**


Move cursor to select items. Selectable items are underlined with a dotted line. Use (3) to scroll through items.

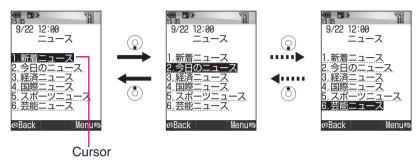

Use •• to move left and right when multiple items are listed in one row. Cursor does not appear when there are no selectable items.


### **Scrolling Pages**

Triangular indicators appear at the top when information continues outside the current window. Use 🚱 to scroll.

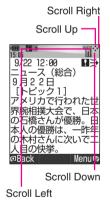

### **Text Entry & Item Selection**

Enter text or select items to send information.

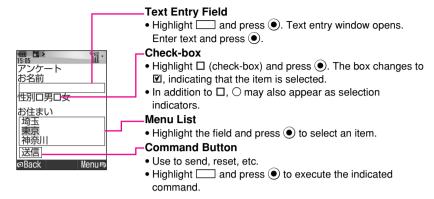

### **Input Memory**

- Entered text is saved to Input Memory, except Security Code. Use saved text in other applications.
- Up to five entries are saved. When full, oldest entries are deleted to make room for new ones.

### **Using Input Memory**

In a text entry window, press ▶ Menu → Select Saved Info → Press ● → Select □Input Memory → Press ● → Select an entry → Press ●

# **Auto Delivery Service**

Register with Auto Delivery Service to receive update notifications and other information on handset. Use the notification to access the information provider or Mobile Internet sites to download more information.

Register from Mobile Internet sites that support Auto Delivery Service.

### **Received Information**

Delivered information is automatically saved to Message Folder.

### When new information arrives, animation plays and Delivery Notice appears

- appears.
- When handset is closed, **II** appears on Sub Display. Open handset to see Delivery Notice.



Information appears (and is deleted from Unread Messages).



**Delivery Notice** 

### Ring Tone Volume

- While handset is ringing, press (5) (up) or (2) (down).
  - Ring Tone Level setting (see Basic P.8-2) changes accordingly.
  - Cancel Manner Mode (see Basic P.3-3) to adjust the level.

### **Quick Silent**


Press 🕦 to instantly mute incoming information tone for that information only.

### In Standby

- Press ② → Select Unread Messages → Press → Select a title → Press • Once read, information appears in **EMessage Folder** (see **P.8-3**).



- If information is received during an operation, Delivery Notice may not appear.
- When Screen Savers is active (see **P.9-3**), new information appears automatically.

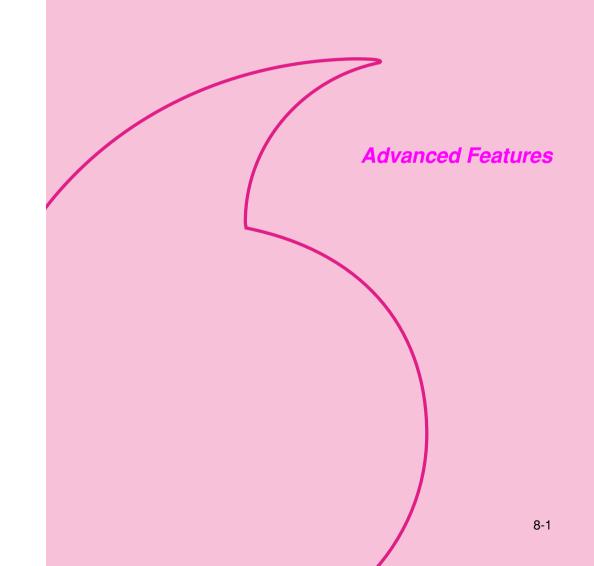

# **Favorites, Storage Type & Bookmarks**

Save frequently used information/URLs to Favorites. Storage Type or Bookmarks.

Function	Description	<b>Moving Title</b>	Adding Icon	<b>Editing Title</b>
Favorites	Save Mobile Internet site content.	Available	Available	N/A
Storage Type	Handset does not connect to the Network to open saved information.	N/A	N/A	N/A
Bookmarks	Save links to Mobile Internet sites. Handset connects to the Network to access the site.	N/A	N/A	Available

- Save information of some interest to Storage Type and save frequently used information to Favorites.
- Information in Favorites is saved as Storage Type.
- Sharp's Space Town Mobile Internet site (Japanese Only) is bookmarked by default. Visit Space Town for various downloads such as Wallpapers, games and Dictionary files.

### **Saving Information & URLs**

- Save up to 30 links in Bookmarks.
- For Storage Type memory, see P.16-11.
- Open information and press 🔊 Menu
  - Information can only be saved when Save appears.
- Select Save and press
  - Available destinations appear.
- Favorites & Storage Type
  - Select Save to Favorites or Save to Accumulate and press Information returns. (₩ appears for information saved to Favorites, and 仕 for Storage Type.)

### **Bookmarks**

- 1 Select Save to Bookmarks and press
- 2 Press (•)

### **Opening Saved Info & Links**

Overwrite Type information is saved to Message Folder automatically.

- Press ②
- **Favorites** 
  - Select Favorites and press
    - To rearrange the list, select a title → Press 🔊 Menu → Select 🖽 Move → Press 💿 Use (♣) to move the title ⇒ Press (●)
  - 2 Select a title and press (•)
    - To remove information from Favorites, press 🔊 Menu 🖈 Select *Save* 🖈 Press 💿
    - Select Cancel Favorite → Press ●
    - Information deleted from Favorites appears in Storage Type.

### Message Folder

- Select Message Folder and press
  - To open folder status, select information type 🕨 Press 🕸 Menu
- 2 Select Storage Type or Overwrite Type and press •
- Select a title and press

### **Bookmarks**

- **1** Select **□** Bookmarks and press
- 2 Select a title and press 🔊 Send



Overwrite Type information is saved to Message Folder by title. When more than one item shares the same title, the number of titles may not correspond to the number of items.

### **Editing & Deleting**

### **Editing Titles**

1 Press 🥯

Adding Icons (Favorites)

1 Select □ Favorites and press ●

2 Select a title and press 🔊 Menu

To delete icon, select **■ Delete Icon** → Press • Choose **■ Yes** → Press •

Select **□**Select Icon and press **●** 

Press to open more icons.

4 Use • to select icon and press •

### Editing Titles (Bookmarks)

■ Select 
■ Bookmarks and press 
●

■ Select a title and press 
■

Select **□***Edit* and press **●** 

4 Edit title and press

### **Deleting Entries**

1 Press 🥺

**9** Favorites

■ Select 
■ Favorites and press 
●

To delete all entries, press ♠ Manu → Select **□** Delete All → Press • → Enter Security Code → Skip ahead to Step 6

### Message Folder

■ Select 

Message Folder and press

To delete all entries, select information type → Press → Menu → Select

□ Delete All → Press → Enter Security Code → Skip ahead to Step 6

Select ■ Storage Type or ■ Overwrite Type and press ●

### **Bookmarks**

1 Select ■ Bookmarks and press ●

3 Select a title and press •

• For Bookmarks, skip ahead to Step 5.

4 Press 🔊 Menu

5 Select Delete or ■Delete and press ●

6 Choose ■ Yes and press ●

# **Using Linked Info**

Use numbers, addresses or URLs (*http://*) to place calls, send messages or access Mobile Internet sites.

- Available only when number, address or URL is underlined with a dotted line.
- Words may be substituted for the numbers, addresses and URLs.

1 Open information containing a phone number, mail address or URL

**2** Phone Numbers

1 Highlight a number and press

**2** Select *Dial* and press ●

The number is dialed.

### Mail Addresses

■ Highlight an address and press ●

2 Select Send and press •

Select ■ Send Long Mail or ■ Send Sky Mail and press ●

Creating & Sending a Message: see P.3-3

### **URLs**

■ Highlight a URL and press

Handset connects to the Network.

### Saving to Phone Book

To save as new entry, open information and follow these steps.

Select a phone number or mail address → Press ● → Select Save → Press ● → Select ■New Entry → Press ● → See Basic P.5-4 - 5-5 for more about Phone Book

■ To save as new item, open information and follow these steps.

Select a phone number or mail address → Press ● → Select Save → Press ●

Select ■ New Item > Press • Select an entry (see Basic P.5-13) > Press •

See Basic P.5-4 - 5-5 for more about Phone Book

# **Images**

## **Saving to Data Folder**

Download and save images from Mobile Internet sites to Data Folder. Some images may not be saved due to size or other factors.

**1** Open information

# 2 Select an image and press •

- Images can only be saved when To Data Folder appears.
- To open properties, select Fi Property → Press ●
- Press 🌝 to return.
- 3 Select **₹ To Data Folder** and press ●
- 4 Press 💿
  - When memory is full, delete files (see Basic P.9-24) and try again.

### Linked Images

From Menu, select *To Link Address* and press (a) to jump to the linked site.

### Wallpaper & Display Images

Save images as Wallpaper or as Display Images to use them for Power On/Off, Alarm or incoming calls.

9/22 12:00

田中さん宅のニャン太

ネコ特集

てんです。

- Some images may be too large to use as Wallpaper or Display Images.
- Image files saved as Wallpaper or Display Images are not saved to Data Folder.

### **1** Open information

### 2 Select an image and press

- Selected image is outlined in blue.
- Images can only be used when Save As Wallpaper or To Display Images appears.
- To open properties, select ¶ Property → Press ●
- Press 🥯 to return.

### 3 Wallpaper

### ■ Select Save As Wallpaper and press ●

• For E-Animation (NEVA files), omit the next step.

### Display Images

### ■ Select To Display Images and press ●

- E-Animation (NEVA) cannot be used for **■Incoming Call** and **■Alarm**.
- Maximum image size:

Power On	W 120 x H 130 dots	Incoming Call	W 120 x H 38 dots
Power Off	W 120 x H 130 dots	Alarm	W 120 x H 51 dots

### ■ Select an item and press ■

Display Images appear 200% larger.

• For E-Animation (NEVA files), omit the next step.

# ■ Use • to specify display area and press •

- Depending on size or type, display area cannot be specified for some images.
- Existing image is replaced.

# **Melody Files**

### **Playing Sound Files**

### Open information

2 Select a sound file and press •

- To change tone or loudness, select *Tone* or *Adjust Loudness* → Press (See □sic | P.8-12 8-13 for more.)
- To open properties, select <a href="#">● Press</a> <a href="#">● Press</a> <a href="#">●</a></a>
- Press to return.

### 3 Select **■Play** and press **●**

The sound plays.

- Press Back to stop playback.
- To adjust volume, press (5) (up) or (2) (down) during playback.

### **Linked Sounds**

From Menu, select *To Link Address* and press • to jump to the linked site.

### **Saving to Data Folder**

- 1 Open information
- **9** Select a sound file and press •
- 3 Select **■** To Data Folder and press
  - Files can only be saved when **I** To Data Folder appears.
  - To attach to mail, select **€** Copy → Press Perform from Step 3 in "Attaching Mail & Web Files" on P.3-9

### **4** Press **●**

• When memory is full, delete files (see Basic P.9-24) and try again.

# **Dictionary Files**

Refer to Basic P.4-15 "V302SH Download Dictionary" for the handling of Dictionary files.

### **Title & Version**


Check the title and version of the file.

- 1 Open information
  - 🖫 indicates Dictionary files.
- 2 Select a file and press
  - To download and activate dictionary, select Save Dictionary → Press → Select a number → Press ●
  - To replace the current dictionary, choose **T** Yes **Press** Press •
  - To open properties, select **Property** → Press •
  - Press to return.
- $oldsymbol{3}$  Select *Show* and press  $oldsymbol{ullet}$

Title and version appear.


### **Saving to Dictionary Library**

- **1** Open information
  - 🖫 indicates Dictionary files.
- 2 Select a file and press
- 3 Select Save to Library and press
  - Files can only be saved when Save to Library appears.
- **4** Press
- 5 Select a number and press
  - When overwriting, choose  **Yes** Press •

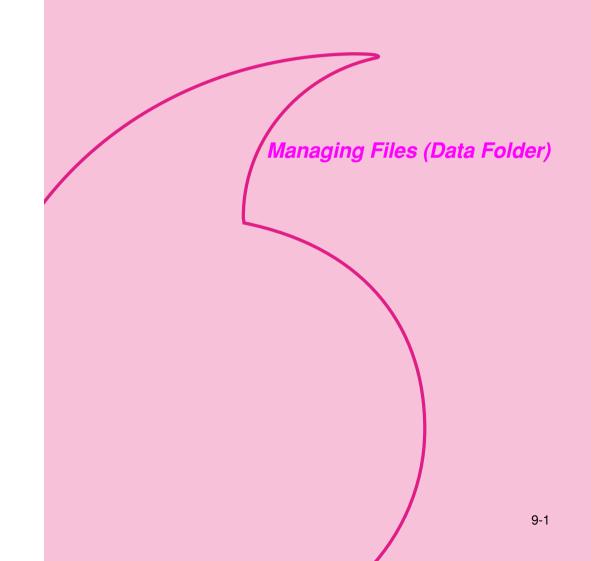

# **File Organization**

Handset has two storage areas. Files are automatically sorted into *Memory* by function and into *File Cabinet* by file format. Handset File Cabinet capacity is approximately 8 MB.

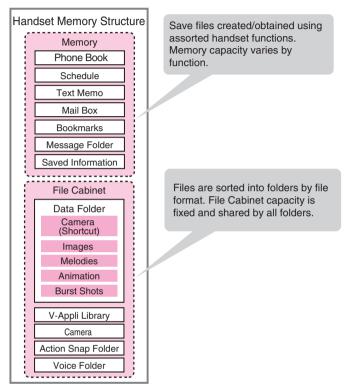

Tip

**File Cabinet Memory Status** 

To check memory usage status, press ● ➤ Select My Files ➤ Press ● ➤ Select ■Memory Status ➤ Press ●

# **Data Folder**

### **Contents**

Files created or obtained via Web or Sky/Long Mail are organized in separate folders according to file format. Files are sorted as follows:



Create QR Codes from image/melody files in Data Folder (see P.12-27).

### **Window Description**

To open Data Folder from Standby, follow these steps.

Press ● ⇒ Select My Files ⇒ Press ● ⇒ Select

□ Data Folder ⇒ Press ●



Data Folder

### **File View**

Open a folder to view files.

- Example: Images folder
- To customize the appearance of File View, see P.9-5 "Display Settings."

### File View (List)




Format, Name and Size (of selected image) Saved Files

 Icons appear for files other than images or images not supported by handset.

Managing Files (Data Folder)

### File View (List File Names)

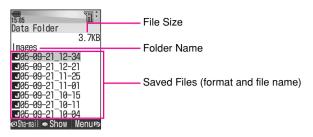



To view folders first, select *Thumbnails* or *File List* in Display Settings for Images. Animation or Burst Shots folder (see P.9-5).

### **Icons**

### **Still Image & Animation Files**

lcon	Format	Description
(P: white)	PNG	PNG image
<b>⊡</b> * (P: purple)	Transparent PNG	Transparent PNG image
<b>■</b> *	JPEG	JPEG image
2	Burst Shot (consisting of Index Image and 4, 9, or 25 frames)	Burst Mode image
E <sup>*</sup> (E: white)	E-Animation (NEVA files)	Animation (may include sound)
(E: Yellow)	E-Animation (NEVA files) with jump buttons	Animation (may include sound)
A <sup>*</sup>	Animation (JPEG, PNG, or PNG/JPEG Animation)	Animation

<sup>\*</sup>Blue icon: forwardable, red icon: unforwardable

- Unforwardable files cannot be edited, combined, attached to Long Mail, converted to QR Codes or sent via infrared.
- A yellow triangle appears ( ) on icons of the files used in Phone Book, Useful Diary or Schedule entries.

### **Sound Files**

Icon	Format	Description
s*	SMAF	Melody via Web or Long Mail (may include images)
<b>D</b> *	Melody	Melody via Web or Long Mail
<i>L</i> <sub>3</sub>	Sky Melody	Melody downloaded from Sky Melody Center (unforwardable).
III	Original Ring Tone	Original melody (forwardable)
V	Voice	Voice/sound you recorded (forwardable)

<sup>\*</sup>Blue icon: forwardable, red icon: unforwardable

- Unforwardable files cannot be edited, combined, attached to Long Mail, converted to QR Codes or sent via infrared.
- A yellow triangle appears ( ) on icons of the files set for Ring Tones, Alarm, etc.

### **Display Settings**

Customize appearance of each folder in Data Folder.

Setting	Description
List <sup>1</sup>	Thumbnails appear
List File Names <sup>2</sup>	File names appear
Thumbnails <sup>1</sup>	Sub folders appear (thumbnails appear within)
File List <sup>3</sup>	Sub folders appear (file names appear within)

<sup>&</sup>lt;sup>1</sup>Not available for Melodies folder.

Index Menu ► My Files → Data Folder

Select a folder and press 🔊 Menu

Select \*\*Display Settings\* and press \*\*O

**Enter Security Code** 

Select a type and press



In this manual, most operations are described with Data Folder appearance set to *List*. Operations may differ if folders are set to appear.

<sup>&</sup>lt;sup>2</sup>Appears as *List* for Melodies folder.

<sup>&</sup>lt;sup>3</sup>Appears as *Folder* for Melodies folder.

# Managing Files (Data Folder)

# **Opening Files**

### **Handset Data Folder**

ndex Menu ► My Files

- Select Data Folder and press
- Select a folder and press Thumbnails or file names appear (see P.9-3 "File View").
- Select a file and press (•)

The content plays or appears.

• Press to open or play the next file, and press to open or play the previous one. (Available in most cases.)



File View (Images Folder)



### Opening Burst Shot Files

Index Image appears. Use • to view single frames.

### JPEG Images Exceeding W 240 x H 320 Dots

Images are reduced to fit Display. To restore the original size, press 🔊 Menu select *Original Size* and press .

Press to return to File View

### E-Animation Files with Jump Buttons

Some E-Animation files contain jump buttons with which to access the Mobile Internet or open linked images. Follow these steps to use the buttons.

Open an E-Animation file and press ▶ Menu → Select E-Animation Mode ▶ Press (●)

Click buttons on screen for operations.

Exchange files via infrared with compatible devices (seeP.10-2).

### Sending Files via Long Mail

Attach files to Long Mail from Data Folder.

Index Menu ► My Files ► Data Folder ► Open a folder

- Select a file and press 🔊 Menu
- Select *Attachment* and press (•)
  - For large JPEG image, select **Attach 1/4 Size**, **Attach Original** or **Attach Split Mail** ▶ Press (●)
  - For Melody files or Original Ring Tones, select a file format (see OP.3-8) Press O
- Complete other fields and send Long Mail (see Step 2 and onward on OP.3-3)

### **Sending Burst Shot Images**

■ Press • → Select My Files → Press • → Select ■ Data Folder → Press • → Select Burst Shots → Press • → Select a file → Press • → Select an image with • Press ▶ Press ▶ Perform Select • Attach Screen ▶ Press • Perform from Step 2 on OP.3-3

### **Sending Split Images**

To split an image (240 x 320 dots) into four frames and attach to Long Mail, follow these steps.

Press ● → Select My Files → Press ● → Select ■ Data Folder → Press ● Select a folder → Press ● → Select an image → Press ▶ Menu → Select Attachment → Press • → Select ■ Attach Split Mail → Press • → Select or enter recipient → Choose **1** Yes → Press (•) (See Step 3 and onward in "Send Continuously" on OP.4-19.)

Split Mail transmission charges are equivalent to sending four Long Mail messages.

Managing Files (Data Folder)

### **Properties**

ndex Menu ► My Files

Open Data Folder or a folder within it, and select a folder or file

Press 🔊 Menu

Select *Property* and press

Details appear.

• Press (2) to scroll down.

• Item Descriptions

1	
Title <sup>1</sup>	Melody file name
Туре	File/folder type
Location	File/folder location
File Size	Data Size
Memory Used	File size on handset
Width x Length <sup>2</sup>	Image size in dots
Conv/Eud	OK: can be copied within Data Folder
Copy/Fwd	Invalid: not supported
Save	OK: can be saved
Save	Invalid: not supported
Transfer	OK: can be transferred to external device
Transier	Invalid: not supported
Phone Book (Photo) <sup>3</sup>	Yes: set for Photo setting
Incoming Tone <sup>1</sup>	Yes: set for Ring Tones, Alarm, etc.
Set Useful Diary <sup>3</sup>	Yes: set for Useful Diary
Schedule Memo <sup>3</sup>	Yes: set for Schedule

<sup>&</sup>lt;sup>1</sup>Appears for files in Melodies folder.

# **Animation File**

### **Simple Animation**

Select up to four images to create Simple Animation. Images appear one after another at the selected tempo.


- Use JPEG images captured with mobile camera or obtained via Web/Long Mail.
- Simple Animation files are saved to Animation folder. However, those made of a single image are saved to Images folder.
- When memory is full, delete files to free some space (see **P.9-24**).
- Image quality may change when used for animation.

### **Creating Simple Animation**

Index Menu ► Functions ► Settings 2 ► Animation ► Simple Animation ► New

- Enter title and press (•)
  - Enter up to 32 single-byte characters. Title is mandatory.
  - Files are saved by title by default; change file names later (see P.9-23).
- Select tempo and press (•)

In animation, images appear in numerical order at the tempo.

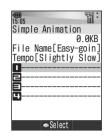

Simple Animation

File Name[Easy-goin]

Tempo[Slightly Slow]

05-09-21\_11-08

- Select a number and press
- Select an image in Data Folder and press (•)
  - For operations in Data Folder, see P.9-6.
  - To use a 4-Burst Shot (all frames), select a Burst Shot file 🖈 Press 💿 Ϸ Select
  - Animate Burst File > Press •
  - Animate Burst File is available only when is selected in Step 3 with no other images specified. Burst Shot files of 240 x 320 dots are not available.
  - To use a Burst Shot frame, select a Burst Shot file → Press → Select **EChoose One** Press ● Select an image with ● Proceed to Step 5
  - To start over from selecting an image in Data Folder, press 🔊 Change
  - To start over from Step 3, press Q Back
- Press (•)
  - The image is set.
  - To play animation, press 🔊 Menu 🖈 Select
  - Animation Playback → Press •

  - To change images, select one → Press 🔊 Menu → Select
  - **□**Change → Press Start over from Step 4
  - To delete images, select one → Press 🔊 Menu → Select
    - **Delete** → Press Choose  **Yes** → Press •
- Repeat Steps 3 5 to add images Select up to four images.
- Press (9) Set when finished
  - To send animation via Long Mail, select  **Attachment** Press Perform from Step 2 on **O P.3-3** 
    - For large animation, choose **II** Yes Press (•) (File may be too large to be attached even if the size is reduced.)
- Select **Save** and press

<sup>&</sup>lt;sup>2</sup>Appears for JPEG/PNG/Burst Shot images, etc.

<sup>&</sup>lt;sup>3</sup>Number of entries for which the file is used also appears.

Managing Files (Data Folder)

### **Editing Animation**

When memory is full, delete files to free some space (see P.9-24).

Index Menu ► Functions → Settings 2 → Animation → Simple Animation → Edit

- Select animation and press
- Edit title and press
- Select tempo and press (•)
  - To add images, select a number 🖈 Press 🌒 🖈 Select an image 🖈 Press 🗨 twice
  - To change images, select a number → Press 🔊 Menu → Select 🗷 Change → Press 💿 Select an image → Press → twice
  - To delete images, select a number → Press 🔊 Menu → Select 🗉 **Delete** → Press 💿 ◆ Choose ■ Yes ◆ Press ●
- When finished editing, press Q Set
- Select **Save** and press
- Select **New Entry** and press (•)

The animation is saved to Data Folder (Animation).

To overwrite, select **□Overwrite** → Press •

## **Opening Animation Files**

Index Menu ► My Files → Data Folder

- Select a folder and press (•)
- Select animation file and press (•)

The selected animation plays.

- Press (2) Back to stop.
- To use animation files, see below.

# **Using Images & Animation**

Some images may not be used.

### **Changing Display Size**

Open a file and press 不知

Display size toggles between 100% (with indicators), 100% (no indicators), Enlarged (with indicators) and Enlarged (no indicators).

- Size may not be changed or size options may vary depending on the file. When enlarged, the entire image may not appear on Display.
- **□**: 100%. **□**: Enlarged

### **Setting Image & Animation as Wallpaper**

Save As Wallpaper can be selected only for compatible files.

Index Menu ► My Files → Data Folder → Open a folder → Open a file → Menu

*Images* 

■ Select □ Display Setting and press • 2 Select **1** Save As Wallpaper and press (•)

**Animation** 

Select Save As Wallpaper and press

**2** Press (●)

### **Setting Image & Animation as Display Images**

To Display Images can be selected only for compatible files.

Index Menu ► My Files → Data Folder → Open a folder → Open a file → Menu (🗷

**Images** 

■ Select □ Display Setting and press •

2 Select ≥ To Display Images and press ●

**Animation** 

■ Select To Display Images and press (•)

Select an item and press (•)

For more, see Step 4 and onward on P.7-5.

### **Saving Burst Shot Images**

Save all frames and Index Image of a Burst Shot file (2) as individual images at one time, or select a single image to save.

Individual Burst Shot images are saved to Data Folder (Images) in JPEG format. (Source file remains.)

Index Menu ► My Files ► Data Folder ► Burst Shots ► Open a Burst Shot file

Saving All Images Individually

1 Press 💫 Menu

**2** Select **2** Save Single Frames and press **●** 

Saving a Single Image

1 Select a frame or Index Image with • and press 🔊 Menu

2 Select ■ Save Screen and press (●)

Index Menu ► My Files ► Data Folder ► Open a folder

- Select an image and press 🔊 Menu
- Slide Show and press ●
- Select **\Pi**Slide Show and press (•)

Slide Show starts from the selected image.

- To stop Slide Show, press .
- To resume, press ①.
- To skip images manually, press 🔊 Next

### **Setting Interval**

Interval is **Standard** by default. To change interval, follow these steps. After Step 2 above, select **□** Display Speed **→** Press **● →** Select an interval

▶ Press ●

# **Editing Images**

### **Enlarging/Reducing Image**

My Files ⇒ Data Folder ⇒ Open a folder ⇒ Open a file ⇒ Menu (♠) → Image Size

- - If *Move* does not appear at the lower left, press Resize
  - Shortcut: From Data Folder, open an image and press Q Resize



Managing Files (Data Folder)

### To Center the Point to Enlarge

- Press 🔾 Move and use 🚱 to move the point to the center of Display.
- Image stops when you release the key or the limit is reached.

To Return to Resize Mode Press ( Resize

### Press and hold (5) to enlarge and (2) to reduce the size

To stop resizing, release the key (stops automatically when the limit is reached).

To soften images, press 🔊 Soft



- Portions outside Display are cut when saved.
- When Move is pressed after resizing, image returns to the original size.



Press (•)

Resized image is saved as a new entry.

### **Changing Image Size**

Resize images in Data Folder to send via Long Mail or set as Wallpapers.

- Alternatively, crop image for size. File size changes when images are resized.
- Images may not appear depending on the size.
- Change Image Size can be selected only for compatible files.

### Resize to Preset Size

My Files → Data Folder → Open a folder → Open a file → Menu (≥) Index Menu → Image Size → Change Image Size

### Select from Wallpaper to Alarm and press A rectangle appears on the image (except for **Wallpaper**.)

Wallpaper	W 240 x H 320 dots
Sha-mail Size	W 120 x H 160 dots
Power On/Off	W 120 x H 130 dots
Incoming Call	W 120 x H 38 dots
Alarm	W 120 x H 51 dots

To start over from selecting preset size, press 🦭 or 🔊 Size



### Selecting Display Area

### 1 Use ♦ to specify display area and press ●

• Display area may not be specified depending on image size.

### Enlarge or Reduce

1 Press 😕 Resize

Move appears in the left bottom corner.

Press to enlarge and to reduce the size, and press

**3** Press **●** 

Image is saved as a new entry.

### **Cropping Images**

Index Menu 

My Files 

Data Folder 

Open a folder 

Open a file 

Menu (♠)

Image Size 

Change Image Size

- 1 Select **□**Cut and press
- **2** Use � to move + to the upper left corner of the portion to crop and press ●
- **3** Use **3** to move + to the lower right corner of the portion

To cancel, press ② Back → Start over from Step 2



- To start over from selecting preset size, press or low size.
- To adjust display area/scale, see Step 2 in "Resize to Preset Size" above.



### **Marker Stamp**

Add text/stamps (arrows/plus sign) to images.

- Apply to JPEG and PNG images. Some images may not be used.
- Marker Stamp can be selected only for compatible files.

Index Menu (♠) → Data Folder → Open a folder → Open a file → Menu (♠) → Picture Effect

### 1 Select Marker Stamp and press

- To specify the color, select **Z** Font Color → Press → Select a combination → Press ●
- To not to outline text/stamp with the latter color, select **■**Border → Press Choose **■**Off → Press •



For PNG images, *Font Color* and *Border* cannot be selected (*White w/ Black* applies).

### 2 Entering Text

■ Select ■ Character and press ●

■ Enter text and press ●

- Enter up to 16 single-byte characters.
- Press ( ) to change the color and ( ) to toggle Border On and Off.

### **Adding Stamps**

### ■ Select a stamp and press ●

- To change stamp, press 🥥 Back
- Press 🕼 🗐 to change the color and 🔤 to toggle Border On and Off.
- **3** Use  $\bigcirc$  to move text or stamp to target location and press  $\bigcirc$
- - To add more text or stamp, select **□Marking** → Press Press ▶ Press ▶ Menu → Repeat Steps 2 4
  - To check the image, select **□Check Image** → Press •
  - To cancel editing, select **□ Cancel Edit** → Press Choose **□ Yes** → Press •
- 5 Select **■**Complete and press •
- 6 Choose **1** Yes and press Image is saved as a new entry.

### **Visual Effects**

Dress up images with preloaded visual effects.

- Apply to JPEG images including Burst Shot files.
- Use images between W 52 x H 52 and W 240 x H 320 dots. Images larger than W 240 x H 320 dots are automatically cropped and centered.
- Image Decoration or Burst Shot Effects can be selected only for compatible files.

Index Menu ► My Files ► Data Folder ► Open a folder ► Open a file ► Menu (🔊)

### 1 Select Picture Effect and press

To decorate Burst Shot images, select **■**Burst Shot Effects → Press **●** Skip ahead to Step 3



For Burst Shot files, decorations are added to all images. To decorate a single image, save it as an individual image first (see **P.9-11**).

**9** Select **□***Image Decoration* and press **⊙** 

9-14

Managing Files (Data Folder)

# 3 Select an effect and press

• Picture Effects:

Sepia	Renders image in sepia tones
Sparkling	Adds sparkling effect to bright portions of an image
Soap Bubbles	Superimposes bubbles over an image
Kaleidoscope	Renders an image as a kaleidoscopic image
Emboss	Renders images in black and white relief
Scrunch	Renders image as a pencil sketch
Aluminum Can	Superimposes image onto a 3D can image
Round Frame	Adds a round, opaque frosting to the edges of an image
Soft Frame	Adds a soft, opaque edged frame to image
Zigzag Frame	Adds a jagged edged frame around image

**4** Press ●

Image is saved as a new entry.



Managing Files (Data Folder)

Edited images may be too large to save or send via Long Mail.

### **Face Arrange**

Make smiley, angry or sad faces.

- Apply to JPEG images.
- Use portrait images.
- Face Arrange may not fit all images. Adjust position and size as required (see P.9-17).
- Face Arrange can be selected only for compatible files.

Index Menu	<ul> <li>My Files → Data Folder → Open a folder → Open a file → Menu (</li> <li>Picture Effect → Face Arrange</li> </ul>
ilidex Meliu	→ Picture Effect → Face Arrange

### Select a type and press

Mirror:	Copies right side of face onto	Slender	Stretches face to lengthen	
Right-half	left side	Sierider	appearance	
Mirror:	Copies left side of face onto	Crush Face	Shortens distance between	
Left-half	right side	Ciusiii ace	top and bottom of face	
Grin	Pulls eyes down & mouth up Dark Darkens skin tone		Darkens skin tone	
Mad	Pulls eyes up & mouth down	n Fair Brightens skin tone		
Sad	Pulls eyes & mouth down	Angry Mark	Adds a stress mark to face	

To start over, press 🥥 Back

**2** Press **●** Image is saved as a new entry.




When using Face Arrange, take care not to create images that may embarrass or offend others. Always obtain permission before photographing others.

### **Adjusting Face Arrange Position**


After Face Arrange (Step 1 on **P.9-16**), change the positions and sizes of targets to fit your images. Changes apply to the current image only.

- **1** Select **₹** Positioning and press **●** Face Arrange targets appear.
- Press Modify
  A rectangle appears with + in the upper left corner.

### 3 Set the face line

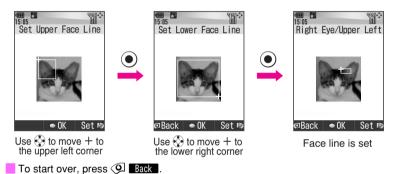

### 4 Set the eyes and then mouth in the same way

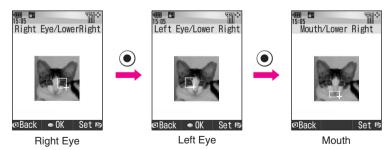

9-16 9-17

After Arranging Face..., all the targets appear.

- To start over from the face line, return to Step 2.
- To restore the original positions, press 🥥 Reset

6 Press ●

7 Choose **1** Yes and press •

Image is saved to Data Folder as a new entry with Face Arrange positions adjusted, and Face Arrange menu returns.

• Complete Face Arrange. Face Arrange is applied to the adjusted positions.

### **Additional Picture Effects**

- Frame, Burst Mode Frame, 90° turn, Change File Format and Moving Photo Frame can be selected only for compatible files.
- Edited images are saved as new entries.

Frame

Add Frame to JPEG images

Index Menu ► My Files → Data Folder → Open a folder → Open a file → Menu (🔊

### **Framing Standard Images**

Select ■ Picture Effect → Press ● Select ■ Frame → Press ● → Select ■ Prese Frames or ■ Original Frames → Press ● Select a frame → Press ● twice

- To check frames, select one ▶ Press 🥥 Show
- Press ② Back to return to Frame list.

### **Framing Burst Shot Images**

Select ■Burst Mode Frame → Press ● → Select ■Preset Frames or ■Original Frames → Press ● → Select a frame → Press ● twice

- To check frames, select one ▶ Press 🥥 Show
- Press ② Back to return to Frame list.

Tip

For Burst Shot files, frames are added to all images. To frame a single image, save it as an individual image first (see **P.9-11**).

90° turn

Rotate images

Index Menu

My Files ⇒ Data Folder ⇒ Open a folder ⇒ Open a file ⇒ Menu (≥)
 ⇒ Picture Effect

Select **■90° turn** → Press **●**) → Press **●**)

\*To rotate further, press Rotate. Each press rotates image by 90 degrees.

Noving Pho Frame Add Moving Photo Frame to JPEG images to create animations

Index Menu

► My Files → Data Folder → Open a folder → Open a file → Menu (🔊)

→ Picture Effect → Moving Photo Frame

### Select a frame ▶ Press ● twice

- To view file animation alone, select one ▶ Press ② Show
  - Press Back to return to Moving Photo Frame list.
- Animations are saved as *E-Animation* files with a .nva extension.



Moving Photo Frame size is W 120 X H 130 dots. For images larger than this size, Moving Photo Frames appear centered. Resize or crop images to fit frame (see **P.9-14**).

Change File Format

Convert image format to JPEG (■) or PNG (■)

Index Menu

My Files → Data Folder → Open a folder → Open a file → Menu (②)
 Change File Format

### Select a format **→** Press **⊙**

- Apply to images smaller than 120 x 160 dots.
- The original format cannot be selected.



Changing file format may affect image quality.

# **Combining Images**

Some images may not be combined and menu items may vary by file type.

### **Split Screen**

Combine up to four reduced images into one.

- Apply to JPEG images including Burst Shot files.
- Make sure there is enough free memory.
- Images are placed in the upper left, upper right, lower left and lower right in numerical order.



Split Image


Index Menu ► My Files ► Data Folder ► Open a folder

### Select an image for upper left and press

 To use a Burst Shot image for upper left, select any standard image temporarily and change it to a Burst Shot image later (see Step 10 on P.9-20).


Managing Files (Data Folder)

Press 🔊 Menu Select **E**Composite and press • Select Split Image 120 x 160 or Split Image 240 x 320 and press Enter name and press (•) • Enter up to 32 single-byte characters. Name is mandatory. Select a number and press (•) Data Folder opens. Select a folder and press Select an image and press (•) • Some images may not be selected. To change the image, press 🔊 Change. To start over from selecting a number, press Q Back Press (•) Repeat Steps 6 - 9 to add images To preview Split Image, press 🔊 Menu → Select Split Picture File Name[MyPhoto ■ Split Screen → Press • **■**05-09-20 15-17 ■ To return, press 🔊 Back 🕨 Press 🖘 **2**05-09-20\_15-18 To change images, select one → Press 🔊 Menu → Select **1**05-09-20 15-20 **□**Change → Press • Start over from Step 7 To delete images, select one → Press 🔊 Menu → Select **■** Delete → Press • Choose **■** Yes → Press • Press Q Set when finished To send Split Image via Long Mail, select **□ Attachment** → Press • → Perform from Step 2 on **O P.3-3** Select **Save** and press Image is saved as a new entry. Using a Single Image of Burst Shot File

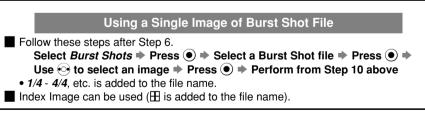

### **Panorama Images**

Combine two images into one.

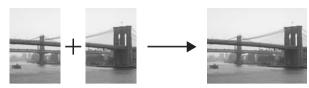

Select two images

Merge Panorama

### Panorama Image Effects:

Standard	Applicable to all kinds of shots	
Near View	Best suited for close-up shots with parallax correction	
Document	Use for images with text	

- Use JPEG images between W 48 x H 64 and W 120 x H 160 dots/W 160 x H 120 dots.
- Some portions may be cropped to adjust two images to the same size.
- The result may not be satisfactory if color tones are different between two images.



- Select an image and press (•)
- Press 🔊 Menu
  - For Burst Shot images, skip ahead to Step 4.
- Select **E**Composite and press •
- Select *Merge Panorama* and press (•) The first selected image appears on the left when combined.

- Merge Panorama can be selected only for compatible files.
- Select from **Standard** to **Document** and press •
- Select **□** and press Data Folder opens.
- Select another image and press

Managing Files (Data Folder)

### 9 Pres Comb • Use To

Press 

The selected image appears on the right. Two images are set.

If the image is too large or too small, select another.

To change the image press ② Change → Start over from Step 7

Combined image appears.

• Use 🚱 to scroll the image.

To switch the positions, press Replace.

10 Press

Image is saved as a new entry.

### **Combining Split Mail Images**

Use one of four Split Mail images to combine them all into one.

- Images may not be combined properly if file names of Split Mail images are changed, or the same file name exists.
- When combined, image quality may change.

Index Menu

My Files → Data Folder → Open a folder → Open a file → Menu (

Merge Panorama

Effect[Standard 15-17

**2**05-09-20 15-18

Composite

1 Select E Combine Split Mail and press

**2** Press ●

Image is saved as a new entry.

# **Melody Files**

Some functions may not be available and menu items may vary by file type.

### **Playback Volume**

Index Menu ► My Files ► Data Folder ► Melodies

1 Select a file and press 🔊 Menu

2 Select ■Playback Volume and press ●

**3** Use 🗘 to adjust level and press 💿

# **Using for Incoming Tone/Sound Effects**

Files cannot be used if the file name exceeds 24 single-byte characters.

Index Menu ► My Files → Data Folder → Melodies

1 Select a file and press 🔊 Menu

2 Select **□***Incoming Tone* or **□***Sound Effects* and press **⊙** 

• Incoming Tone or Sound Effects can be selected only for compatible files.

 $oldsymbol{3}$  Select an item and press  $oldsymbol{ullet}$ 

### **Editing Melodies & Adjusting Tone or Loudness**

Press ● → Select My Files → Press ● → Select ■ Data Folder → Press ● → Select Melodies → Press ● → Select a melody → Press ▶ Menu

■ To edit melodies, select **Edit** → Press • Perform from Step 3 on **P.8-14** 

■ To adjust tone, select **Tone** Press Perform Steps 10 - 13 on **P.8-12** - **8-13** 

■To adjust loudness, select **Z**Adjust Loudness Press Perform Steps 15 - 18 on **P.8-13** 

• Melody format files are saved as Original Ring Tone format after Edit.

# **Editing Files & Folders**

To change folder names, set folders to appear from Display Settings (see P.9-5).

Changing Folder/ File Name

Rename folders (except Folder 0) or files

Index Menu ► My Files ► Data Folder

### **Folder Names**

Select a folder → Press ● → Select from Folder 1 to Folder 9 → Press ▶ Menu → Select □ Folder Name → Press ● → Enter name → Press ●

### **File Names**

Select a folder → Press ● → Select a file → Press ▷ Menu → Select Change File Name → Press ● ▶ Enter name → Press ●



- Changing names does not affect titles of sound files.
- When you attach a file to Long Mail, single-byte katakana used in the name change to double-byte, and Pictographs are deleted.
- Some single-byte Symbols may not be used for file names.

Managing Files (Data Folder

Index Menu ► My Files ► Data Folder ► Open a folder

Select from Folder 1 to Folder 9 → Press 🔊 Menu → Select **■** Secret Mode → Press • **→** Enter Security Code → Choose **■** On or **□**Off **→** Press **⊙** 

• Enter Security Code to open folders set to On.



Secret Mode is not available for Camera folder (shortcut).

Copy/Move

Copy or move files to other folders within each Data Folder

Index Menu ► My Files ► Data Folder ► Open a folder

Select a file → Press 🔊 Menu → Select Copy or Move → Press 💿

**⇒** Select a destination folder **⇒** Press **⊙** 

Delete

Delete a single file or all files at once

Index Menu ► My Files → Data Folder

### **Deleting Single Files**

Select a folder → Press ● → Select a file → Press ▶ Menu → Select *Delete* → Press • Delete?\* appears → Choose • Yes → Press

\*If the file is used for Incoming Tone, Picture Call/Mail, Useful Diary, etc., File in Use Delete? appears.

### **Deleting All Files**

Select a folder → Press → Select Delete All → Press •

**▶** Enter Security Code **▶** Choose **■** Yes **▶** Press **●** 

Managing Files (Data Folder)

# **V-Applications**






This product is equipped with JBlend designed to accelerate the performance of Java Application.

Powered by JBlend<sup>™</sup> Copyright 1997-2005 Aplix Corporation.

All rights reserved. JBlend and JBlend-related brands are trademarks or registered trademarks of Aplix Corporation in Japan and other countries.

Java and Java-related brands are trademarks or registered trademarks of Sun Microsystems, Inc. in the United States and other countries.

# **MEMO**

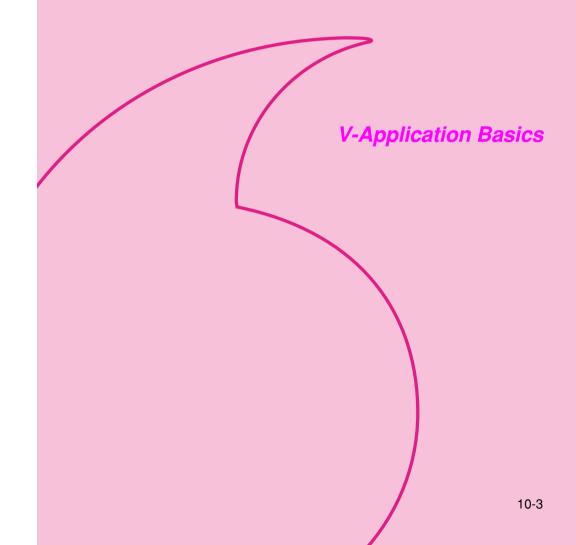

10

# **Getting Started**

### **Network V-Applications**

Network V-Applications require a network connection. Before downloading an application, check its properties for network connection information (see **P.10-5**).

- Before using a Network V-Application, a message appears indicating that a network connection is required. To skip this confirmation, see **P.11-4**.
- For connection fees, contact Vodafone Customer Center, General Information (see P.16-15).

# **Downloading V-Applications**

- User authentication may be required before download.
- Make sure signal is strong.
- **1** Open a Mobile Internet site offering V-Applications
- 2 Select a V-Application and press

After *V-Appli Received Data Analyzing...*, properties (see **P.10-5**) appear.

- When a V-Application is paused (𝒇), choose  **Yes** → Press •
- 3 Press 🔎 Yes

Download starts.

- Download may take time.
- To return to the site, press 🔊 No
- V-Application is automatically saved after download (see sample screen shot shown to the right)
  - When you download a new version of V-Application set for Standby, a confirmation appears and Standby V-Application may be canceled.
- 5 Press 🧐 Yes


V-Appli Library opens.

- To return to the site, press 💫 🔳 🗀 .
- Starting V-Applications: see P.10-5



# Properties

V-Application properties appear before download. Check information and start.

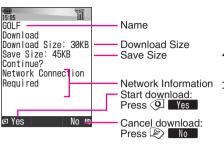

# **Starting V-Applications**


ndex Menu ► Vodafone live! → V-Appli

1 Select **□** V-Appli Library and press **●**When a V-Application is paused (�), choose **□** Yes **▶** Press **●** 

2 Select a V-Application and press

V-Application starts ( appears).

- For operations, refer to the source Mobile Internet site, etc.
- V-Applications are enlarged twice vertically and horizontally when activated.

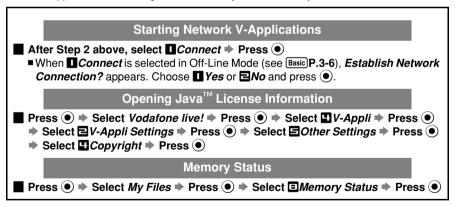

- When receiving calls, mail, etc., a running V-Application pauses. To set it to remain active, see "Incoming Settings" (P.12-2 "General Settings").
- While using a V-Application, press (x3) for 1+ seconds to activate or cancel Manner Mode.

# **Exit, Pause & Resume**

### **Exiting or Pausing V-Applications**

- 1 Press while using a V-Application
- **9** Exiting V-Application
  - Select End and press ●

V-Appli Library returns ( disappears).

### Pausing V-Application

■ Select ■ Pause and press ●

Handset returns to Standby (@ appears).


• V-Application resumes from where it was paused.

### **Resuming V-Applications**

- **1** While a V-Application is paused, press in Standby
  - Ø appears while a V-Application is paused.
- 2 Select ■Resume and press
  - To end the V-Application, select **⊒***End* **→** Press ●
  - To open Index Menu and keep the V-Application paused, select ■Cancel Press ●

### Opening V-Appli Library while V-Application is Paused

- When *V-Appli Paused Exit?* appears, choose *Yes* → Press
  - Paused V-Application ends.

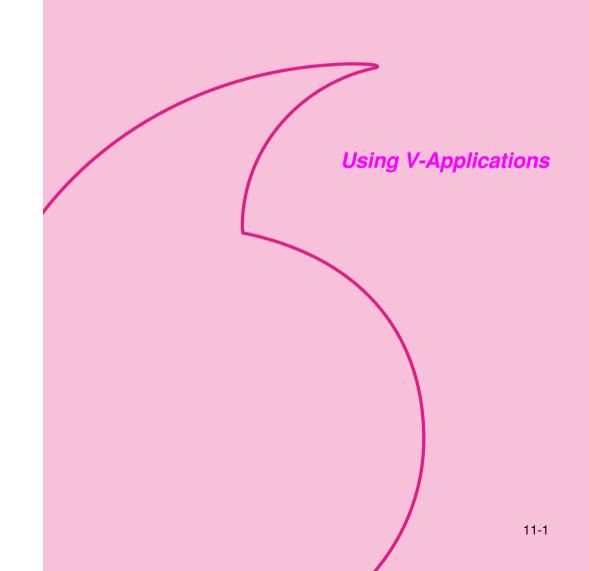

Using V-Applications

To return to V-Appli Library, press 🖲 or 🖸	٠.
--	----

Vendor	Name of the distributor (or supplier/manufacturer)	
Version	Version of the V-Application	
Size	Downloaded file size	
Network Connect	Network connection required or not	
StandbyDisp	Compatibility with Standby V-Application (see P.11-3)	

# **Deleting V-Applications**

Preloaded V-Applications can be deleted.

Index Menu ► Vodafone live! → V-Appli → V-Appli Library

- Select a V-Application and press P Menu
- Select Delete and press If the V-Application is set for Standby (see P.11-3), Cannot Delete Application set as Standby V-Appli appears and Menu returns. To proceed, cancel the setting and try again.
- Choose **T** Yes and press Security Code may be required.

# **Standby V-Application**

Set a V-Application to activate when handset enters Standby.

- Only one V-Application can be set at a time, and some do not run in Standby.
- This setting is not available when a V-Application is paused (3).
- Standby V-Appli is Off by default.

Index Menu ► Vodafone live! ► V-Appli ► V-Appli Settings

- Select **I**Standby V-Appli and press
  - For network connection confirmation, select **ENetwork Connection** Press Select **I** Connect (default; confirmation appears) or **E** Stay Off-line (disable confirmation) → Press ⊙
- Select **I** On/Off and press (•)
- Choose **On** and press
  - To cancel Standby V-Application, choose **□Off** → Press (•) (Omit the next steps.)
- Select a V-Application and press
- Press 🗟 to exit



- V-Applications may not start when an external device (hands free kit, etc.) is connected to handset.
- V-Application set for Standby that also responds to incoming communications may take priority over incoming settings set in Call Functions.

Using V-Applications

# **Network Connection Confirmation**

A confirmation appears before starting Network V-Applications, which can be disabled. Connect is set by default (confirmation appears).

Index Menu


► Vodafone live! → V-Appli → V-Appli Settings → Other Settings → Confirm Network

# Select **I**Connect and press •

To disable the confirmation, select **E**Stay Off-line → Press •



When a V-Application set for Standby starts automatically, confirmation does not appear regardless of this setting. Activate confirmation from *Network Connection* in Standby V-Appli menu (see **P.11-3**).

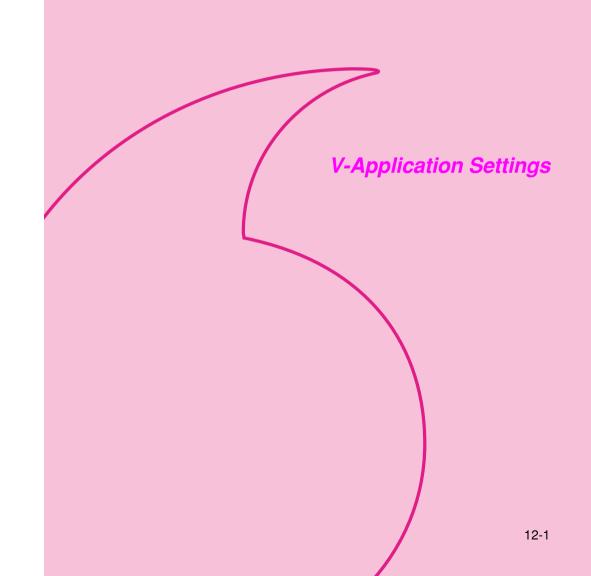

# **General Settings**

Select a handset response to incoming calls, etc. while a V-Application is active

Default Pause Application

ndex Menu ► Vodafone live! → V-Appli → V-Appli Settings → Incoming Settings

Select from **□***Incoming Call* to **□***Alarm* Press (•) Select a handset response 

◆ Press 

◆

Pause Application	V-Applications pause for incoming calls, mail, etc.
Show Message	A message appears for incoming calls, mail, etc. For example, <b>090392XXXX1</b> appears. Press (5) to answer the call or read the message.

• For V-Applications started from Standby, a message appears regardless of the setting.

Playback Volume Adjust the volume of V-Application sounds

Default Level 3

Vodafone live! → V-Appli → V-Appli Settings → Volume/Vibration → Playback Volume

Use ( ) to adjust volume ▶ Press •

• In Manner Mode, volume set in Manner Settings (see [Basic] P.3-5) applies.

Vibration

When activated, handset vibrates while compatible V-Applications play

Default On

Index Menu

Vodafone live! → V-Appli → V-Appli Settings → Volume/Vibration **♦** Vibration

Choose **□**On or **□**Off **→** Press **○** 

• In Manner Mode, vibration set in Manner Settings (see Basic P.3-5) applies.

Backlight

Select a Backlight status for V-Applications

Default Normal

Index Menu 
► Vodafone live! 
► V-Appli 
► V-Appli Settings 
► Backlight 
► On/Off

Select from **■** Always Active to **■** Normal **→** Press **●** 

Always Active	Backlight remains on while V-Applications are running
Always Inactive	Backlight does not turn on while V-Applications are running
Normal	Backlight turns on or off depending on Light Settings (see Basic P.7-7)

Backlight flashes while playing compatible V-Applications

Index Menu

Vodafone live! → V-Appli → V-Appli Settings → Backlight → Set to Flash

Choose **□**On or **□**Off **→** Press **⊙** 

# Resetting V-Appli & Center Address

Reset

Reset V-Application settings Refer to P.16-3 for the settings affected by Reset

Vodafone live! → V-Appli → V-Appli Settings → Other Settings → Reset V-Appli

Enter Security Code → Select ■ Reset → Press • Select ■ OK or **□**Cancel **→** Press **○** 

**Clear Memory** 

Restore V-Appli Library to default setting

Vodafone live! → V-Appli → V-Appli Settings → Other Settings → Reset V-Appli

Enter Security Code → Select □ Clear Memory → Press (•) → Select **■**OK or **■**Cancel **→** Press **●** 

• All V-Application settings will be canceled after Clear Memory.

**Center Address** 

Set V-Application Center Address

Default ¥7162

Index Menu

Vodafone live! → V-Appli → V-Appli Settings → Other Settings → Center Address


Enter Security Code → Enter Center Address → Press •



Do not change Center Address unless instructed to do so. Access to the service will be disabled.

# Station (Japanese Only)

# **MEMO**

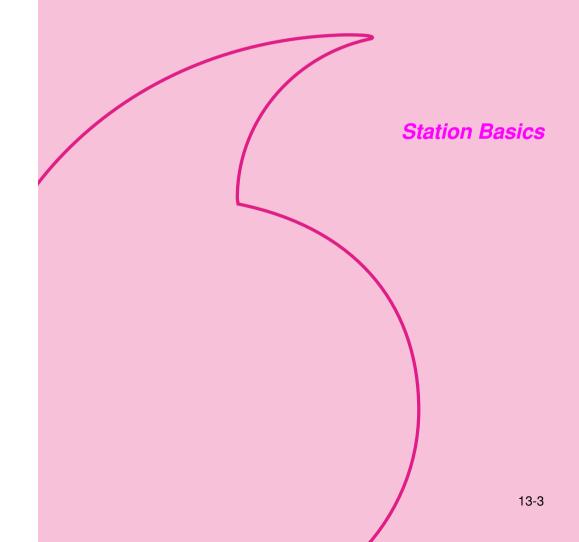

# **Getting Started**

Use Station to access a variety of area-specific local information, periodically updated automatically. An additional contract is required to use Station service.


#### **Station Content**

13

Station

#### **Station Info Content**

Sample Station information page: Use (5) or ( o to scroll information.

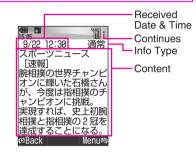

# **Subscription Status**

Request confirmation after subscribing to or unsubscribing from fee-based information.

To subscribe to fee-based information, contact Vodafone Customer Center, General Information (see P.16-15).

Index Menu ► Vodafone live! → Station

# Select **Confirm** Request and press (•)

Original subscription status appears.

- O: Subscribed
- X: Not subscribed
- Press (•)
- Choose **T** Yes and press (•) Confirm Request Accepted appears.
  - · Handset returns to Standby.

#### When Reply from Service Center Arrives

Delivery Notice appears.

To see the reply, press ● ▶ Select Station Notification ▶ Press ●

- Press (a) to exit. (Reply will be deleted.)
- Alternatively, in Station, open New Information to check the reply (see P.13-8 "In Standby").

# **Opening Main List**

Vodafone live! → Station

Select Main List and press

If Main List is empty, choose **■ Yes** Press •

Select a topic and press (•)

- Subscription is required for viewing fee-based information.
- Station Info Content: see P.13-4



If title list appears after Step 2, select a title and press ( ) to open information.

Press (a) to exit Station

#### **Updating Main List**

- Main List is updated automatically when:
  - Specified hours pass (see P.15-3)
  - Handset receives different area information
  - An update time for each topic in My List is reached
- To update Main List manually, follow these steps.

Press ● > Select Vodafone live! > Press ● > Select ■ Station > Press ●

- Select ■Update List ⇒ Press •
- Handset returns to Standby (\* appears in gray). When Main List is updated, Complete appears.
- Updates may not be received depending on signal strength.

# **My List**

# **Saving to My List**

Save topics to *My List* to receive periodic updates. The information is updated automatically.

- Save up to 20 topics.
- Urgent Information is saved automatically.

#### From Information

- 1 Open information
- Press Menu
- 3 Select Save and press
  - Topic can only be saved when Save appears.
- Select Save to My List and press
  - If the topic is already in My List, **Save to My List** does not appear.

#### From List

- 1 Select a topic
- 🔈 Press 🔊 Menu
  - If the topic is already in My List, Saved appears.
- 3 Select Save to My List and press
  - If the topic has more than one information item, handset saves as many items as possible.



Follow the same steps to save from title list within a topic.

# Moving Saved Topics

**Editing My List** 

Urgent Information cannot be moved.

Index Menu ► Vodafone live! → Station → My List

- Select a topic and press 🔊 Menu
- 2 Select Move and press •
- **3** Use ② to move cursor to target location and press ① The topic is moved.

#### **Deleting Topics**

- Urgent Information cannot be deleted.
- Deleting a topic automatically deletes all information saved under the topic.

Index Menu ► Vodafone live! → Station → My List

- 1 Select a topic and press 🔊 Menu
- **2** Select *Delete* and press Delete? appears.
  - Check the number of information items.
- **3** Choose **■** *Yes* and press

#### **Received Information**

#### **Unread Information**

**1** When a topic in My List is updated, animation plays and Delivery Notice appears

🕸 appears in red.

- 2 Press 💿
- Select a topic and press

Information appears (and is deleted from New Information).

- Saving Information: see P.14-2
- To save files within information to Data Folder, see **P.14-4** "To Data Folder."



**Delivery Notice** 

#### Ring Tone Volume

- While handset is ringing, press (5) (up) or (2) (down).
  - Ring Tone Level setting (see Basic P.8-2) changes accordingly.
  - Cancel Manner Mode (see Basic P.3-3) to adjust the level.

#### **Quick Silent**

Press to instantly mute incoming information tone for that information only.

#### In Standby

Press ● → Select Vodafone live! → Press ● → Select ■ Station → Press ●
Select ■ New Information → Press ● → Select a topic → Press ●



- Information may appear automatically without a notice.
- For Urgent Information, *Urgent Information* appears even when it arrives with other information.
- If information is received during an operation, Delivery Notice may not appear.
- Depending on information type, Ring Tone may not sound or other tone may sound.
- When Screen Savers is active (see P.15-3), new information appears automatically.

#### **Read Information**


- My List holds up to 100 information items.
- Urgent information is saved to My List.

Index Menu ► Vodafone live! ► Station

- **1** Select **■** My List and press 
  - Topics with unread information appear in red.
- Select a topic and press •
- 3 Select a title and press •



When there are 100 information items in My List and new information arrives, the oldest item is replaced. Save important information to Saved Information (see **P.14-2**). Even when there are fewer than 100 items, items may be deleted depending on the size or type of information.

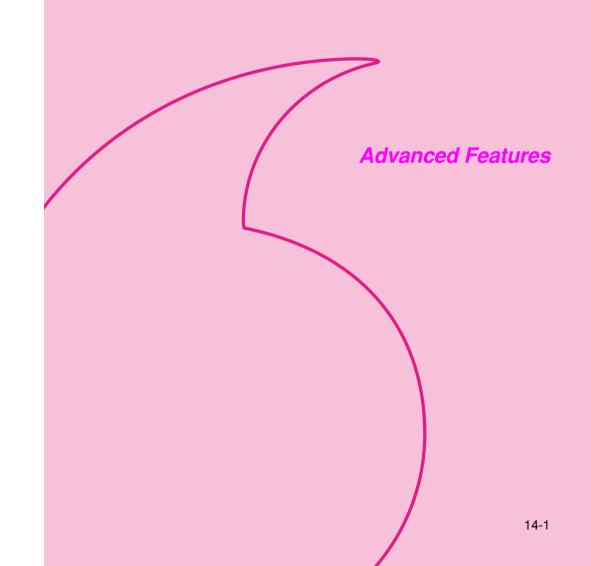

# **Saving Information**

#### **Saved Information**

Information in Main List is updated automatically (see P.13-5).

To protect information, save items to Saved Information.

- Approximately 375 KB is shared between Inbox (Mail), Storage Type (Web) and Saved Information (Station).
- Information in My List can be saved to Saved Information.
- Open information
- Press 🔊 Menu
  - Information can only be saved when Save appears.
- Select *Save* and press (•)
  - Information can only be saved when **Station Info Log** appears.
- Select Station Info Log and press (•)
  - When memory is full, delete entries (see below) and try again.



Information may not be saved if memory is low (used for Inbox, Storage Type or Saved Information).

# **Checking Information**

ndex Menu ► Vodafone live! → Station

- Select **Saved** Information and press (•)
  - Received date and time appear in [ ].
- Select a title and press (•)
  - To save files within information to Data Folder, see P.14-4 "To Data Folder,"

# **Deleting Selected Information**

ndex Menu ► Vodafone live! → Station → Saved Information

- Select a title and press 🔊 Menu
- Select *Delete* and press •
- Choose **I** Yes and press •

# **Deleting All Information**

■ Press • > Select Vodafone live! > Press • > Select ■ Station > Press • Select □ Saved Information → Press P Menu → Select □ Delete All → Press ● ▶ Enter Security Code ▶ Choose ■ Yes ▶ Press ●

# **Using Linked Info**

Use numbers, addresses or URLs (http://) to place calls, send messages or access Mobile Internet sites.

- Available only when number, address or URL is underlined with a dotted line.
- Words may be substituted for the numbers, addresses and URLs.
- Open information containing a phone number, mail address or URL
- Phone Numbers

■ Highlight a number and press (•)

2 Select Dial and press

The number is dialed.

#### Mail Addresses

Highlight an address and press

2 Select Send and press •

Select ■ Send Long Mail or ■ Send Sky Mail and press •

Creating & Sending a Message: see P.3-3

#### **URLs**

■ Highlight a URL and press (•)

Handset connects to the Network.

#### Saving to Phone Book

To save as new entry, open information and follow these steps.

Select a phone number or mail address → Press • → Select Save → Press • Select ■ New Entry ⇒ Press • See Basic P.5-4 - 5-5 for more about Phone **Book** 

To save as new item, open information and follow these steps.

Select a phone number or mail address → Press • Select Save → Press •

- Select New Item > Press Select an entry (see Basic P.5-13) > Press •
- See Basic P.5-4 5-5 for more about Phone Book

Advanced Features

# **Files within Information**

Use information in My List or Saved Information.

To Data Folder

Save images and other files within information to Data Folder

Open information and select a file → Press ● → Select ☐ To Data Folder → Press ● → Perform Step 4 on P.8-6

- Files can only be saved when T To Data Folder appears.
- Some files may not be saved to Data Folder.

Wallpaper & Display Image

Save images as Wallpaper or as Display Images

Open information and select an image → Press ● → Select Save As Wallpaper or To Display Images → Press ● → Perform Step 3-11 (Wallpaper) or 3-12 (Display Images) on P.8-6

- Images can only be used when Save As Wallpaper or To Display Images appears.
- Some images may be too large to use as Wallpaper or Display Images.
- Image files saved as Wallpaper or Display Images are not saved to Data Folder.

# **Weather Indicator**

# **Activating Weather Indicator**

The weather forecast for your current location (sent via the Center) appears as Weather Indicator in Standby.

- Subscription to fee-based information is required to use this service.
- Off (no Weather Indicator) is set by default.

Index Menu 

Vodafone live! 

Station 

Weather Indicator 

Standby Display

**1** Choose **□** On and press **●** 

To cancel, choose **□Off** Press

2 Press 

O

Weather Indicator appears when forecast is updated.



After you subscribe to fee-based information, *Weather Icon Set Now?* appears. Choose **1** *Yes* and press **()**, then follow onscreen prompt to see the indicators. *On* is set for **()** *Standby Display* automatically.

#### **Indicators & Updates**



Weather Indicator is updated when:

(1) Weather Indicator update time arrives

②A different area forecast is received

3 Main List update time arrives (see P.15-3)

Manually updated (see P.13-5)

# **Weather Forecast**

See a more detailed weather forecast.

Index Menu ► Vodafone live! → Station → Weather Indicator

1 Select Weather Forecast and press Information appears.

#### **Changing Weather Indicator Info Number**

■ Do not change Info Number unless instructed to do so.

Press ● → Select Vodafone live! → Press ● → Select ■ Station → Press ● → Select ■ Weather Indicator → Press ● → Select ■ Set Info Number → Press ● → Enter Security Code → Enter a new Info Number → Press ●

• 57451 is set by default.

# **Location Info**

# **Checking Location Info**

Index Menu ► Vodafone live! → Station

**1** Select **Z***Location Info* and press **●** 

Location Info Log opens.

When Location Info is protected (see P.14-6), enter Security Code.

To clear Location Info, press <a> ▶</a> Menu <a> ◆ Select **Delete All** <a> ◆ Press <a> ◆ Choose <a> ■ Yes <a> ◆ Press <a> ◆ Press <a> ◆ ● Press <a> ◆ ● Press <a> ◆ ● Press <a> ◆ ● Press <a> ◆ Press

Select Location Info and press

To delete Location Info, press இ Menu → Select **Delete** → Press ①

#### **Using Location Info**

- Send via One-Shot Mail (see P.3-16)
- Share on BBS (see P.6-6)
- Send via Web (see P.9-4)
- Copy and paste into messages (see below)

#### **Pasting into Messages**

■ In a text entry window, move cursor to the paste location and follow these steps.

Press ▶ Menu → Select Saved Info → Press ● → Select ■ Location Info → Press • twice → Use • to move cursor → Press •

Location Info is inserted to the left of the cursor.



Up to five locations, including the current one, are saved in Location Info Log. When this limit is exceeded, the oldest Location is replaced with the newest.

# **Protecting Location Info**

Restrict access to Location Info Log by making Security Code required to open Location Info.

No (Security Code not required) is set by default.


Index Menu ► Vodafone live! → Station → Location Info

Press 🔊 Menu

Select Set Security Code and press

Select **Need Setting** and press •

- Handset is set to ask for Security Code.
- To cancel, choose **■No** → Press ●

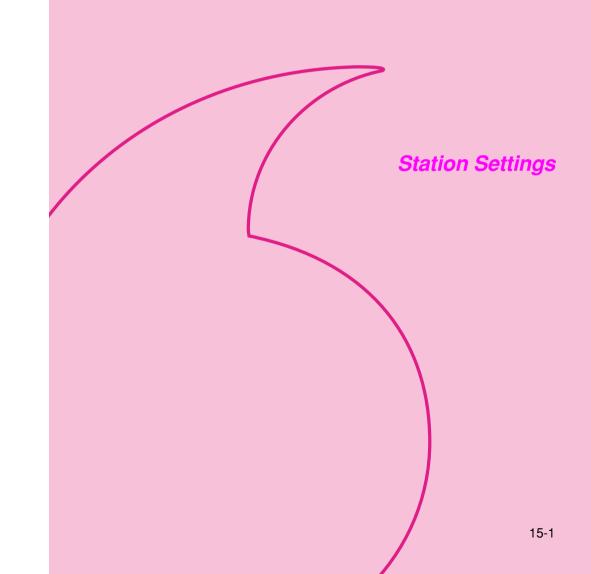

Station Settings

# **Sub Menu Settings**

Set Display Size

Change font and image size

Default Medium Font/100%

Open information and press <a> ▶</a> Select Set Display Size <a> ▶</a> Press ● Press ● Press ●



- Some images always appear at 100% depending on the original size.
- Select 100% if information does not appear properly at 200%.



Station Settings

Press to toggle size as follows: *Medium Font/200%* → *Small Font/100%* → Small Font/200%  $\rightarrow$  Medium Font/100%. ( $\square$  appears for 100% and  $\square$  for 200%.)

**Screen Scroll** 

Select from three scroll units

Open information and press <a> ▶</a> Select Screen Scroll <a> ▶</a> Press ● → Select from **□** Full Screen to **□** Line → Press ●

Save to

Copy text and save to Text Memo (see Basic P.4-18)

Open information and press ♠ Menu → Select Save → Press • → Select Save to Text Memo → Press ● Use ( ) to underline the first line of the text block to copy → Press • Use ( ) to specify text → Press ● Select a number ▶ Press ●

- To overwrite, choose  **Yes** → Press •
- Text can only be saved when Save to Text Memo appears.

Copy

Copy text

Open information and press <a> ▶</a> Select Copy <a> ▶</a> Press <a> ▶</a> Use () to underline the first line of the text block to copy ▶ Press ● Use (¹) to specify text ⇒ Press •

• Text can only be copied when Copy appears.

**Property** 

Open information details

Open information and press <a> ▶</a> Select *Property* <a> ▶</a> Press <a> ●</a>

- Press ( ) again to return to information.
- Check **Reception No.** The smaller the number, the later the information is received.

# **Basic Settings**

Set new information to automatically appear in Standby

Index Menu ▶ Vodafone live! ▶ Station ▶ Station Settings ▶ Screen Savers

#### Choose **□**On or **□**Off **→** Press **○**

- When there are multiple pages/information items, they appear in turn every five seconds. (As for images, only those in the latest information appear.)
- When Web Screen Savers is *On*, Station Screen Savers appears afterward.
- While information appears in Standby, press to open it.



- · Battery runs out faster with Screen Savers.
- While information appears in Standby, Wallpaper does not appear. When a V-Application is set for Standby, information does not appear in Standby.
- Full information may not appear in Standby.

Set an interval for Main List automatic update

Default 4 Times/Day

Index Menu ► Vodafone live! → Station → Station Settings → Update Frequency

# Select from **□**4 *Times/Day* to **□***Off* → Press **○**

• Main List is updated automatically when not updated by other means (see P.13-5) within the set interval.

Save Info Number

Save topics to My List directly using *Info Number* 

Index Menu ► Vodafone live! → Station → Station Settings → Save Info Number

# Enter Info Number → Press •

• When 20 topics are saved in My List, No Space Cannot Save appears. Delete topics (see **P.13-7**) and try again.

Image Link

Select whether to update Wallpaper automatically when the source image is updated

Image Link is available only when the information containing the image used as Wallpaper is saved to My List (see P.13-6).

Index Menu ▶ Vodafone live! → Station → Station Settings → Image Link

# Choose **□**On or **□**Off **→** Press **○**



- When Wallpaper is updated, the original image used as Wallpaper is deleted.
- Station Image Link and Web Image Link cannot be set *On* at the same time. When either is set on, the other one turns off automatically.
- Wallpaper is updated automatically only when the image is saved as Wallpaper directly from opened information, not from Data Folder.

Reset Station settings

Refer to P.16-3 for the settings affected by Reset

Index Menu ► Vodafone live! ► Station ► Station Settings ► Reset Station

Enter Security Code → Select ■ Reset → Press • Select ■ OK or **□**Cancel **→** Press **●** 

**Clear Memory** 

Delete all information in Station

Index Menu ► Vodafone live! ► Station ► Station Settings ► Reset Station

Enter Security Code → Select □ Clear Memory → Press • → Select **■** OK or **■** Cancel **→** Press **●** 



- All files in the following locations will be deleted:
- New Information ■ Main List
- Mv List\*
- Saved Information Location Info
- \*Urgent Information remains.
- When Clear Memory is performed, ongoing Main List update (see P.13-5) will

Center Address

Set Station Center Address

Default #7052

Index Menu ► Vodafone live! → Station → Station Settings → Center Address

Enter Security Code → Enter Center Address → Press ●



Do not change Center Address unless instructed to do so. Otherwise, access to the service will be disabled.

# **Appendix**

# **Reset Settings**

# **Mail Settings**

See P.6-7 for resetting Mail Settings.

2-Touch Mail		Add Address: all deleted, Save & Send Image: On				
Auto Send		On				
Security	PIN Setting	0000				
	PIN Filter	Off (all)				
	Reject List	Deleted				
	Address Filter	Off				
Auto Retrieve		Manual				
Mail Notice		Name				
Confirm Delive	ery	Off				
Set Priority		Normal				
Sender		Deleted				
<b>Custom Fixed</b>	Text	Deleted				
Sound Auto Pl	ay	Off				
Auto Delete Ol	d	Off				
List		Pattern 1				
Access	Server Address	Server Address: 5000, Sub Address: none				
Points	Center Address	1				
BBS		2				
Scroll Unit		Line				
Layout		List (all)				
Set Folders		Folder Name: all deleted, Secret Mode: Off (all)				
Display Size		Medium Font/100%				
One-Shot Mail	3	Recipient and message text: deleted Confirm Delivery and Send Location Info: Off				
Designate Fold	ier	Off				

<sup>&</sup>lt;sup>1</sup>Short Message: ₹7032, Data Access: ₹7132, Long Mail Line: ₹7042

<sup>&</sup>lt;sup>3</sup>When Side Key Settings (see Basic P.12-3) for Standby is *One-Shot Mail*, the setting automatically returns to *Off* after resetting Mail Settings.



Sky Melody Center Address returns to #1790.

# **Web Settings**

See P.9-5 for resetting Web settings.

Screen Savers	Off
Text Only	Acquire Image: On, Acquire BGM: On
Auto Retrieve	Auto Retrieve
Image Link	Off
Server Address	<b>¥</b> 7122
Location Info	On
Set Display Size	Medium Font/100%
Screen Scroll	Line

# **V-Application Settings**

See **P.12-3** for resetting V-Application settings.

Incoming Settings	Pause Application (all)
Playback Volume	Level 3
Vibration	On
Backlight	On/Off: Normal, Set to Flash: On
Center Address	<b>¥</b> 7162
Confirm Network	Connect

# **Station Settings**

See P.15-4 for resetting Station settings.

Screen Savers	Off
Update Frequency	4 Times/Day
Center Address	<b>¥</b> 7052
Image Link	Off
Weather Indicator	Off

<sup>&</sup>lt;sup>2</sup>Settings: Off, New Message: deleted (**掲示板データなし**), Location Info: deleted (no data)

# **Display Messages**

#### Mail

16

Appendix

Out-of-Range Cannot Send

Delivery Rejected

Cannot Send

Confirm

No response Connection interrupted

Connection Interrupted

Cannot connect to Network



Send failed due to weak signal.

Make sure signal is stable and try again.

The message was not delivered to the recipient.

Check the handset number and try again.

The Center is undergoing maintenance.

Wait and try again.

Unknown if the Center received the message.

Confirm delivery (see P.4-18).

Unknown if the Center received the message.

Wait and try again.

The Center did not receive the message.

Wait and try again.

Disconnected due to weak signal.

Choose Yes and press to reconnect.

- If recipient is using PIN Filter, enter the matching PIN and resend (see **P.3-10**).
- → If included, remove 184 or 186 from the recipient number and try again.

#### **Sha-mail Cannot be Sent**

Possible causes include the following. For details, contact Vodafone Customer Center, General Information (see P.16-15).

- Recipient does not subscribe to Super Mail or Long Mail.
- Recipient handset is not JPEG-compatible.
- Convert JPEG files to PNG files before sending to PNG-compatible handsets (see Basic) P.9-19).

#### When Handset Memory is Full

New messages cannot be delivered to handset. Undeliverable mail is saved at the Center for up to 30 days.

- Delete messages to free memory for new ones (see **P.4-10**). When memory is available, new messages are delivered automatically.
- Delete unprotected messages automatically to receive new ones (see P.4-11 "Auto Delete").
- Even if memory is not full, handset cannot receive new messages larger than remaining memory.

#### Web

Cannot connect to Network

No response

Connection

interrunted

**15:05 ■** 

Connection

Reconnect? I Yes

Interrupted

The Center did not respond.

Wait and try again.

Server Address is incorrect.

Correct Center Address and try again. See "Server Address" (P.9-5 "Reset & Changing Center Address).

You are out-of-range.

Try again where signal is stable.

The Center did not respond, or time limit passed.

Establish a connection within the time limit.

Disconnected due to weak signal.

◆ Choose ■ Yes and press ● to reconnect.



The message was not delivered to the recipient.

- The recipient may be using Address Filter for security.

16-5 16-4

# **V-Applications**



16

A V-Application is paused.

Close the application and try again.

GOLF
Download
Download Size: 30KB
Save Size: 45KB
Continue?
Network Connection
Required
Battery Low
Download May Fail

Download may fail due to low battery.

Charge battery beforehand.



Library memory is full.

Delete files/applications in File Cabinet (see Basic P.9-2) and try again.

No Space Cannot Save 100 V-Applications are already saved.

Delete applications (see P.11-2) and try again.

New Version Found Application will be Updated Continue Download? You are downloading a new version of the saved application.

Press ♥ Yes to continue downloading or press ♥ No to cancel.



ø Yes

V-Applications cannot be downloaded when the following messages appear:

- Improper Data Cannot Download Application
- Application Size too large Cannot download
- V-Appli already saved

No 🙉

**Station** 

Cannot connect to Network

Cannot Update

You tried to update Main List or Location Info out-of-range.

Try again where signal is stable.

Location Info cannot be received from the Center.

Try again.

Service unavailable in this area

You tried to update Main List or Location Info outside the Service Area.

Try again within the Service Area.

Pictograph Code 3

Pictographs in are animated.

Appendix

Open Pictograph Code mode and press 🔊 List. Use 😯 to select a Pictograph and press 🖲 to enter it.

# Pictograph Code 1

**Pictograph List** 

Code	Pictograph	Code	Pictograph	Code	Pictograph	Code	Pictograph	Code	Pictograph
01	•	19	Щ	37	(1)	55	ŝ.	73	٩
02		20	<u>f</u> ,	38	<b>(</b>	56		74	<u>`</u>
03	*	21	2	39		57		75	*
04	•	22	B	40		58	<b>8</b> 0	76	3
05		23	<u> </u>	41	$\bigcirc$	59		77	*
06		24	•	42	<b>(</b>	60	1/2	78	\$€ *
07		25	2	43	0	61		79	
08	Ö	26	£	44	<b>(</b>	62	5	80	
09		27	<b>₽</b> *	45	<b>B</b>	63	P	81	
10	9	28	4	46	•	64	ৰ্	82	<b>(3)</b>
11		29	<b>a</b> }\*	47	•	65	ď	83	<u>~</u>
12		30	*	48	<b>*</b>	66	Ø	84	<u></u>
13	Ð	31		49	<b>E</b>	67		85	۵۰
14	9	32	<u>ু</u>	50	<b>®</b>	68	T.	86	9
15	P	33	0	51	*	69	*	87	ⅎ
16	8	34	₩*	52	0	70	1	88	⊗
17	Æ	35	89	53		71	*	89	8
18	(1)	36	(1)	54		72	8	90	

# ■ Pictograph Code 2

Pictographs in are animated.

Code	Pictograph	Code	Pictograph	Code	Pictograph	Code	Pictograph	Code	Pictograph
01		19	<b>₽</b>	37	<b>₽</b>	55		73	89
02		20	Q	38	8	56	•	74	
03		21	~	39		57		75	2
04	Ð	22	₽-	40		58	3	76	& ≥
05	9	23	* *	41	E # 3	59	A.	77	BK
06	89	24	兴	42		60	,z <sup>z</sup>	78	<b>◎</b> *
07	9	25	Ø	43	黄	61	<b>F</b>	79	P
08	<b>(</b>	26	<b>₩</b> *	44	A	62	0	80	<b>B</b> BSS
09	0	27	4	45		63	ß	81	•
10	<b>Q</b>	28	•	46	WS	64	ğ	82	
11	<b>≅</b> *	29	<b>M</b>	47	<b>S</b>	65	<b>4</b> ))	83	=
12	<b>₩</b>	30		48	4	66	<b>₽</b>	84	ATM
13	Ø?	31	<b>L</b>	49	<b>T</b>	67	*	85	
14	<b>***</b>	32	(())	50	<b>₩</b>	68		86	24
15	9	33	9	51	777	69		87	<u></u>
16	*	34	A	52	- N	70	111	88	S)
17	K	35	222	53	₩.	71	જુ	89	-
18	ď	36	Ţ.	54	23	72	<u> </u>	90	<b>\$</b>

Code	Pictograph	Code	Pictograph	Code	Pictograph	Code	Pictograph	Code	Pictograph
01	ķ	19		37	0	55	K	73	***
02	<u>~</u>	20		38	得	56	¥	74	×
03	20	21	有	39	割	57	ĸ	75	t
04		22	無	40	Մ	58	$\triangleright$	76	TÎP
05	×	23	圓	41	ID	59	$\triangle$	77	ìĸ́
06		24	申	42	満	60	8	78	0
07	•	25		43	空	61	41	79	®
08	1/	26		44	指	62		80	$\bigcirc$
09	€	27	0	45	宮	63	3	81	OFF
10	Ę.	28	1	46	9	64	8	82	A
11	Tal	29	2	47	4	65	X	83	2
12	•	30	Ш	48	¢	66	69	84	•
13	•	31	4	49	G.	67	T	85	₩
14	•	32	5	50	<b>†</b>	68	MX	86	Ø <sub>3</sub>
15	<b>*</b>	33	6	51	1	69	Ω		
16	#	34	7	52	<b>→</b>	70	M		
17	44	35	B	53	+	71	Z		
18	NEW	36	9	54	×	72	٧S		

#### Pictograph Code 4

Pictographs in are animated.

Code	Pictograph	Code	Pictograph	Code	Pictograph	Code	Pictograph	Code	Pictograph
01		17	<b></b>	33		49	30	65	•
02	×.	18	7	34	⇔	50	0	66	(m)
03	88	19	≫	35	<b>a</b>	51	×	67	S.♥■
04	\$	20	₩	36	<b>1</b>	52	×	68	<b>Ø</b>
05	<b>@</b> g	21	₩	37	Q	53	*	69	
06	<b>*</b>	22	MD	38	再	54	?	70	Ó
07	奎	23		39	90	55	0	71	
80	d)	24	0	40	<b>®</b>	56	0:	72	
09	<b>~</b>	25	X.	41	99"	57		73	٠
10	4 <u>□</u> 5 *	26	e	42	•	58	₽	74	Ĵ
11	නි	27		43	<b>*</b>	59		75	#
12	Ď.	28	B	44	$\circ$	60	ø₽.	76	30
13	视	29	3	45	<b>*</b>	61		77	9
14	8	30	Ø	46	φ,	62	<b>(</b>		
15	0	31	)¢	47	*	63	7		
16	Q	32		48	<b>=</b> (b).	64	•		



- Pictographs do not appear in e-mail or on incompatible Vodafone handsets.
- Pictographs with \* appear with background animation in received messages when Mail Background (see Basic P.7-9) is On. (When more than one is included in a message, animation for first entered Pictograph appears.)

16-8

# 16

#### Pictograph Code 5

Pictographs in are animated.

Code	Pictograph	Code	Pictograph	Code	Pictograph	Code	Pictograph	Code	Pictograph
01	30.5	17	ÍaÌ	33	⊕¤	49	<b>=</b>	65	6
02	9,9	18	į,	34	609	50	<b></b>	66	7
03	ಕ್ಕರ	19	ř.š	35		51	-41	67	9
04	완	20	33	36	(0)	52		68	<b>a</b>
05	ુ	21	Ĵ	37	×	53		69	
06	7 <b>.</b> ₹	22	类	38	8	54	鲁	70	(ar≜
07	٠.٠	23	î,î	39	×	55	120	71	Ø
08		24	€,₽	40		56	<u> 22</u>	72	
09	ψŅ.	25	•	41	Αğ	57	Đ:	73	N. 7
10	(";)	26	72	42		58	6	74	B-mi
11	93	27	9	43	Õ	59		75	1
12		28	*	44	8	60	B	76	9
13	0.0	29		45	2	61	, A		
14	2 45	30	<b>\(\rightarrow\)</b>	46	1	62	9		
15	3	31	00	47		63			
16	ۇ <b>ۇ</b>	32	8	48		64	272		

# ■ Pictograph Code 6

Pictographs in are animated.

Code	Pictograph	Code	Pictograph	Code	Pictograph	Code	Pictograph	Code	Pictograph
01	E OVE	13		25	<b>(</b>	37	<b>##</b>	49	₩
02	<b>€</b>	14	1	26	Ø	38	3	50	A
03	1	15		27	0	39	<b>3</b>	51	B
04		16	洲	28		40		52	Æ
05		17		29		41	<b>(</b>	53	0
06	£\$£	18	1	30		42		54	r,
07		19	*2	31	á	43	13	55	TM
08		20	<b>3</b>	32	~્યું ∗	44	8	56	6
09	À	21	(i)	33	3	45	Z,	57	9
10	ů.	22	<b>(1)</b>	34	Æ	46	3	58	Ovodafone
11		23	6	35	8	47	4		
12		24	3	36	<b>3</b>	48	₩		



- Pictographs do not appear in e-mail or on incompatible Vodafone handsets.
- Pictographs with \*appear with background animation in received messages when Mail Background (see Basic P.7-9) is On. (When more than one is included in a message, animation for first entered Pictograph appears.)

# **Memory List**

Mail			
Sent	Approximately 120 KB		
Outbox	Approximately 100 KB		
Inbox	Approximately 375 KB*		

\*Shared with Storage Type (Web) and Saved Information (Station).

	Web		
Overwrite Type Up to 15 information items			
Storage Type	Approximately 375 KB*		
Work Type Information	Approximately 32 KB		
Bookmarks	Up to 30 links		
Internet	Up to 30 URLs		

\*Shared with Inbox (Mail) and Saved Information (Station).

Station			
Main List Up to 63 titles			
Saved Information	Approximately 375 KB*		
My List Up to 20 topics (100 information items)			
Location Info	Up to 5		

\*Shared with Inbox (Mail) and Storage Type (Web).

	V-Application	
V-Appli Library	Up to 8 MB (100 items)*	

<sup>\*</sup>Shared with File Cabinet (see Basic P.9-2).

# Index

A Attach 1/4 Size		Nu	mbers	
Attach 1/4 Size	2-Touc	h Mail		3-1
Acquire List			Α	
Backlight (V-Application)	Acquire Add Ad Addres Attach Attachr Attachr Attachr Attachr Auto De Auto De Auto Re	e List	ouch Mail) ing image jing sounc g)	5-1
Backlight (V-Application)				
Call       4-         Call Text Memo       3-         Cancel Delivery       4-1         Cc       3-         Center Address       6-7, 9-5, 12-3, 15-         chat group       4-1         Chat Mail Log       4-1         Clear Memory       9-5, 12-3, 15-         Clipboard       3-         Combine Split Mail       4-2         Confirm Delivery       4-18, 6-         Confirm Network       11-         Confirm Request       13-         Convert Sky Mail       3-	BBS Bookm Bookm Bookm Bookm	arksarks (acces arks (deleti arks (savin	ssing from	6- 8- I) 8- 8- 8-
Call Text Memo       3-         Cancel Delivery       4-1         Cc       3-         Center Address       6-7, 9-5, 12-3, 15-         chat group       4-1         Chat Mail Log       4-1         Clear Memory       9-5, 12-3, 15-         Clipboard       3-         Combine Split Mail       4-2         Confirm Delivery       4-18, 6-         Confirm Network       11-         Confirm Request       13-         Convert Sky Mail       3-			С	
	Call Te: Cancel Cc Center chat M: Clear M Clipboa Combir Confirn Confirn	xt Memo Delivery Address oup ail Log lemory ne Split Mai n Delivery n Network n Request	6-7, 9	
	Conver	t Sky Mail		3-

Copyright (V-Application)         10-5           Cursor         7-8           Custom Fixed Text         6-2
D
Data Access6-7
Delete All (mail messages)6-7
Delete All Mail (Server Mail)5-2
Delete all Mail (Unretrieved List)5-3
Delete Item
(Unretrieved List message)5-3
Delivery Report2-4
Dictionary files8-8
Display Images 4-21, 8-6, 14-4
F
· · · · · · · · · · · · · · · · · · ·
Favorites8-2
Favorites (canceling)8-3
Favorites (deleting entries)8-4
Favorites (opening information)8-3
Favorites (saving to)8-2 Fixed Text3-6
Folder Name4-14
Forward4-14
G
Greeting1-2, 3-17
I
Image Link9-4, 15-3
images (saving)8-5, 14-4
Inbox4-2
Inbox Auto Sort4-17
Incoming Mail4-4
Incoming Settings12-2
information content7-4, 13-4
Input Memory7-9
Internet7-7

<b>L</b>	
Layout (Mail)	4-14
Link Limiter	9-4
ink Limiter Code	
ocation Info	
ocation Info (Web)	
ong Mail	
Long Mail (retrieving)	
Long Mail Line	
Long Mail Notice	2-7
M	
Mail	2-1
Mail (checking messages)	
Mail (checking new messages)	
Mail (copying message text)	
Mail (creating & sending)	
Mail (deleting messages)	
Mail (disabling)	
Mail (editing messages)	
Mail (entering message text)	
Mail (entering recipient)	
Mail (entering subject)	
Mail (protecting messages)	
Mail (resetting)	
Mail (saving to Outbox)	
nail address	
(customizing handset address	) 1-4
Mail Box	4-2
Mail Box (changing List view)	4-23
Mail Box (contents) 2-5,	4-4, 4-13
Mail Notice	
Mail Request	5-2
Mail Templates	3-14
Main List	
Melody Format	3-8
Memory List	
Memory Status	
Vessage Contents	
Message Folder (deleting informat	
Message Folder (opening informat	-
Mobile Internet (accessing)	
More (Long Mail)	
Move to Folder	

Multi Selector	i
My List	
My List (checking information)	
My List (deleting information)	
My List (saving information)	
N	
Network V-Applications New Information Next (Unretrieved List)	13-7
0	
One-Shot Mail	3-16
Open Link	. 4-8
Option Settings	
Outbox4-2,	
Overwrite Type	
Р	
Pause Application	
Phone Book (saving to)	
Pictograph List	16-8
PIN	
PIN Filter	
PIN Setting	
Playback Volume (V-Application)	12-2
Polling 3-11	, 6-6
Privacy Level	3-11
Protect Message	. 4-9
R	
Reacquire	. 9-2
Recipient Type	
Reject List	
Reply to All	
Resend	
Reset6-7, 9-5, 12-3,	
Retrieve All (Server Mail)	
Retrieve all Mail (Unretrieved List)	
Return Mail	

3
Saved Information14-
Save & Send Image6-
Save As Wallpaper4-21, 8-6, 14-
Save Auto Send 3-1
Save Dictionary8-
Save Info Number15-
Save to Accumulate8-
Save to Text Memo 9-2, 15-
Saved Information (checking) 14-
Saved Information (deleting) 14-
Saved Information (saving) 14-
Screen Savers 9-3, 15-
Screen Scroll9-2, 15-
Scroll Unit4-
Secret Mode 4-1
Select Icon8-
Send Mail4-
Sender 6-
Sent 4-
Sent Auto Sort 4-1
Sent Mail3-
Server 3-
Server Address 3-6, 9-
Set Display Size 9-2, 15-
Set Info Number 14-
Set Priority 3-11, 6-
Set to Flash (V-Application)12-
Sha-mail Shoot3-
Short Message6-
Show Address 4-2
Show Message 12-
Side Key
Sky Mail1-2, 3-
Sky Melody1-2, 2-
SMAF (MA-2) Format 3-
SMAF (MA-3) Format 3-
Sound Auto Play 4-2
sound files (saving)8-
Space Town 8-
Standby Display14-
Standby V-Application11-
Station 13-
Station (disabling)1-

Station (resetting)       15-4         Storage Type       7-6, 8-2         Sub Address       3-6
Т
Text Only9-3 To Long Mail3-7
U
Unread Messages (Web)7-10 Update Frequency15-3 URL log (accessing from)7-7
V
V-Application       10-4         V-Application (deleting)       11-2         V-Application (downloading)       10-4         V-Application (exiting or pausing)       10-6         V-Application (resetting)       12-3         V-Application (resuming)       10-6         V-Application (starting)       10-5         Vibration (V-Application)       12-2         Vodafone live! (disabling)       1-5         Vodafone Web       7-6
W
Web       .7-4         Weather Forecast       .14-5         Weather Indicator       .14-4         Web (disabling)       .1-5         Web (resetting)       .9-5         Work Type information (Web)       .7-6

# **Customer Service**

If you have questions about Vodafone handsets or services, please call General Information. For repairs, please call Customer Assistance.

#### **Vodafone Customer Centers**

From a Vodafone handset, dial toll free at 157 for General Information or 113 for Customer Assistance

#### Call these numbers toll free from landlines

Subscription Area	Service Center	Phone Number
Hokkaido, Aomori, Akita, Iwate, Yamagata, Miyagi, Fukushima, Niigata, Tokyo, Kanagawa, Chiba,	General Information	<b>(</b> a) 0088-240-157
Saitama, Ibaraki, Tochigi, Gunma, Yamanashi, Nagano, Toyama, Ishikawa, Fukui	Customer Assistance	© 0088-240-113
	T T	
Aichi, Gifu, Mie, Shizuoka	General Information	© 0088-241-157
Aldii, diiu, iviie, Siizuoka	Customer Assistance	© 0088-241-113
Ocalica I has as 16 asta News Olivies Welson and	General Information	© 0088-242-157
Osaka, Hyogo, Kyoto, Nara, Shiga, Wakayama	Customer Assistance	© 0088-242-113
	1	
Himselian Olympia Verraniaki Tettari Okimana	General Information	© 0088-259-157
Hiroshima, Okayama, Yamaguchi, Tottori, Shimane	Customer Assistance	© 0088-259-113
	1	
Talaushima Kanaus Ehima Kashi	General Information	© 0088-247-157
Tokushima, Kagawa, Ehime, Kochi	Customer Assistance	© 0088-247-113
Fukuoka, Saga, Nagasaki, Oita, Kumamoto, Miyazaki,	General Information	<b>6</b> 0088-250-157
Kagoshima, Okinawa	Customer Assistance	© 0088-250-113

16-14 16-15

# V302SH Instruction Manual Vodafone live!

October 2005, First Edition Vodafone K.K.

For additional information, please visit a Vodafone shop.

Model: V302SH

**Manufacturer: SHARP Corporation** 



Please help the mobile industry maintain high environmental standards. Recycle your old handsets, batteries and charger units (all manufacturers and brands). Before you recycle, please remember these important points:

- •Handset, batteries and chargers submitted for recycling cannot be returned.
- •Always be sure to erase all data recorded on old handsets (Phone Book entries, call records, mail, etc.) before recycling.